


3 Place the Aluminum Rock Slider and fasten it using three 5/16" x 5" bolts with washers and nuts (Included). Use the spacers included in the package as it is shown on the image below. So the side plastic wont collapse.

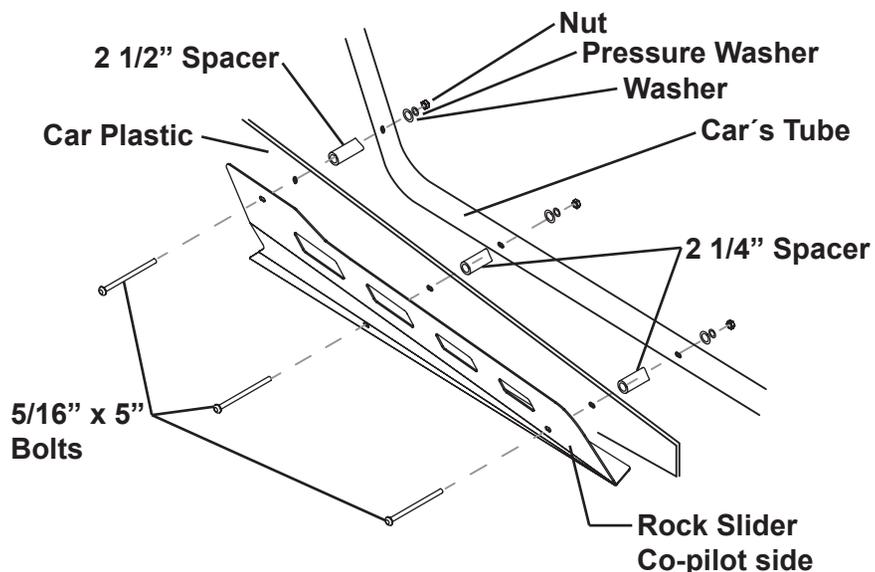

4 Tighten the bolts to finalize the installation.

For technical support , please write us to:
info@afxmotorsports.com or call us at:
Ph. 956-242-6521


HAVE FUN AND A SAFE RIDE!



www.afxmotorsports.com
4610 Modern Lane, Laredo, TX 78041 Ph. 956-242-6521

THIS PRODUCT IS FOR OFF ROAD USE ONLY

ALUMINUM ROCK SLIDERS INSTALLATION MANUAL

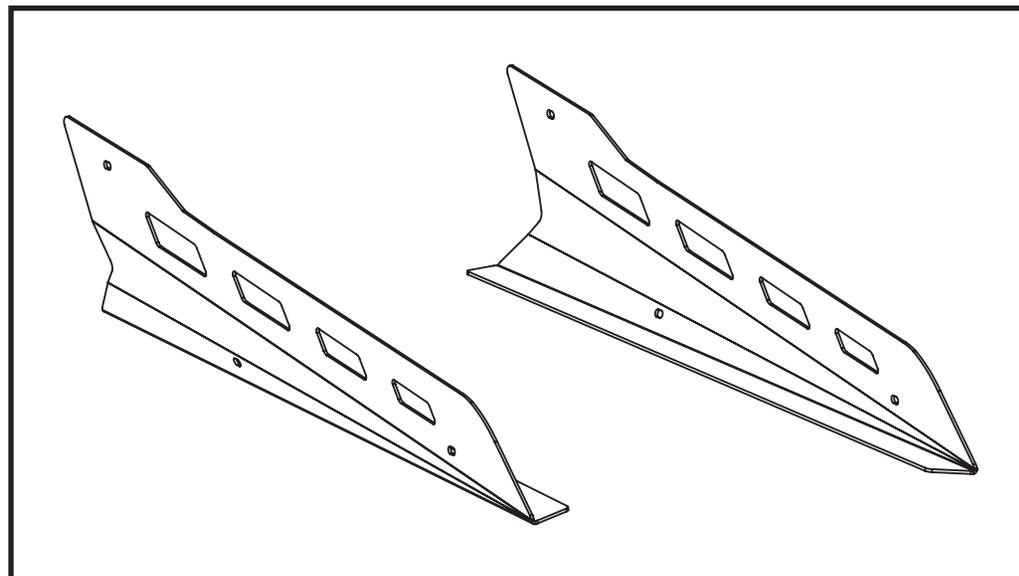

**CAN AM MAVERICK
X3 / XDS / XRS**

SKI 102-A



THANK YOU!

FOR PURCHASING AT AFX MOTORSPORTS




ALUMINUM ROCK SLIDERS FOR CAN AM X3 2 SEATER

HOW TO INSTALL

Pieces included:

■ Rock Slider
Pilot Side

■ Rock Slider
Copilot Side

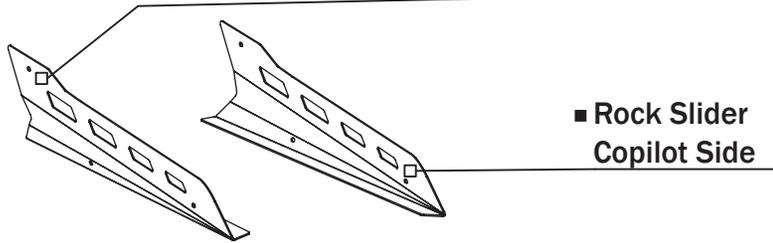

Hardware:

- (6x) 5/16" x 5" Bolts with washers and nuts.
- (4x) 2 1/4" Spacers.
- (2x) 2 1/2" Spacers.

Tools needed (Not Included):

- 7/16" Combination Wrench.


TIP: Install the Bolts Finger tight at first until all hardware has been installed.

Liability Statement

AFX Motorsports products are designed to best fit user's ATV/UTV under stock conditions. Adding, modifying, or fabricating any factory or aftermarket parts will void any warranty provided by AFX Motorsports and is not recommended. AFX Motorsports products could interfere with other aftermarket accessories. If user has aftermarket products on machine, contact AFX Motorsports to verify that they will work together. Although AFX Motorsports has thousands of satisfied customers, user should be aware that installing bumpers, rock sliders, spare tire carriers, etc. will change the ride of machine and may increase maintenance and part wear. Operating any off-road machine while, or after, consuming alcohol and/or drugs increases risk of bodily harm or death. No warranty or representation is made as to this product's ability to protect user from severe injury or death. AFX Motorsports urges operators and occupants to wear a helmet and appropriate riding gear at all times. By purchasing and installing AFX Motorsports products, user agrees that should damages occur, AFX Motorsports will not be held responsible for loss of time, use, labor fees, replacement parts, or freight charges. AFX Motorsports, nor any 3rd party, will not be held responsible for any direct, indirect, incidental, special, or consequential damages that result from any product purchased from AFX Motorsports. The total liability of seller to user for all damages, losses, and causes of action, if any, shall not exceed the total purchase price paid for the product that gave rise to the claim. AFX Motorsports will warranty only parts provided by AFX Motorsports. Any damage or problems with OEM housings, bearings, seals, or other manufacturers' products will not be covered by AFX Motorsports. AFX Motorsports parts and products are not warranted if item was not installed properly, misused, or modified.

1

Take the Rock Slider's plastic template included in package for marking 3 reference points on the side plastics of the vehicle. Place the template using as reference the rivets on the inferior part of the vehicle and fasten it using adhesive tape. Set the upper part of the template on the side of the vehicle and with a marker draw the guide marks.

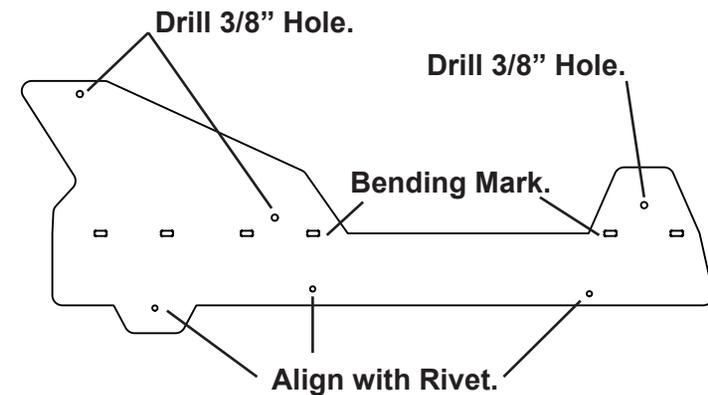

Rock Sliders Template.

2

Use the guide marks to drill on the side plastics using a 3/8" drill bit on the 3 marked points. This perforations lead to the original Rock Sliders holes on the tubes of the vehicle.