



EGR

INSTALLATION INSTRUCTIONS



Cleaning Notes

- Spray with a firm water spray to remove any loose dirt.
- Wash with water, detergent and a soft cloth or sponge.
- Do not use petroleum based solvents or abrasives.
- Do not drive for four hours after installation.
- Do not use automatic car wash.

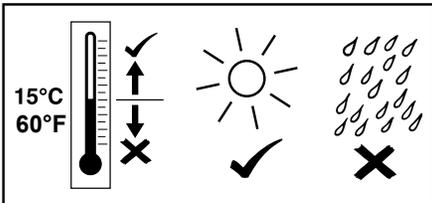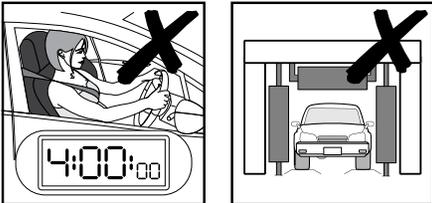

1x

2x

2

4x

3

2x

4

2x

5

2x

6

1x

7

Tools Required

1

Open the hood.

Thoroughly clean the top and underside of the hood and surrounding areas.

Wipe away any residue and allow to completely dry.

UNDERSIDE OF HOOD

For Technical Support/Warranty Information please call: 800-757-7075



INSTALLATION INSTRUCTIONS



2

Trial fit the hood protector centrally onto the hood.

With a non-permanent marker, note and mark the positions of the four acrylic tag slots in the hood protector onto the hood where they correspond to the holes in the hood.



Note and mark the positions of the two outer holes in the hood protector onto the hood.

Remove the hood protector.

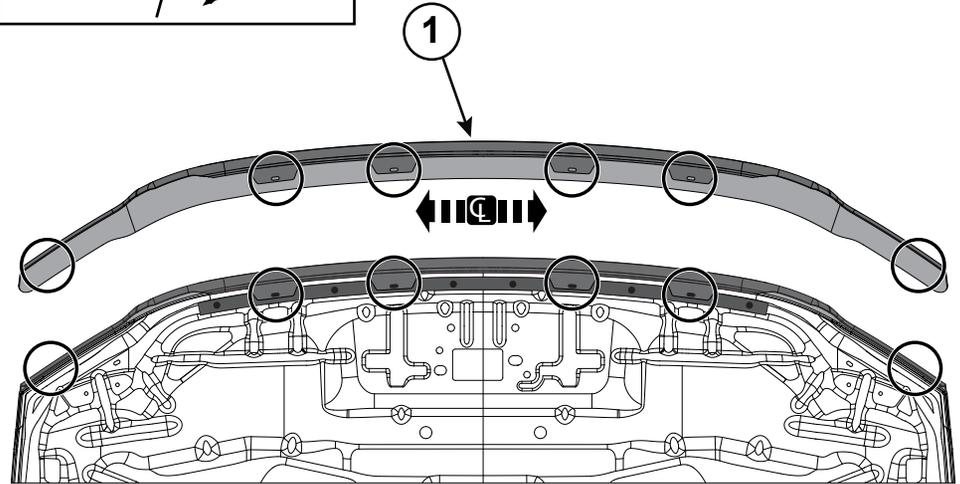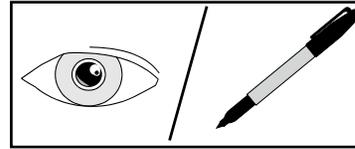

3

Using pliers, remove the four rubber trim retaining plugs and discard.

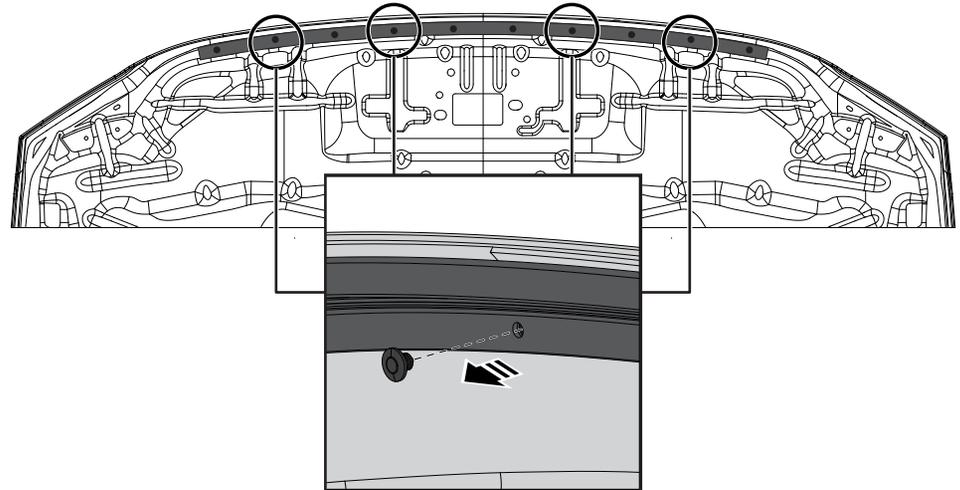





INSTALLATION INSTRUCTIONS

4

Inserts the four scrivenets provided into the rubber trim at previously removed locations.


IMPORTANT: Ensure that only female part of the scrivenets sits into the rubber trim.

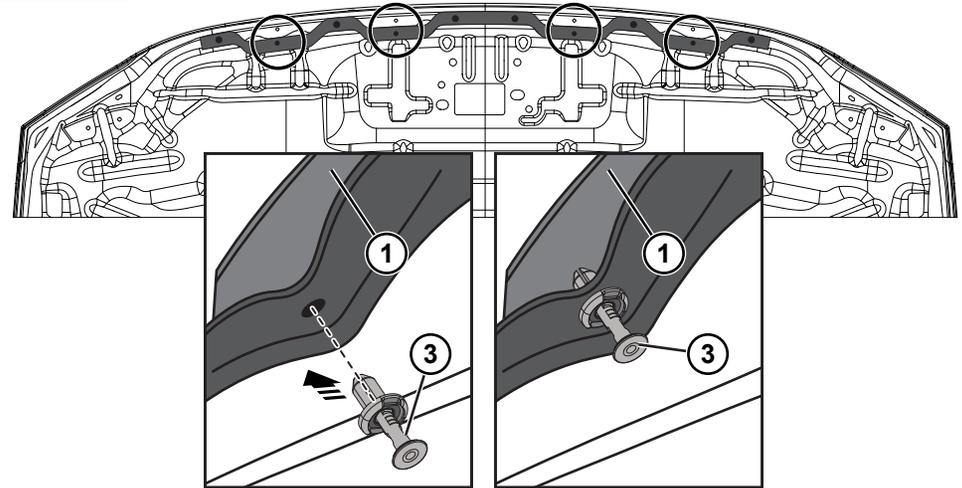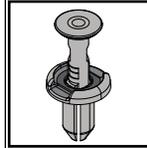

5

Install the hood protector centrally onto the hood ensuring that the holes in the hood align with the slots in the hood protector at the indicated locations.

Insert the four scrivenets into the hood holes through the slots in the hood protector and secure the hood protector to the hood by pushing the male part of the scrivenet.


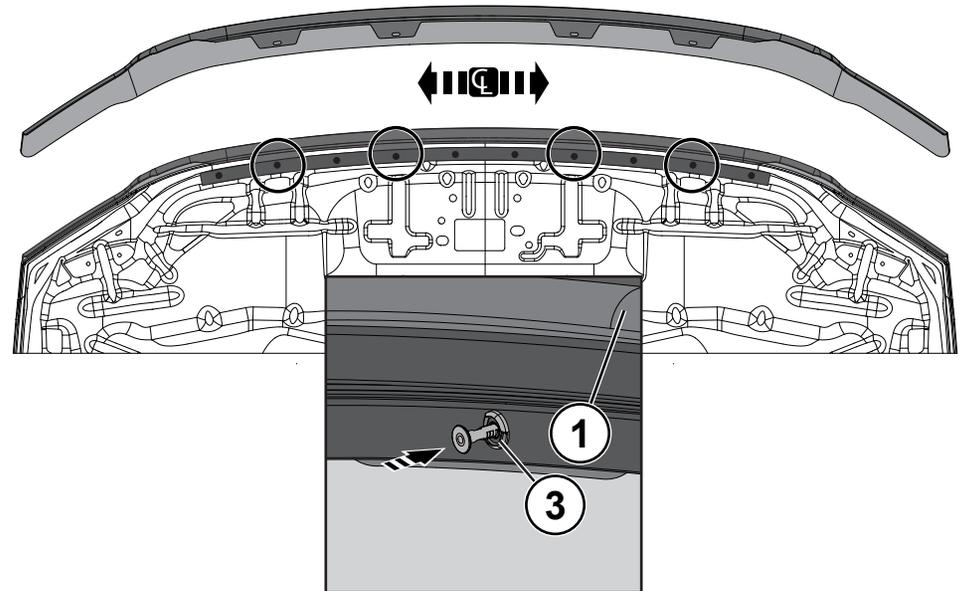


6

At the two outermost locations, clean the noted areas with alcohol prep pad provided.

Wipe off any residue with a dry clean cloth. Adhere the abrasive resistant tape strips over the hood lip.



Apply tape so approximately half of each strip is adhered to the topside and half is adhered to the underside of hood.

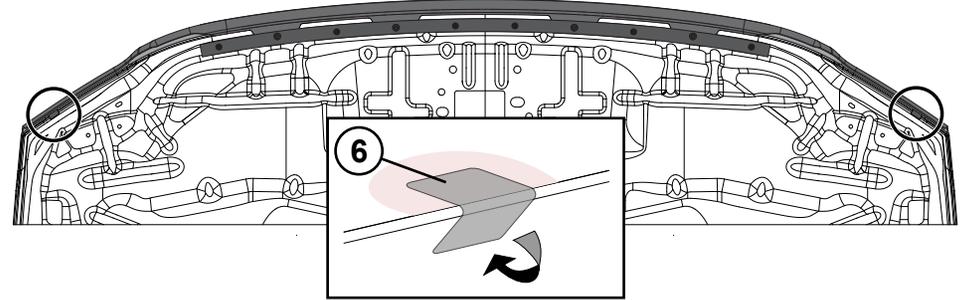

7

Slide the metal wing clips over the abrasive resistant tape strips on the hood edge at the two previously noted outer holes positions.

IMPORTANT: Ensure the clips rest over the abrasive resistant tape and do not come in contact with hood paint work. Failure to do this may result in permanent paint damage.

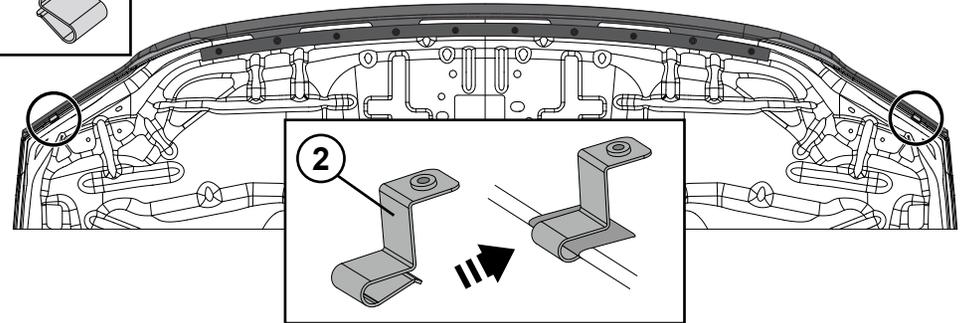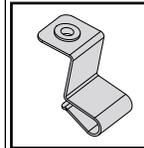

8

Secure hood protector to wing clips with small screws and washers provided.

Important: Do not overtighten screws.

TO REMOVE: Reverse the above procedures.

