


## POCKETED REAR WINDOW MOLLE PANELS

21+ 2 DOOR FORD BRONCO

MPBR-12

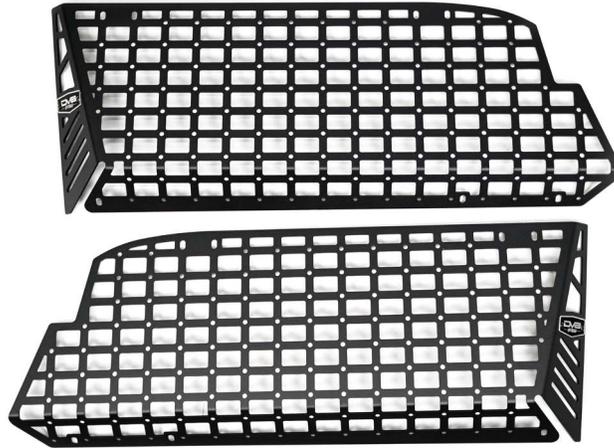

### TOOLS REQUIRED

- 5mm Allen Tool
- T50 Torx Tool (Provided)

### SKILL LEVEL

- Novice/Intermediate
- 1 (you) to 2 persons

Little skill level required, you can easily install it by yourself however, additional help will be useful

### TIME REQUIRED

- 1.5 Hours

Time to install this should only take about an hour and a half.

## WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION

Before you install this kit – Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner's manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.  
Customer Service: 855-680-9595

*DV8 Offroad is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.*

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle

- Always wear eye protection when operating power tools

*Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information*

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover



# INSTALLATION MANUAL

Begin by unpacking all items and inspecting for missing pieces or damage. If you have any concerns, please contact the company the product was purchased from. Extra hardware may be included with the product.

## HARDWARE INCLUDED

(20) M8x30mm Bolts

(20) M8 Split Washer

(20) M8 Flat Washers



**STEP 1 |** *Mounting with Hardtop installed (driver-side shown):* Begin by placing the provided foam pieces on to the roll bar mounting bracket as shown.

*If installing Molle panels without hardtop installed skip to step 13.*



# INSTALLATION MANUAL

**STEP 2** | Use the provided T50 torx tool remove the (3) hard top mounting bolts circled.



**STEP 3** | Using the factory hardtop hardware, molle panels rear base bracket.

Ensure that the bracket is adjusted toward the vehicles cargo area fully before securing the factory hardware with the provided T50 torx tool.



# INSTALLATION MANUAL

**STEP 4 |** Loosely mount the molle panels front base bracket behind the vehicles "B" pillar using the factory hardware.



**STEP 5 |** Using the provided M8 hardware and a #5 Allen tool, loosely secure the roll-bar mounting bracket as shown.



# INSTALLATION MANUAL

**STEP 6 |** Lay the molle panel against the mounting brackets as shown to align the all (7) mounting holes.


Before securing mounting brackets in place ensure that the molle panel does not hit/rub on factory interior trim panels with all (7) panel mounting holes aligned

With the (7) mounting holes align set the molle panel off to the side and secure the mounting brackets using an #5 Allen tool and the provided T50 Torx tool.



**STEP 7 |** Use the provided M8 hardware and an #5 Allen tool to secure the DV8 molle panel to the provided mounting brackets.

Complete step 1- 7 on the passenger side.

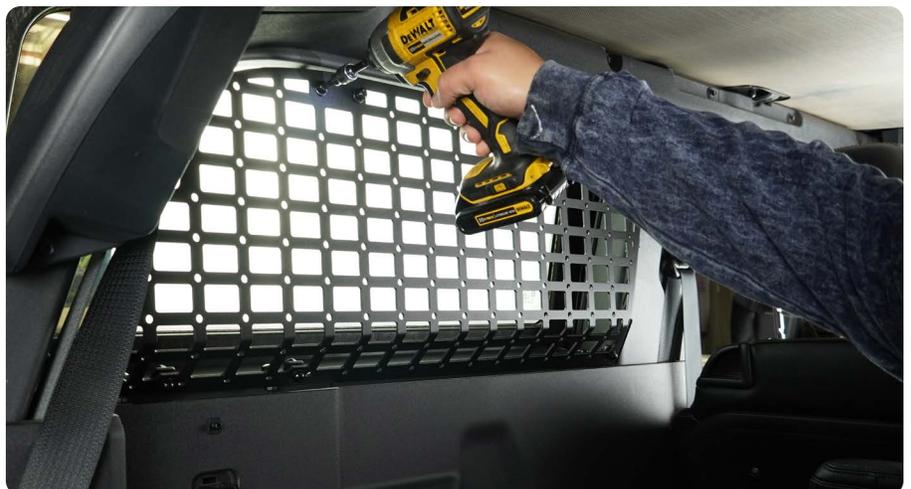

# INSTALLATION MANUAL

**STEP 8** | If you wish to remove your factory hard top and keep molle panels in place. First remove the (3) base bracket M8 Allen head bolts on each Molle panel using a #5 Allen tool.




**STEP 9** | Loosen but do not remove the (4) roll-bar brackets M8 Allen head bolts on each Molle panel using a #5 Allen tool.



**STEP 10** | With the roll-bar brackets hardware loosen and the base brackets hardware removed you can now reach under the DV8 molle panel to gain access to the hardtop mounting hardware to remove the factory hardtop.

Continue removal of the factory hardtop following your owners manual.

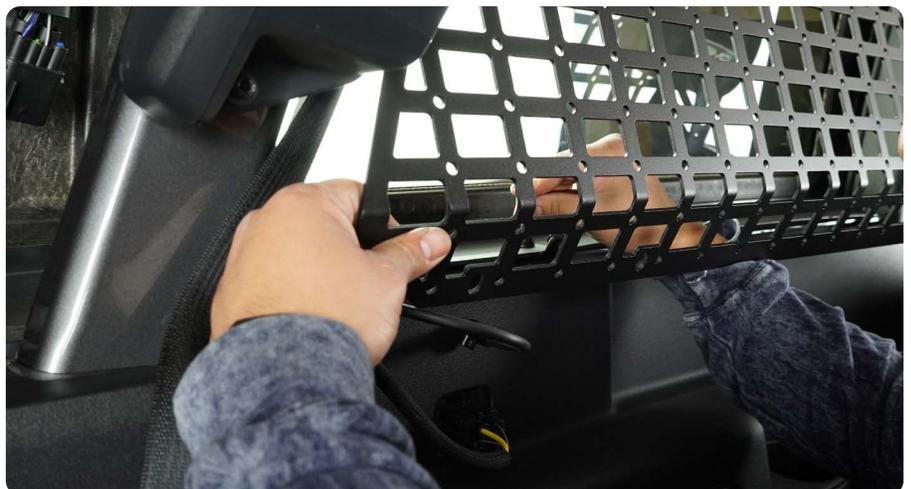


# INSTALLATION MANUAL

**STEP 11** | With the factory hardtop removed, reinstall the (2) base mounting brackets using the factory hardware ensuring the brackets align with the molle panel that was left in place.



**STEP 12** | Use the molle panels M8 allen head hardware and a #5 Allen tool to secure the panel back to the mounting bracket.

Complete steps 11&12 on the passenger side and double check that all hardware is secure.

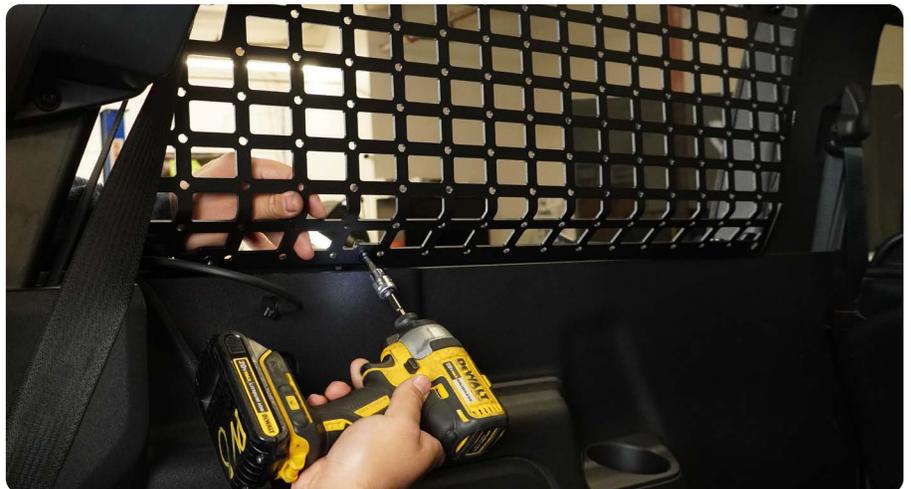

# INSTALLATION MANUAL

**STEP 13** | *Mounting with hardtop removed (passenger side shown):* Begin by loosely mounting the roll-bar mounting bracket as shown using the provided M8 hardware and a #5 Allen tool.



**STEP 14** | Mount the rear base bracket using the factory hardware ensuring the bracket is fully adjusted towards the vehicles trunk area.



**STEP 15** | Loosely mount the front base mounting bracket behind the vehicles "B" pillar using the factory hardware.



## INSTALLATION MANUAL

**STEP 16** | Loosely mount the molle panel to the mounting brackets using the provided M8 hardware. Adjust the mounting brackets as needed.

Before securing mounting brackets in place ensure that the molle panel does not hit/rub on factory interior trim panels.

Secure the factory hardtop hardware using a the provided T50 torx tool and molle panels M8 hardware using a #5 allen tool.



**STEP 17** | Complete steps 13-16 on the driver side.

Double check that all hardware is secure.

Congratulations, installation of the DV8 Two Door Pocketed Molle Panels is now complete.

