



# RUST BUSTER

**RB7417**

**Center Rear Body Mount**

**2002-2013 Chevy Avalanche 1500, 2000-2014 Chevy  
Suburban, 2000-2014 GMC Yukon XL, 2003-2013  
Escalade EXT, 2003-2014 Escalade ESV**



**VIDEO AVAILABLE**

### **REQUIRED TOOLS**

Jack Stands or Lift  
Mig Welder  
Paint/Primer  
Hand Grinder  
Cutting Wheel or Torch  
Welding Gloves  
Welding Hood/Shield  
Ear & Eye Protection  
Sockets & Ratchet  
Fire Extinguisher

### **KIT CONTAINS**

Center Rear Body Mount

### **QTY**

1



# RUST BUSTER

## RB7417 Center Rear Body Mount

2002-2013 Chevy Avalanche 1500, 2000-2014 Chevy Suburban, 2000-2014 GMC Yukon XL, 2003-2013 Escalade EXT, 2003-2014 Escalade ESV

### 1) PREPARING YOUR VEHICLE

Begin by disconnecting your battery prior to starting your installation.

Inspect your vehicle for leaking fuel lines, fuel tank and engine components. If you have fuel leaks repair all leaks prior to starting your installation. If your fuel tank is near your welding area **remove your tank prior to welding.**

Remove all combustible items above the work area such as seats, carpets, padding, etc.

**Keep all flammable materials away from the vehicle work area.**

### 2) PREPARING YOUR WORKSTATION

Keep a fire extinguisher close by in the case of fire and make sure you always have a designated "Fire Watch" to assist during the cutting or welding phases.

Abide by all apprenticed welding safety standards and practices.

Always use appropriate welding eye protection, ear protection, and work and fire safety gloves during the installation and within the work area.



### WARNING!

If you are unsure on how to perform the installation or how to operate any of the required tools listed above, it is **HIGHLY** advised that you enlist the work of a certified welder/installer.

Failure to follow proper safety precautions and instructions may result in serious injury. **The user assumes all liability when installing the product.**



# RUST BUSTER

**RB7417**

**Center Rear Body Mount**

**2002-2013 Chevy Avalanche 1500, 2000-2014 Chevy Suburban, 2000-2014 GMC Yukon XL, 2003-2013 Escalade EXT, 2003-2014 Escalade ESV**

### 3) **PREPARING FOR YOUR INSTALL**

Lift up your vehicle. (Optional)



Using a screw driver, push off the shown tabs and remove the break lines.




Using an 18mm socket, remove the body mount bolt and bushing.



### **CUT**

Cut off the factory center rear body mount.

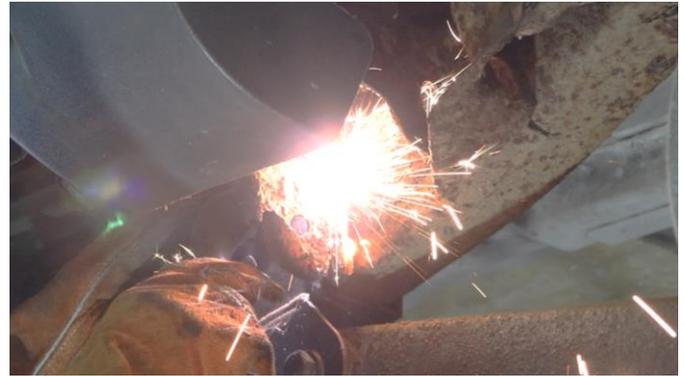

Grind down the frame free of rust and debris, revealing bare metal.





# RUST BUSTER

**RB7417**

**Center Rear Body Mount**

**2002-2013 Chevy Avalanche 1500, 2000-2014 Chevy Suburban, 2000-2014 GMC Yukon XL, 2003-2013 Escalade EXT, 2003-2014 Escalade ESV**

Spray the work area with a weldable primer to help prevent against rust development.



Remove any potential fire hazards from the work area. Following proper welding procedures, tack weld the part onto the frame before welding it on fully. Weld 100% around all edges.



**4) WELD**

Hold up your body mount to the frame and line it up where the original body mount was located.



**5) PAINT AND PROTECT**

Coat the part and work area with a primer or other rust inhibitor to help prevent or reduce the risk of rust formation.



**6) REINSTALL**

With an 18mm socket, reinstall your body mount bolt and bushing. Reinstall the break lines and tabs.