



Installation Guide for 19-22 Chevy Silverado PRO-Series LED Tail lights (FOR VEHICLE EQUIPPED WITH FACTORY LED TAIL LIGHTS)

ALPHAREX specializes in designing and producing superior and uniquely stylish aftermarket automotive performance lighting with unrival innovative technology. The following installation guide we take you through the installation of your new **ALPHAREX TAIL LIGHTS** for your 19-22 Chevy Silverado step by step.

DO NOT USE DIELECTRIC GREASE!



Table of Contents



PART I REMOVE TAIL LIGHTS

- **INSTALLATION TOOLS**
- **STEP 1.** Remove tail lights screws
- **STEP 2.** Unplug and remove the tail lights

PART II INSTALL ALPHAREX TAIL LIGHTS

- **STEP 1.** Plug the ALPHAREX Tail lights converters
- **STEP 2.** Install the tail lights
- **STEP 3.** Complete Installation

Disclaimer: This installation article is a tutorial guide. By reading this article, you agree it is for reference only and AlphaRex USA and its distributors make no guarantee on the finished results. Under no circumstances whatsoever shall AlphaRex USA nor its distributors be liable for any damage, misuse or personal injuries. If you do not fully understand the installation procedure, it is highly recommended that you seek help from professional mechanics to do the installation.

PART I REMOVE TAIL LIGHTS

INSTALLATION TOOLS

PREPARE THESE TOOLS FOR INSTALLATION



Torx
Screwdriver



Power Tool



Pliers



Pick Tool



1/4 Ratchet



1/4 Extension

T15
Star Torx



Socket

NOTE: Whenever using a power tool, please make sure do not overtighten the screws.

Whenever working on your vehicle always make sure your vehicle is parked with the ignition off.



STEP 1. REMOVE TAIL LIGHTS SCREWS

Open the trunk gate and start by removing the tail light's screws.



Remove the top and bottom T15 screws from each side of the tail lights.






PART II INSTALL ALPHAREX TAIL LIGHTS



STEP 1. PLUG THE ALPHAREX TAIL LIGHTS CONVERTERS

Because your vehicle is equipped with **FACTORY LED TAIL LIGHTS**, it is necessary to use the AlphaRex Tail lights converters SKU: ATL-CVT-CL19 (sold separately).
For purchase or more details please visit www.alpharexusa.com


DO NOT USE DIELECTRIC GREASE!

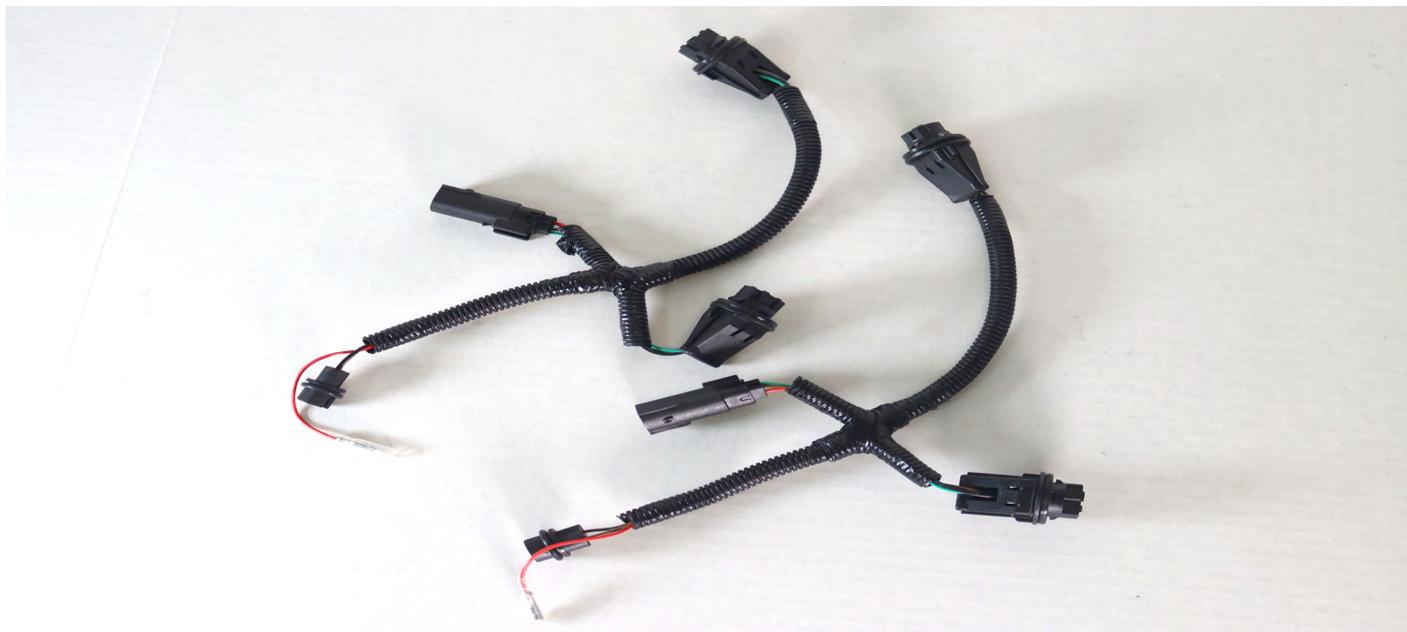

Prepare your new ALPHAREX Tail lights before installation.

Plug the converters to the new ALPHAREX LED Tail lights.

IMPORTANT: Push the connectors into the sockets firmly with clicks, so they are perfectly tighten and securely contacted. AGAIN, DO NOT USE DIELECTRIC GREASE!

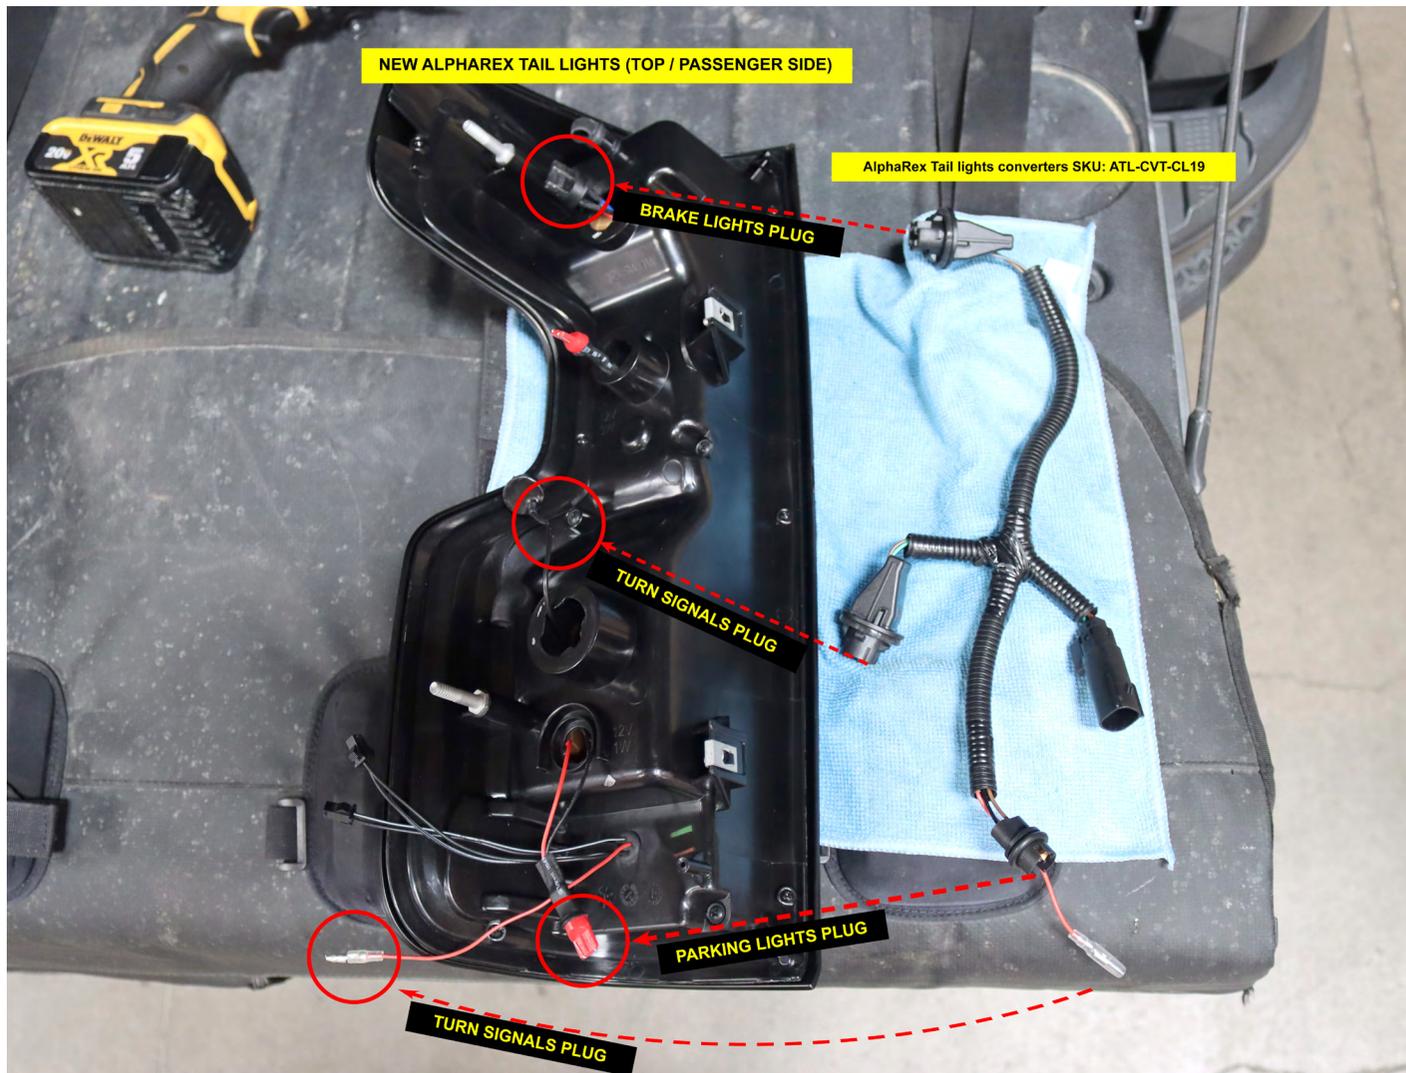

1) Plug the BRAKE LIGHTS connector

Twist and secure the socket tightly




2) Plug the TURN SIGNALS connector



Twist and secure the socket tightly



3) Plug the PARKING LIGHTS connector

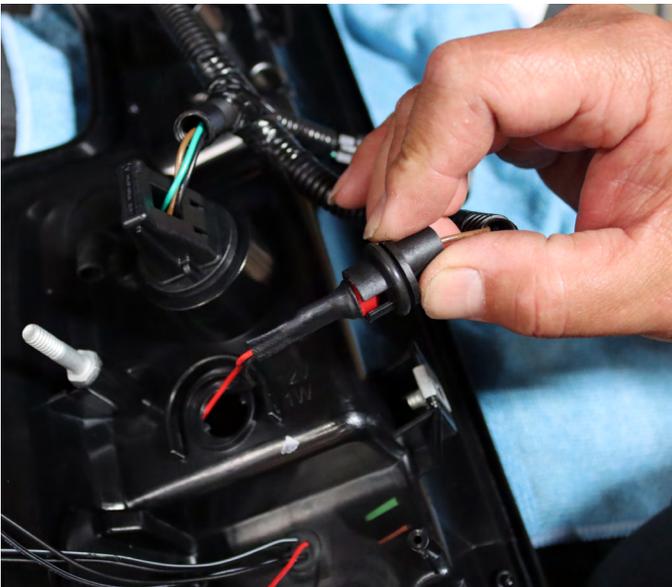

Twist and secure the socket tightly



4) Plug the TURN SIGNALS connector



**Please follow the same steps for the other side of the tail lights.
Make sure all the connections are plugged and tight. Also the caps are sealed.**



STEP 2. INSTALL THE TAIL LIGHTS


First, remove the reverse light bulb from the vehicle. Then, connect the socket to the reverse light connector from the new ALPHAREX tail light.



Lastly, plug the vehicle's tail light socket to new ALPHARE tail light connector.




Gently push the tail light into the mounting position and use T15 screwdriver to tighten the top and bottom screws.

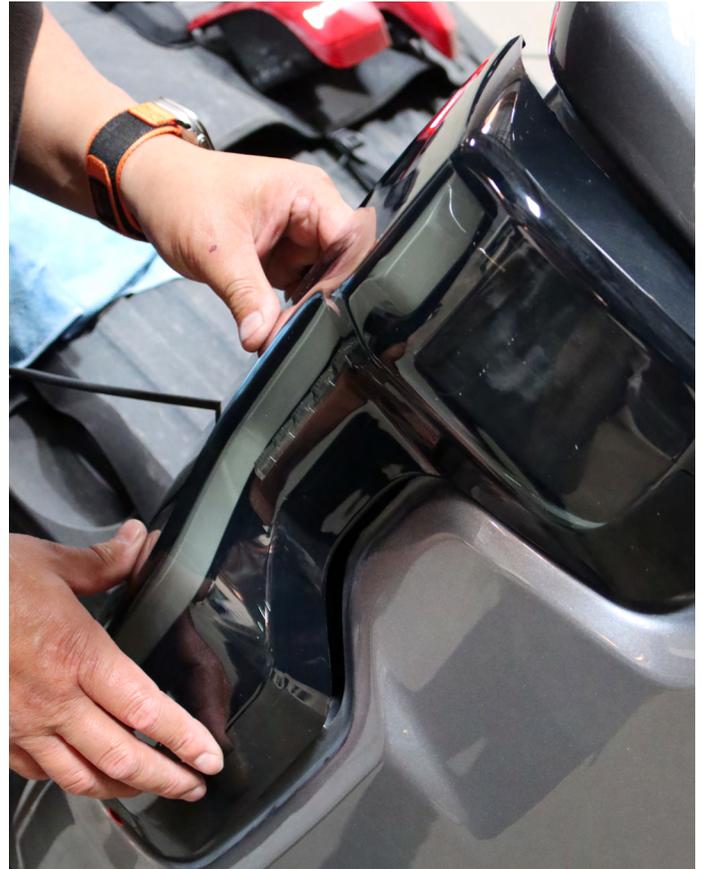

Please repeat the same process for the other side of the tail light.

NOTE: *Whenever using a power tool, please make sure do not overtighten the bolts.*

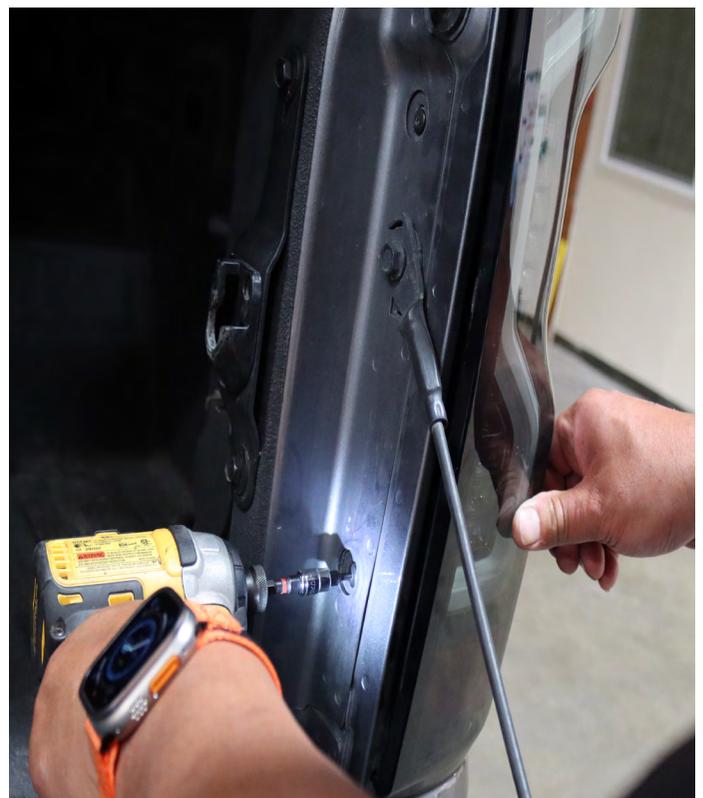

STEP 3. COMPLETE INSTALLATION

Congratulations!
you have completed the installation for ALPHAREX 19-22 Chevy Silverado
PRO-Series LED tail lights.

