


Installation Instructions for Windshield for Polaris Ranger 1000
TA010SHLDEC-PR1000

Warnings and Product Liability Disclaimer

This product is intended to be used as a cosmetic accessory under normal equipment operation and should not be depended upon or used as a safety device. Manufacturer assumes no liability for personal injury or equipment damage as the result of use or installation of this accessory. User assumes all risk. User should carefully read all instructions prior to installation.

- A. Carefully lay window panel on flat surface; peel back the protective sheeting around the outer edges only enough to reveal the pre-drilled mounting holes. Do not peel off the protective sheeting completely at this time! See picture 1.



Picture 1



Picture 2

- B. Insert supplied rubber grommets into the pre-drilled holes. See picture 2. Properly installed, the grommets' shoulder edges are uniform on both sides of the window. See picture 2A.




Picture 2A



Picture 3

- C. Place large black plastic sleeve spacers with flanged edge into each rubber grommet. Flange goes on the outside of the window. See picture 3. Locate the supplied side bulb seal. Starting at the top center of the window, roll the bulb seal completely around the window with the bulb on the opposite side from the flanged spacers. If needed, carefully tap on with a soft hammer. See picture 4.

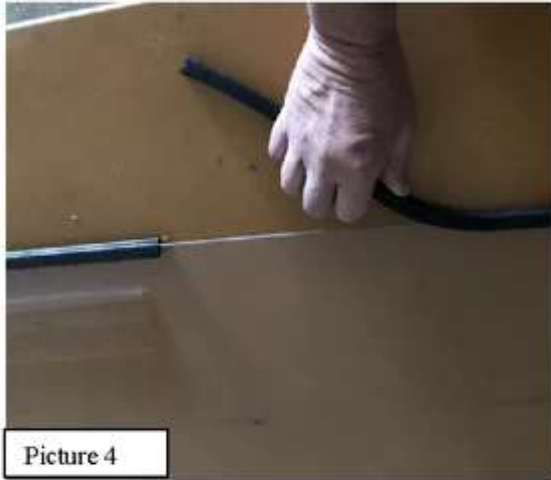

Picture 4



Picture 5

- D. Locate four supplied metal brackets and four supplied $\frac{1}{4}$ -20 x $\frac{3}{4}$ " stainless steel screws. Align one metal bracket with each of the grommets and spacers. Insert one $\frac{3}{4}$ " screw through each of the spacers into the metal brackets. Loosely tighten. See Picture 5. Once all screws are started, tighten enough to swell the rubber grommets beneath the spacers. **DO NOT OVERTIGHTEN!**
- E. See Picture 6 for final installation.



Picture 6