




TRAILARMOR.COM  
839 HWY 2 CORINTH, MS 38834  
(662) 233-5700

# Installation Instructions

## **Installation Instructions for Kawasaki Teryx KXR iMPact Front Boot Guards** **TA012ARMIMPFG-KAW-KRX**


### **Warnings and Product Liability Disclaimer**

This product is intended to be used as a cosmetic accessory under normal equipment operation and should not be depended upon or used as a safety device. Manufacturer assumes no liability for personal injury or equipment damage as the result of use or installation of this accessory. User assumes all risk. User should carefully read all instructions prior to installation. **PLEASE NOTE:** This product was designed, fit and tested on new vehicle specifications. Any damage, modifications or excessive wear to your vehicle may require modification to the product and/or your vehicle to ensure proper fitment.

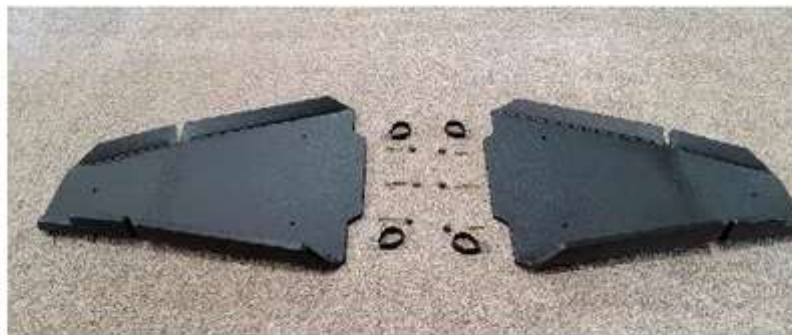

### **For Front Guards:**

- A. Before starting the installation, remove tires and wheels and support with safety stands.
- B. Locate the passenger side a-arm guard (KRX-PF). Also, locate one supplied  $\frac{1}{4}$ -20 x 1-3/4" flat head socket cap screw and one supplied  $\frac{1}{4}$ -20 nylock nut. Holding the guard into position, insert the 1-3/4" cap screw through the outer pre-drilled hole of the guard, through the factory a-arm brace, and secure with the  $\frac{1}{4}$ -20 nylock nut. See Picture 1. Loosely tighten.

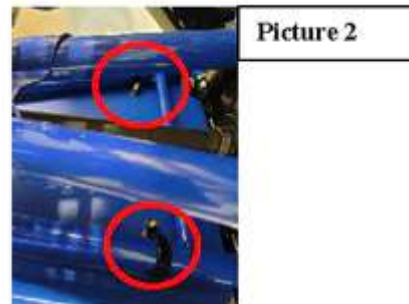

- C. Locate two supplied  $\frac{1}{4}$ -20 x 1-1/4" flat head socket cap screws, two supplied  $\frac{1}{4}$ -20 nylock nuts, and two supplied 1-1/4" P-clamp. Place the P-clamp around the A-Arm and align the P-clamp with the predrilled holes in the A-arm guard. Insert one 1-1/4" cap screw through each of the pre-drilled holes of the guard, through the hole in the P-clamp, and secure with the nylock nut. See Picture 2. Loosely tighten.



TRAILARMOR.COM  
839 HWY 2 CORINTH, MS 38834  
(662) 233-5700

# *Installation Instructions*

- D. Starting with the single outer cap screw, tighten all fasteners securely. Repeat for the driver side. Reinstall the wheels and tires. See Picture 3 for final install.



Picture 3

Enjoy! Any questions, contact Trail Armor at 662-233-5700 or [www.trailarmor.com](http://www.trailarmor.com).