


Trail ARMOR
Installation Instructions for Polaris Ranger RzR4 Center Skids
TA012SKIDCENTER-RZR4


Warnings and Product Liability Disclaimer

This product is intended to be used as a cosmetic accessory under normal equipment operation and should not be depended upon or used as a safety device. Manufacturer assumes no liability for personal injury or equipment damage as the result of use or installation of this accessory. User assumes all risk. User should carefully read all instructions prior to installation.


- A. Remove the OEM skid plated front and rear sections. Remove center retainer strip. Discard. Retain all removed washers as they will be reused.
- B. Locate the unused two factory drilled holes in the rear angled cross member. Using one of the removed OEM thread cutting screws, chase each of the pre-drilled holes by installing and removing the thread cutting screws.
- C. Clean the frame cross members and angled frame rails (front and rear) with windex-type cleaner or rubbing alcohol to remove any oil, grease or dirt. This prepares your surface for step D.
- D. Locate the supplied joint spacer strips and apply the supplied two-sided mounting tape to one side of the spacer strips. See Picture 1. The supplied roll of mounting tape should be cut in approximately 3" pieces.

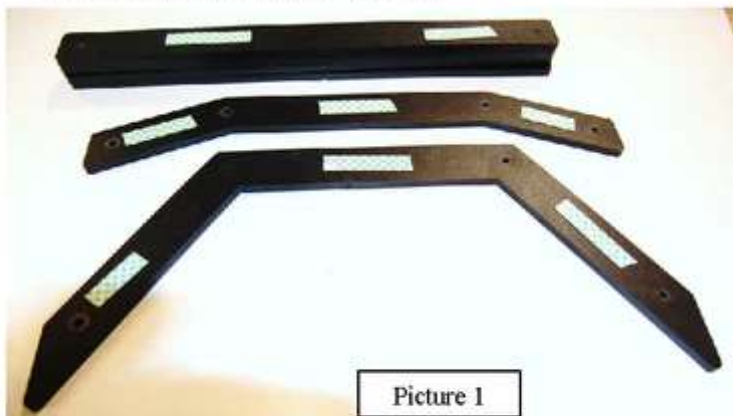

- E. Starting at the rear of the vehicle, peel the mounting tape off the first spacer strip and align the holes in the spacer with the factory holes in the frame. Lightly affix spacer strip to frame and install supplied screws through spacer strip. See Picture 4. Ensure alignment with factory holes in frame. Once aligned, firmly press spacer strip into place. Remove alignment screws and repeat for each spacer on the cross members. See Picture 3.

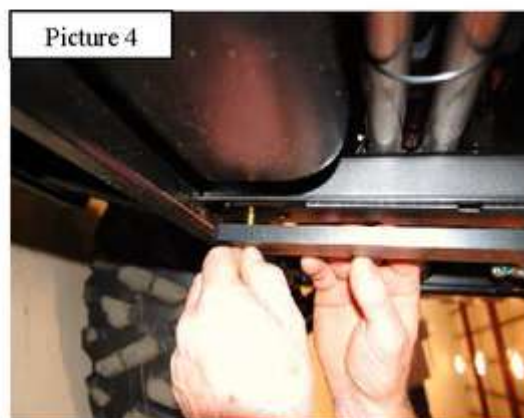

- F. With all spacer strips securely in place, locate Panel C of your Trail Armor RZR4 Center Skid Set. Loosely start the screw, washer and supplied T-nut to the rear of Panel C. See Picture 5. Carefully work the T-nuts into the two rear holes in the vehicle's rear metal pan. See Picture 4. With the rear of Panel C loosely installed, start the front center screw and washer into Panel C. Align and start all washers and screws in Panel C. Loosely tighten Panel C to allow the alignment of other panels.
- A. Loosely install Panels B and A using the supplied washers and screws. In the front two holes of Panel A, secure panel using the supplied 3/8-16 x 1" thread cutting bolts and washers. *Late year models have a pressed recessed hole. Earlier models have drilled holes and will require the bolts to be secured from the top side with the supplied 3/8" T-nuts.* See picture below.
- B. With all the fasteners started, tighten all securely working from the rear to the front. As you tighten your fasteners, make sure all the lap joints are aligned and fit tightly.

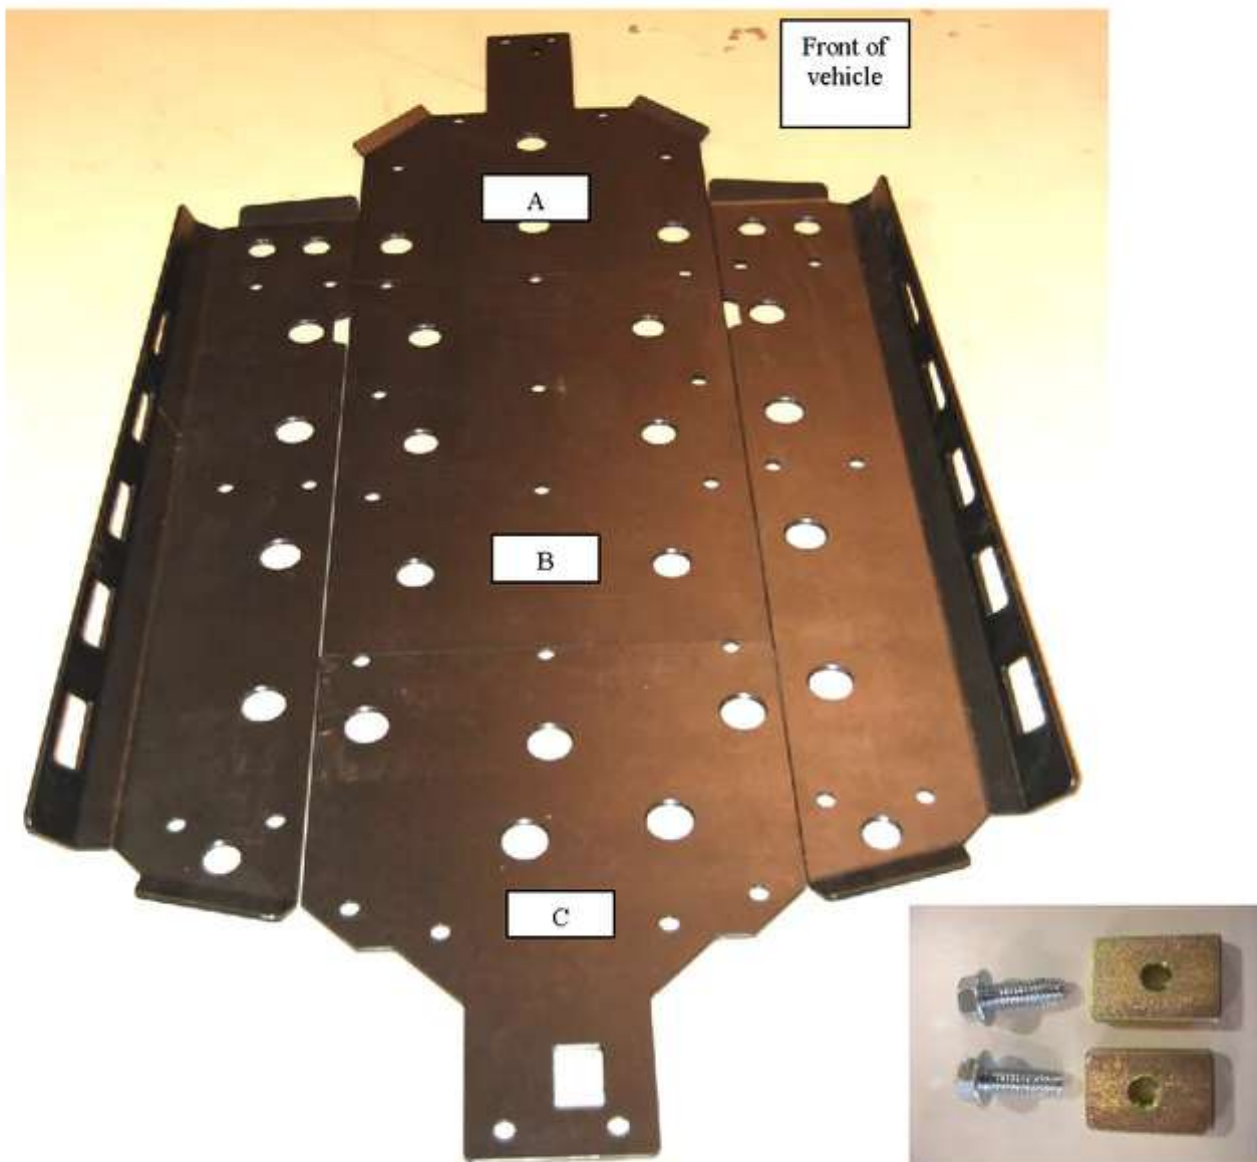

Enjoy! Any questions, contact Trail Armor at 662-233-5700.
www.trailarmor.com