



Installation Instructions for **Polaris Ranger RZR4 Slider Nerf Side Skids**
TA012SKIDNRF-RZR4


Warnings and Product Liability Disclaimer

This product is intended to be used as a cosmetic accessory under normal equipment operation and should not be depended upon or used as a safety device. Manufacturer assumes no liability for personal injury or equipment damage as the result of use or installation of this accessory. User assumes all risk. User should carefully read all instructions prior to installation.

- A. To install the Trail Armor nerf sliders to the RZR4, remove the OEM fuel tank protector and discard. See picture 1.



- B. Using one of the supplied $\frac{1}{4}$ - 20 thread cutting screws, chase each of the pre-drilled hole by installing and removing the thread cutting screws.

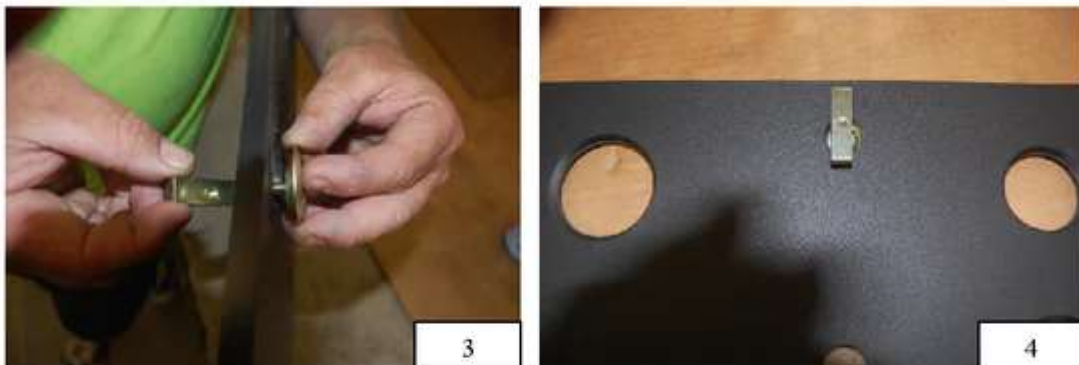

- C. Install the supplied $\frac{1}{4}$ - 20 x 1 bolts and washers through the inner holes in the nerf slider panels (closest to the center of the RZR) and loosely start the T-nuts. Picture 3.
- D. Align all the T-nuts perpendicular to the nerf sliders' inner edge. Picture 4. Guiding the pre-installed T-nut into the inner slotted holes in the frame angles, place the nerf slider into position up against the vehicles' angle frame rails. Start the supplied $\frac{1}{4}$ - 20 x 1 bolts with washers into the pre-drilled, chased outer holes. Tighten enough to hold the nerf slider into position. Fully push in the pre-started inner bolts and tighten allowing the T-nut to turn cross-wise in the frame angle to lock down its position. Tighten securely. Tighten outer fasteners.

Enjoy! Any questions, contact Trail Armor at 662-233-5700.
www.trailarmor.com