


CAN-AM DEFENDER

Front Receiver

PART #101860

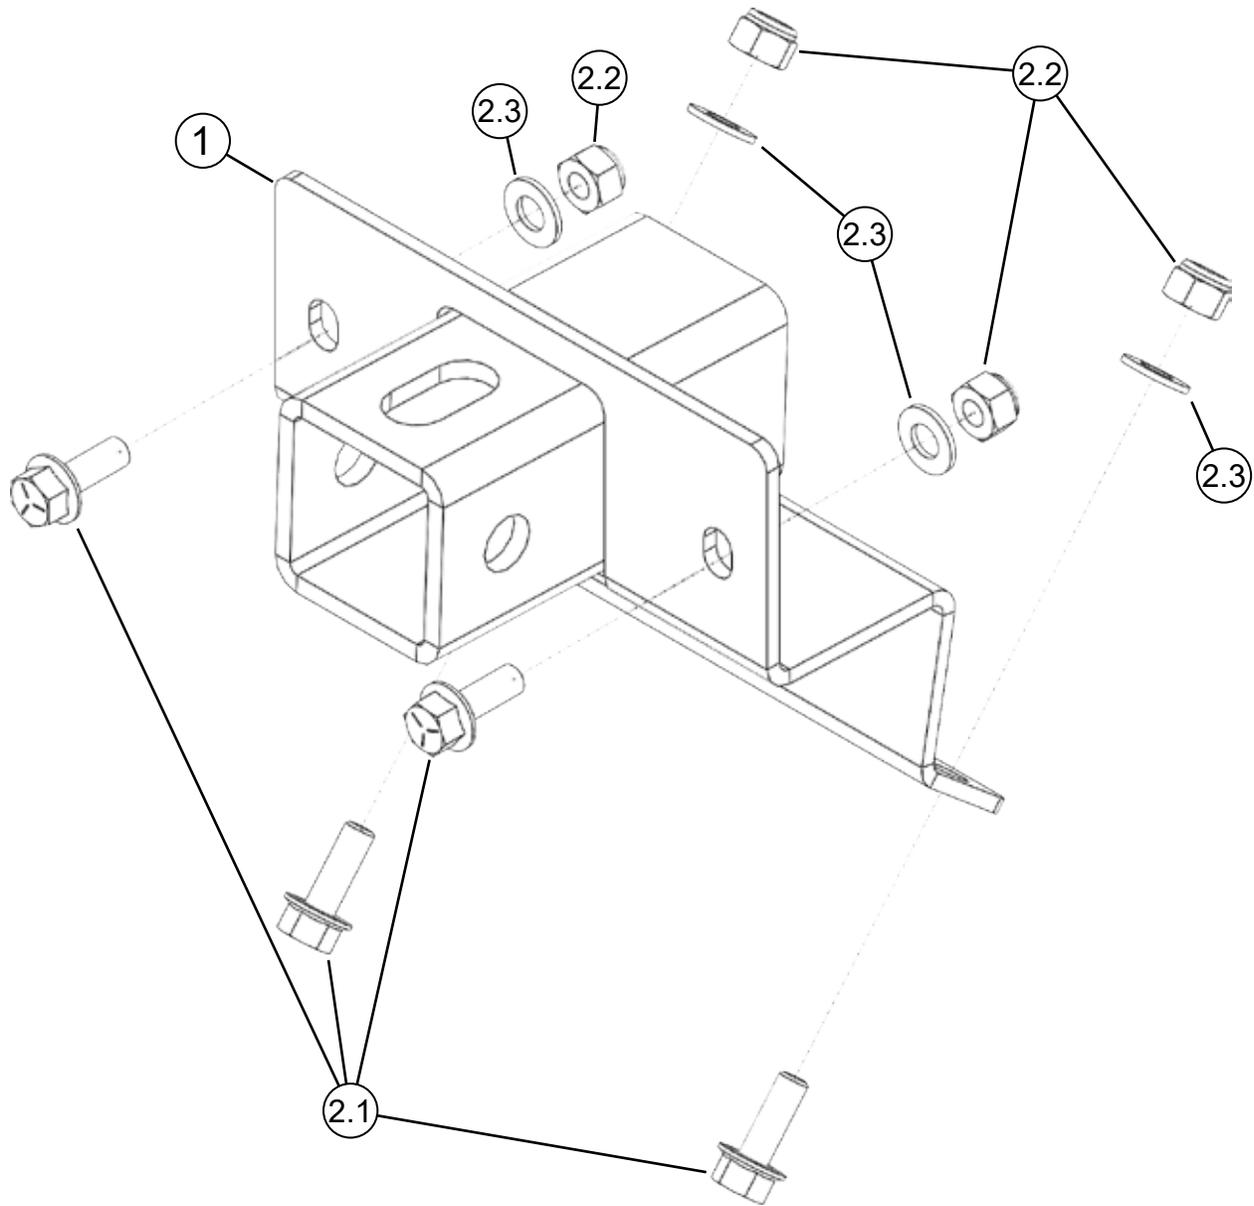

Item #	Qty.	Description
1	1	Receiver
2	1	Hardware Kit (HK-011)
2.1	4	3/8"-16 x 1.00 Hex Flange Bolt

Item #	Qty.	Description
2.2	4	3/8"-16 Hex Nylock Nut
2.3	4	3/8" Flat Washer
2.4	1	3/8"-16 x 1.25 Flat Head Cap Screw (not used)



INSTALLATION INSTRUCTIONS

Note: Make sure all hardware needed to complete this mount is in the package. Thoroughly read through and understand the instructions before installing.

1. Set receiver (1) inside front bumper placing receiver tube through the fairlead opening in the front bumper as shown in **Figure 1 & 2**.
2. Using bolts (2.1), washers (2.3), and nuts (2.2) secure receiver to front bumper as shown in **Figures 1 & 2** and tighten evenly.

