


Polaris ATV Conversion Bracket

Accessory

PART #101895

Kit Components:		
Item #	Qty.	Description
1	1	Conversion Bracket
2	1	Hardware Kit (HK-396)
2.1	2	M8-1.25 x 35 Hex Flange Bolt
2.2	8	M8 Flat Washer

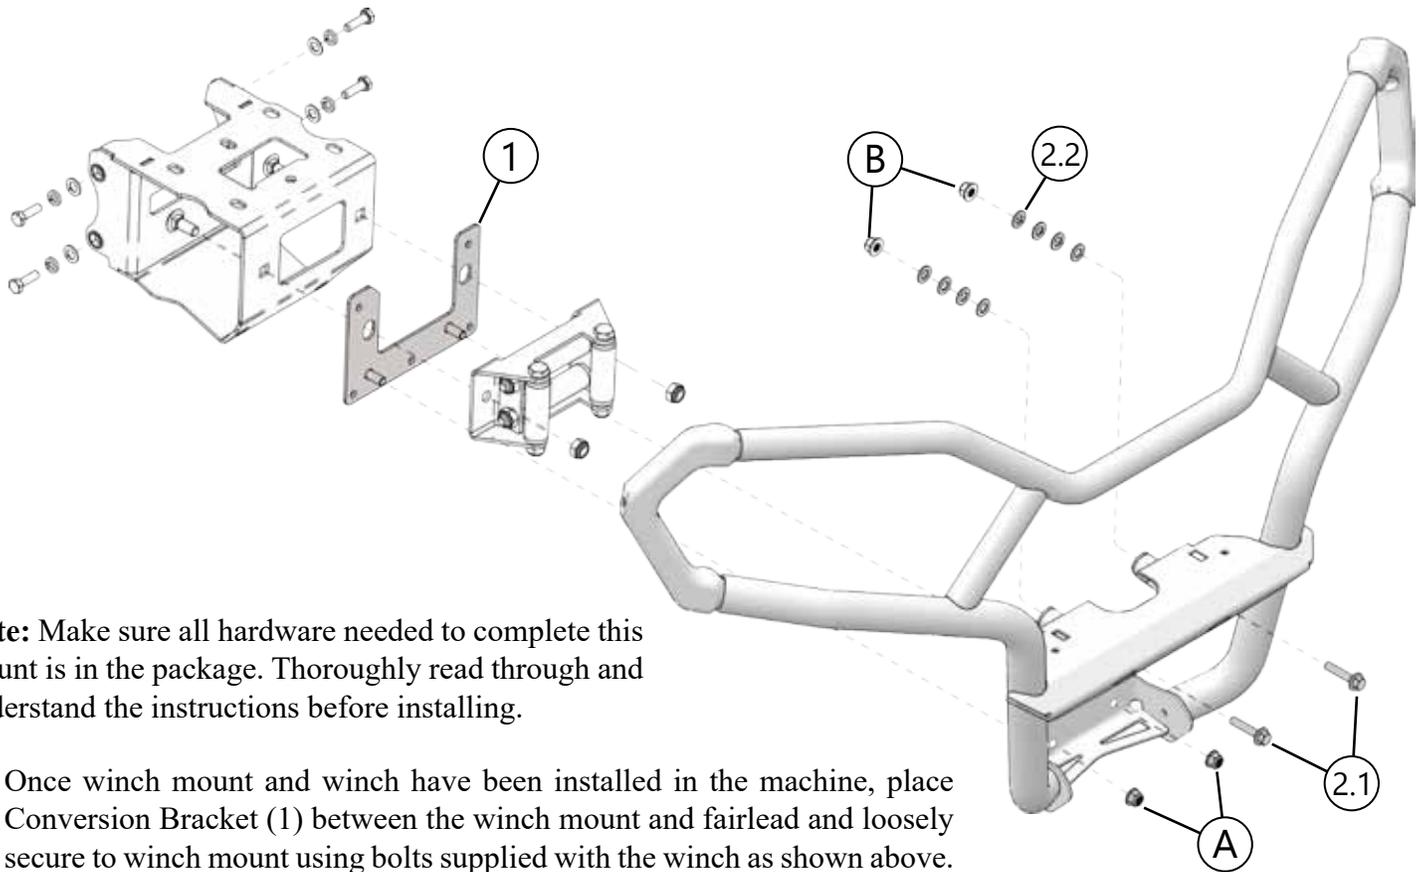

Note: Make sure all hardware needed to complete this mount is in the package. Thoroughly read through and understand the instructions before installing.

1. Once winch mount and winch have been installed in the machine, place Conversion Bracket (1) between the winch mount and fairlead and loosely secure to winch mount using bolts supplied with the winch as shown above.
2. Set bottom of front bumper over the studs on Conversion Bracket (1) and secure using OEM nuts (A). Secure top of the front bumper using the supplied bolts (2.1), and OEM nuts (B) as shown above. Tighten all hardware evenly.

Note: Washers (2.2) may need to be used as a spacer to push/level the front bumper away from the plastics of the machine.

