

# HONDA RECON RECEIVER

Rear Receiver

PART #102035

## Kit Components:

Item #	Qty.	Description
1	1	Plow Mount
2	1	Hardware Kit HK-030
2.1	2	M10 - 1.50 x 65 Hex Bolt GR8.8
2.2	2	M10 Flat Washer
2.3	2	M10 - 1.50 Hex Nut Nylock

**Note:** Make sure all hardware needed to complete this mount is in the package. Thoroughly read through and understand the instructions before installing.

## Installation Instructions

1. Locate bolt holes (A) on the rear axle of the machine, as shown in Figure 2.
2. Place Rear Receiver around both bolt locations as shown in Figure 3 and place bolts (2.1) through the mounting location.
3. Secure bolts with the flat washers (2.2) and lock nuts (2.3) as shown in Figures 1 and 4.

Figure 1

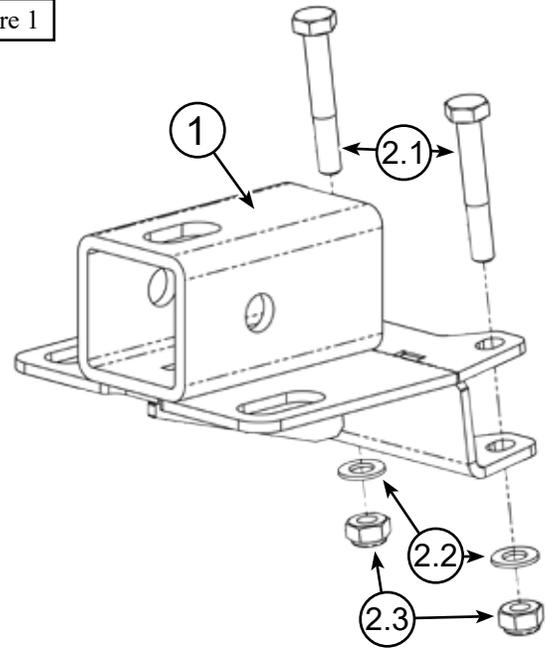


Figure 2

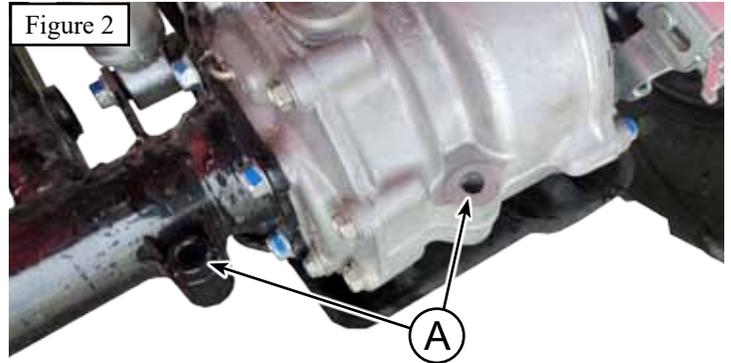


Figure 4

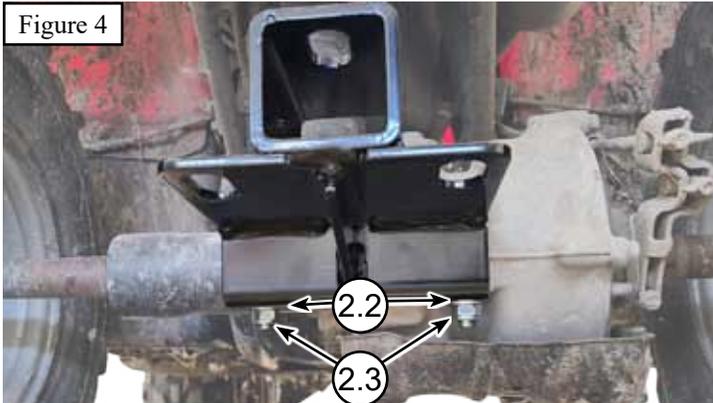


Figure 3

