

KAWASAKI BRUTE FORCE 650/ PRAIRIE 360/650/700 PLOW MOUNT

Plow Mount

PART # 105200
Hardware Kit: HK-112


Kit Components:

Qty.	Part Description
1.....	Plow Mount Plate
4.....	5/16" X 1-3/8" X 2" U-BOLT
8.....	5/16" FLANGED NYLOCK NUT


INSTALLATION INSTRUCTIONS:

Note: This mount is made to fit a couple Kawasaki ATV's with different frames. Make sure you read and understand instructions before you start.

1. Remove the four bolts holding the skid plate to the frame and remove. Shown in [Figure 3](#). If you prefer to leave your skid plate attached you may drill holes for U-bolts and continue to step 2.
2. Place four U-bolts (B) on ATV frame. For 650/700 Brute Force/Prairie locations refer to [Figure 4](#). For 360 Prairie the mounting procedure is the same, only use bolt holes shown in [Figure 2](#).

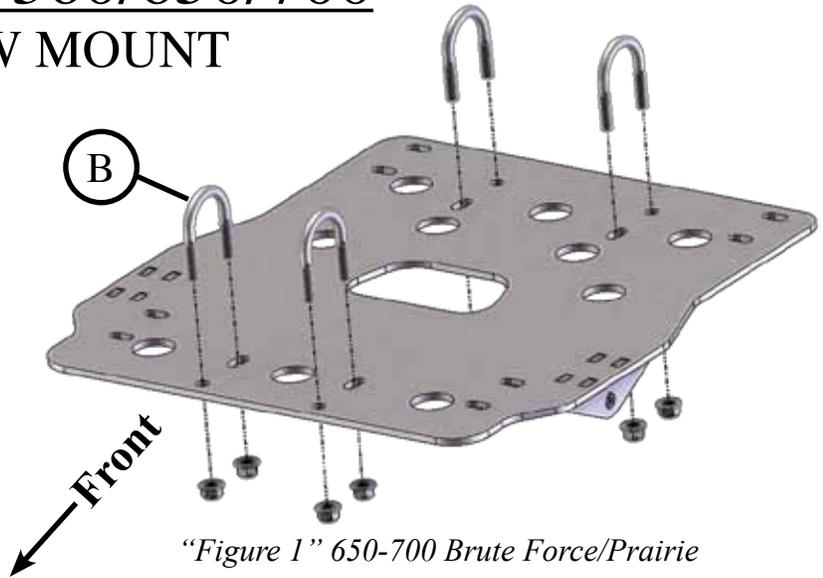

“Figure 1” 650-700 Brute Force/Prairie

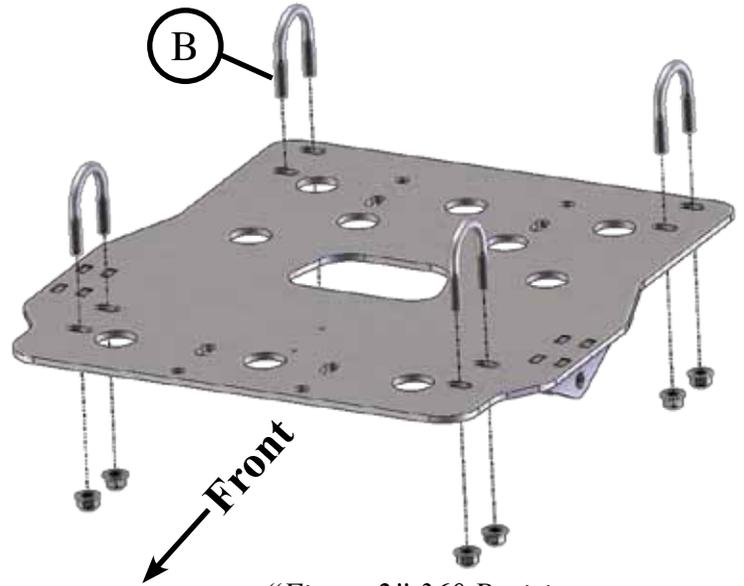

“Figure 2” 360 Prairie

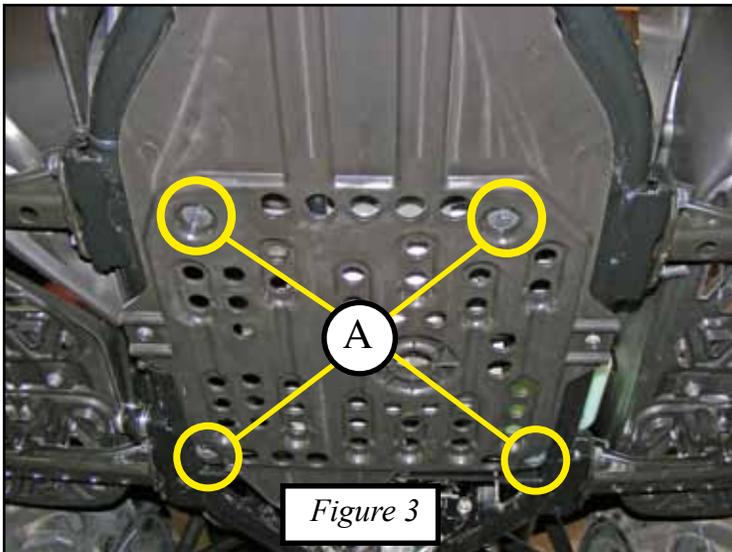


Figure 3

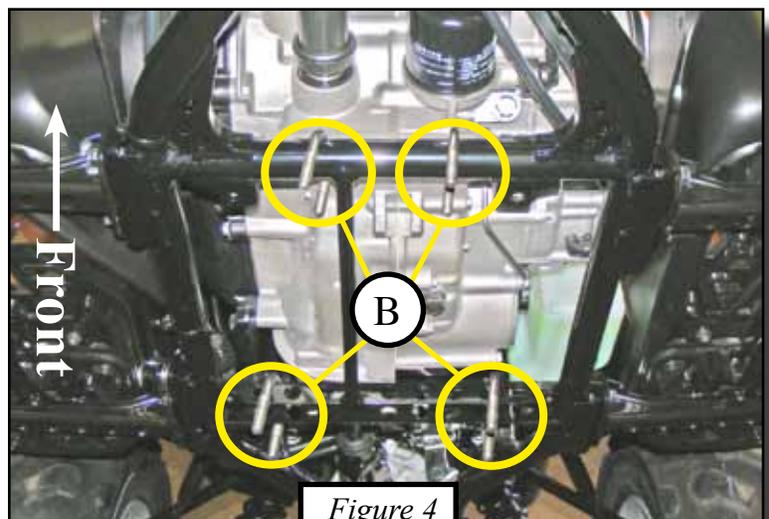


Figure 4

3. Install mount plate to frame using hardware provided. Shown in Figures 5 & 6. DO NOT TIGHTEN AT THIS TIME.
4. Adjust plate so that the oil plug lines up with hole and is centered on the ATV.
5. Tighten down all hardware at this time. Make sure all the U-bolts are tightened evenly.
6. See ATV Plow Tube System instruction manual for tube attachment.

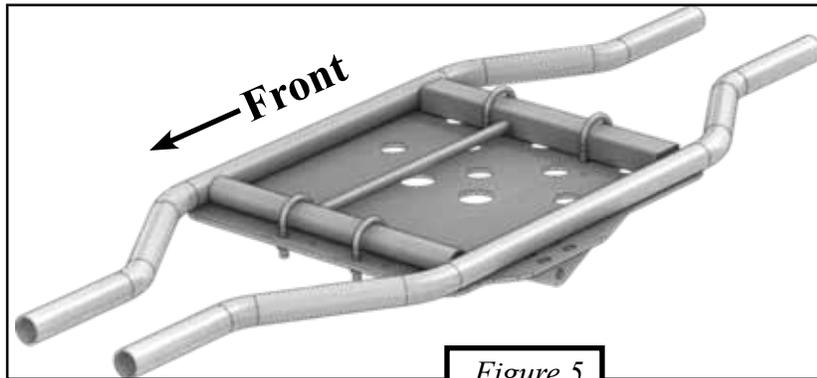


Figure 5

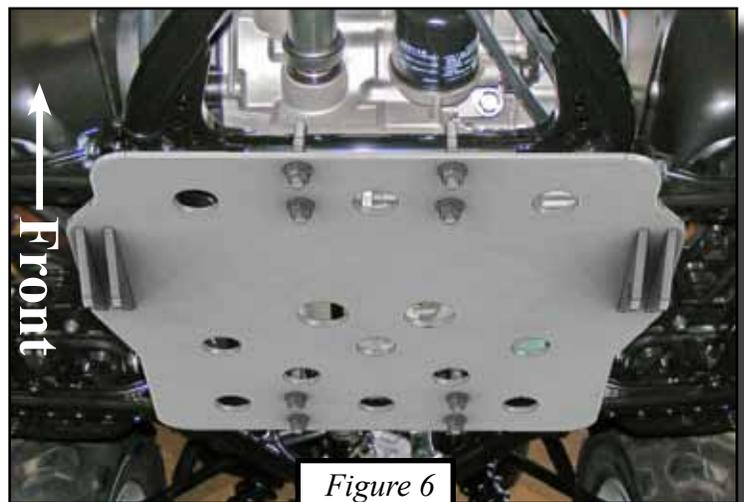


Figure 6

