

# POLARIS GENERAL/RZR XP 900/1000


Plow Mount

PART # 105785

Hardware Kit: HK-131

## Kit Components:

Qty.	Part Description
1.....	Plow Mount Plate
1.....	Bolt Plate (A)
4.....	Spacers
2.....	3/8"-16 x 1" Hex Flanged Bolt
2.....	3/8"-16 U-Bolt
4.....	3/8"-16 Flanged Nylock Nut

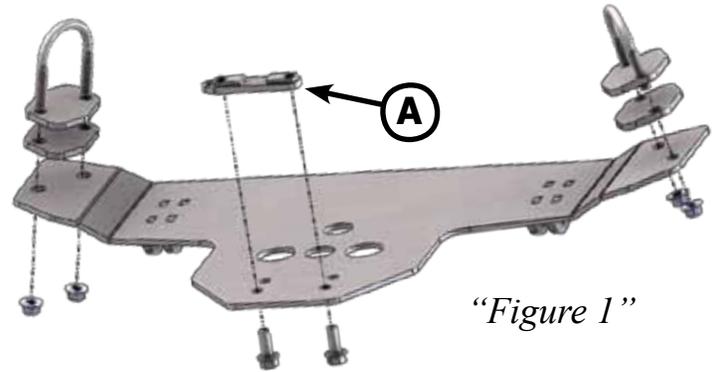


"Figure 1"



## INSTALLATION INSTRUCTIONS:

*Note: Make sure all of the hardware needed to complete this mount are in the package. Read through and understand the instructions before installing.*


1. Place Bolt Plate (A) over holes in the frame located between the rear mounts of the front a-arms as shown in [Figure 2](#).
2. *Note: If you have a Polaris General skip to Step 3.* Place mount plate under machine lining up the back set of holes on the front of the mount plate with the bolt plate. Install 3/8" bolts to Bolt Plate as shown in [Figure 3 & 4](#).
3. Place mount plate under machine lining up the front holes of the mount plate with the bolt plate. Install 3/8" bolts to Bolt Plate as shown in [Figure 3 & 4](#).

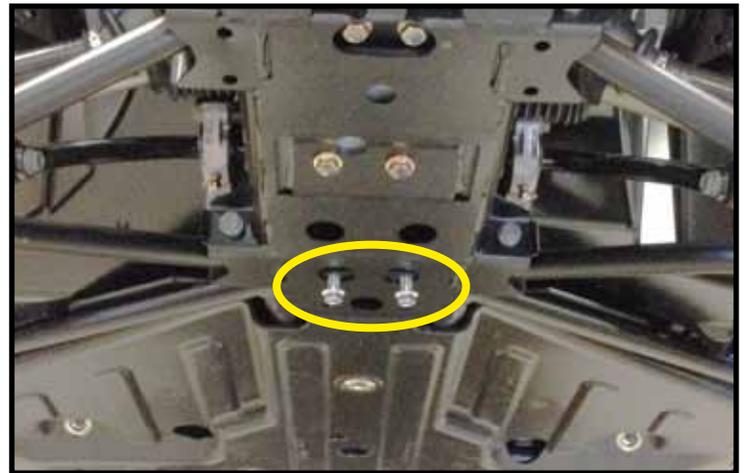

"Figure 2" Bolt Plate Install Location

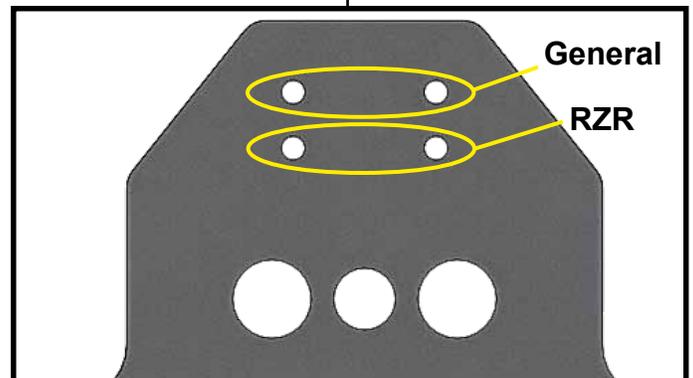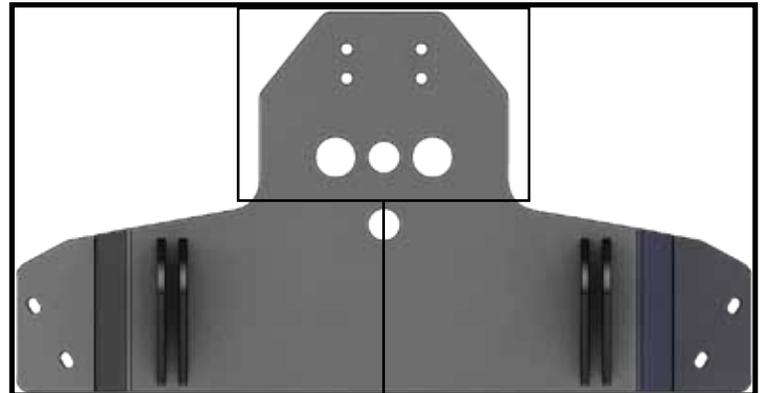

"Figure 3" Mount plate Install

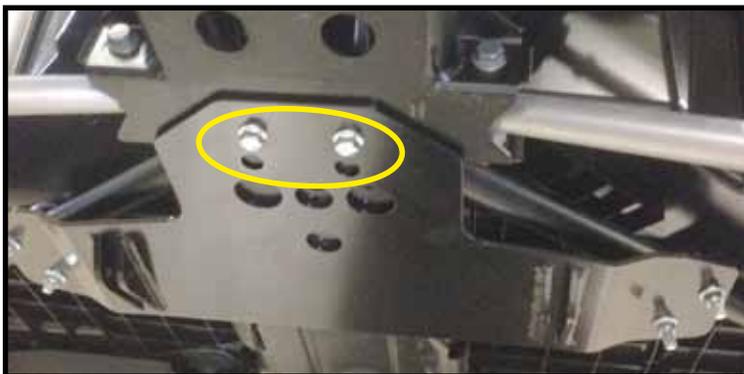


"Figure 4" Mount Plate Install

4. *Note: If you have a Polaris General or a RZR 900 (14-older) skip this step because you will not use the spacers provided.* Place spacer plates in gap between the tube and the mount plate. As shown in Figure 5.


5. Place U-Bolts (B) over tube frame through mount plate then secure using 3/8" Flange Nuts as shown in Figures 5 and 6.

6. Tighten down all U-Bolts evenly.

7. See ATV Plow Tube System instruction manual for tube attachment.

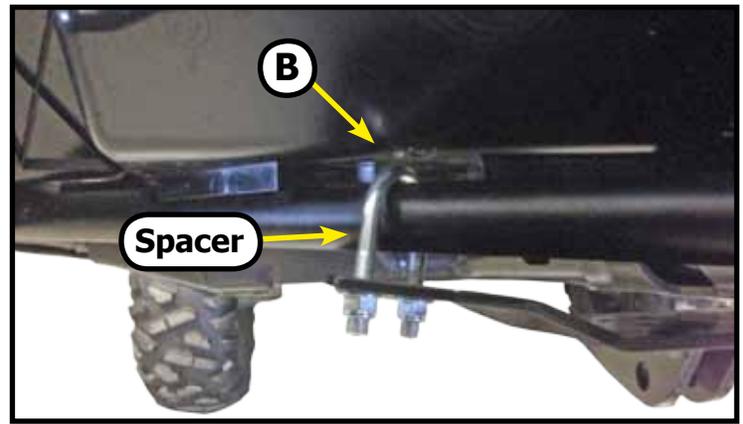

*"Figure 5" Spacer Install*

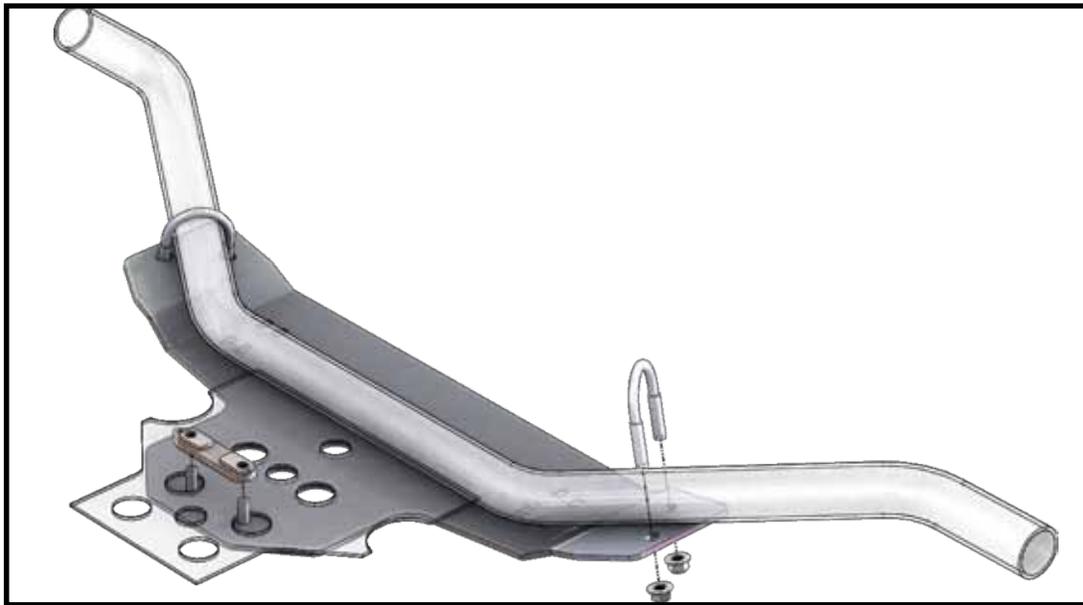

*"Figure 6"*

