


SEGWAY FUGLEMAN PLOW MOUNT

Plow Mount

PART #106480

Kit Components:		
Item #	Qty.	Description
1	1	Segway Fugleman Plow Mount
2	1	Hardware Kit HK-350
2.1	4	M10-1.25 X 30 Hex Bolt Flange GR10.9

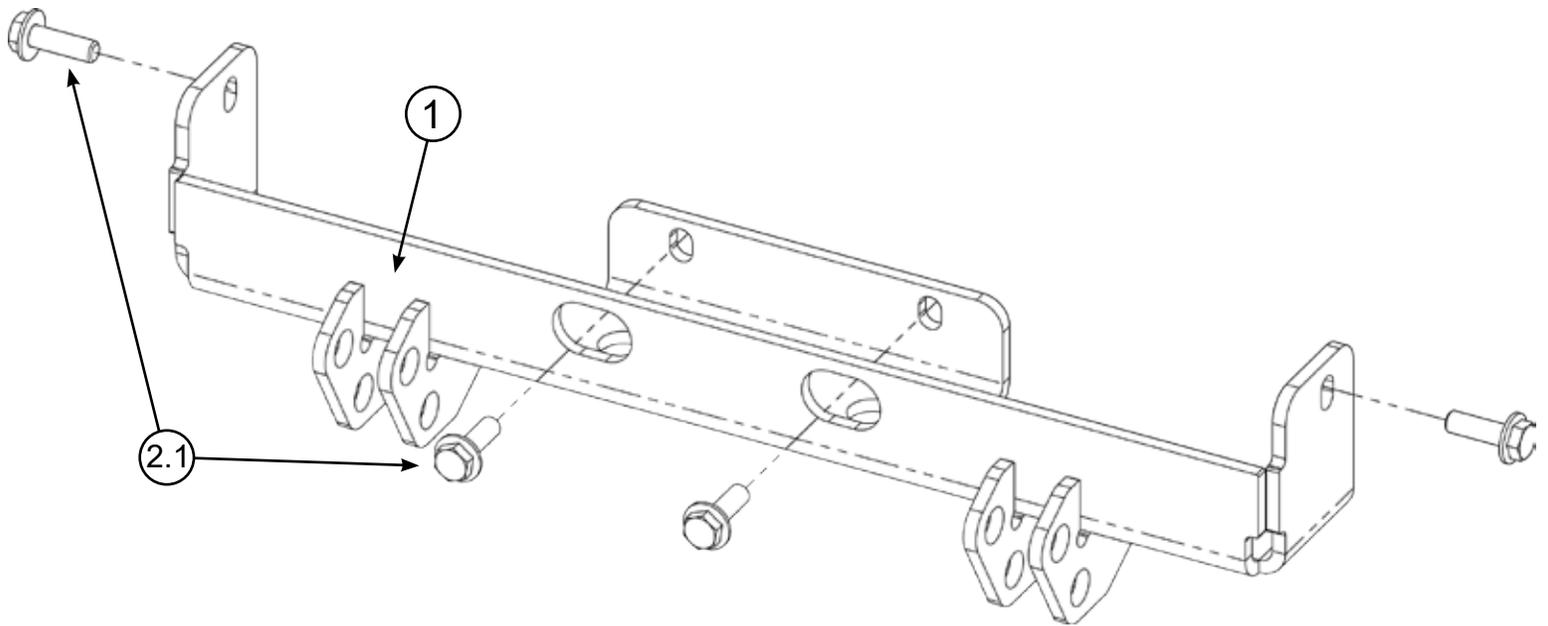

INSTALLATION INSTRUCTIONS

Note: Make sure all hardware needed to complete this mount is in the package. Thoroughly read through and understand the instructions before installing.

1. Remove bolts (A) from the bottom of the bumper as shown in **Figure 1** and discard.
2. Place plow mount (1) up to bumper as shown in **Figure 2**, attaching the mount to the bumper with bolts (2.1) on both sides.
3. Use bolts (2.1) to attach the rear of the mount through the bumper and into the frame, as shown in **Figure 3**. This is the same location of the bolts that were removed in step 1.
4. Once all 4 bolts are in place, completely tighten them.

