

IT DOES NOT MATTER WHICH SIDE YOU START ON

1. Using an 8mm T-Handle or Socket, remove both the upper (FIG 1) and lower (FIG 2) Radiator shroud bolts into the radiator louvers.
2. Remove the radiator louver by pressing in towards the frame and pulling outward at the same time. (FIG 3)
3. Using an 8mm T-Handle or socket, Remove both of the radiator mounting bolts. There is one on the front side of the radiator and one on the backside. (FIG 4)
4. Take one of the larger triangle brackets marked 02LL or 02RL and install it on to one of the 12-5019-02 using the provided Flat Head Bolts. The 02LL will be facing left and the 02RL will be facing right. Both the 02LL and 02RL can be installed at this time. (FIG 4.1)
5. Now install one of the 02U triangle pieces to the smaller machine groove of the 12-5019-02 using 2 of the provided flat head bolts, this piece should be facing the opposite direction as the 02RL and 02LL. Both 02U can be installed at this time. (FIG 4.1)
6. Using the 12-5019-02 that has the 02RL bolted to it for the right side and the 02LL on the left side, slide it between the radiator and the frame. The larger triangle bracket will be at the bottom facing back and the smaller at the top facing forward. Line up the mounting holes with the radiator mounting holes. (FIG 5)
7. Reinstall the radiator mounting bolts that were removed in step 3. Tighten using an 8mm T-Handle or Socket. (FIG 6) On the left side make sure the cable is mounting back in the slot behind the top mounting bolt. (FIG 6.1)
8. TURN PAGE OVER →→→



FIG 1



FIG 2



FIG 3



FIG 4

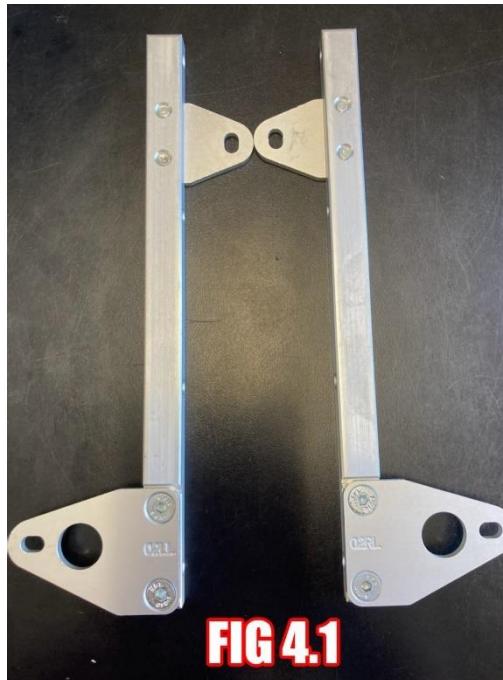


FIG 4.1



FIG 5



FIG 6



FIG 6.1

9. Install a provided clip nut to both of the outer mounting holes of the radiator. The threads need to be facing inward on the motorcycle. (FIG 7)
10. Take one of the outer mount pieces labeled (12-5019-03R for Right side or 12-5019-03L for Left side) depending on which side you are working on. Line up the outer mounting piece with the outer mounting holes. Line the mounting piece up with the contour of the radiator, the tapped holes should be facing forward. (FIG 8)
11. Using the provided M6x25 bolt and provided washer, thread through radiator shroud for the top hole of the radiator mounting piece and into the clip nut. Leave loose for now. (FIG 9)
12. For the lower shroud bolt, use the same one removed in step 1. Leave loose for now.
13. Take the Front Radiator guard plate (12-5019-01R for right side or 12-5019-01L for left side) for the side you are working on. Line it up with the mounting holes of both the inner and outer mounting pieces. Take 7 of the provide socket head bolts and thread them through the front plate into the mounting pieces. Tighten using a 4mm allen wrench. (FIG 10)
14. Tighten the radiator shroud mounting bolts installed in step 8 and 9 using an 8mm T-Handle or Socket.
15. Repeat process on opposite side.
16. Have Fun and enjoy your next ride.



FIG 7



FIG 8



FIG 9



FIG 10

WARNING AND DISCLAIMER

All parts manufactured, designed or sold by Enduro Engineering, Inc. (EEI) are to be installed by a licensed motorcycle dealer or a licensed motorcycle technician. Motorcycles can be dangerous. Serious injury, death and property damage can result from the use of motorcycles. This risk is increased by improper installation or misuse of after market parts. EEI's customers must exercise good judgement in the use, control, alteration, part selection and installation, and maintenance of their motorcycles. In the event of a possible defect in material or design, or any other defect in a part manufactured, designed or sold by EEI, the responsibility of EEI is limited either a refund of the purchase price or the replacement of the part if EEI determines the part to be defective, and subject to EEI's inspection of the part within thirty (30) days from the date of purchase. (Note: any attempted repairs or modifications made to EEI Products will void this limited warranty.) EEI, under no circumstances will be responsible for incidental and/or consequential damages, property damage, personal injury damage, or damage, injury, cost or expense of any kind or nature whatsoever. By purchasing as product or a product sold by EEI, you (1) acknowledge the above disclaimer and agree to its terms; (2) agree that any claim brought against EEI arising from and/or pertaining to or otherwise related to a part manufactured, designed or sold by EEI must be brought in the Michigan State Courts located in the County of Ingham or in the Federal District Court for the Western District of Michigan and the Michigan law shall apply on all issues; and (3) any claim against EEI must be brought within one (1) year of purchase of the product. EEI makes no other warranty, express or implied, including without limitation any warranties of merchantability and fitness for a particular purpose.

Radiator Guard Installation Instructions

Part Number 12-5019

Quality Off-Road Motorcycle Products

Enduro
Engineering

enduroeng.com/517.393.2421/info@enduroeng.com