



FALCON SHOCKS

JEEP JL/JT 1.1 STEERING STABILIZER QUICK START GUIDE

The Falcon Nexus EF 1.1 Steering Stabilizer improves steering feel in a compact and affordable package. This steering stabilizer has been optimized for the pavement and offers increased stability off the road when compared to to the factory stabilizer.

“High-Value Performance” is the driving force behind our vehicle-specific dampers for Jeeps, trucks, and SUVs. These vehicle-specific steering stabilizers deliver a properly weighted steering feel and consistent bi-directional turning for balanced and controlled side-to-side steering response and an equal return to center dynamics.

Scan for Video Instructions




<https://www.falconshocks.com/videos>


96-01-02-035 RevB



- 1 • Straighten the front wheels.
- If installing with the tires on the ground, disconnect the axle side of the track bar for easier access to the bracket bolts.

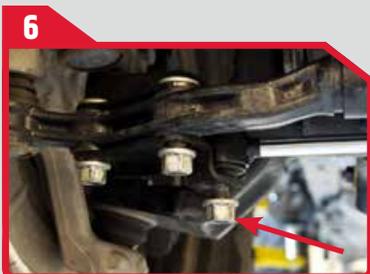

- 6 • Temporarily install the tie rod end eyelet.
- Use provided nut and bolt on shaft end of stabilizer. Re-use factory hardware elsewhere on bracket.

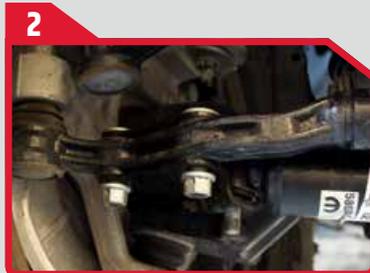

- 2 • Remove the bolt connecting the factory steering stabilizer to the tie rod bracket.
- Loosen the two bracket bolts.



- 7 • Tighten the nut on the back side of the bracket until it is snug.



- 3 • Remove the three bolts on the axle bracket.
- Remove the factory steering stabilizer



- 8 • Remove the Falcon Steering Stabilizer.
- Place the Falcon Steering Stabilizer into a vice.
- Torque the bracket nut to 40 ft. lbs.



- 4 • Temporarily install the Falcon Steering Stabilizer axle bracket. Keep the hardware loose.



- 9 • Install the axle bracket using red thread locker.
- Torque the hardware to 30 ft. lbs.



- 5 • Bend the lower section of the tie rod bracket until there is enough space to fit the Falcon Steering Stabilizer eyelet.



- 10 • Install the eyelet tie rod end eyelet.
- Torque the hardware to 59 ft. lbs.

NOTES

 Red Line full synthetic oil has a high viscosity index of 540 for superior all-weather performance.

 Hand wash with soap and water for cleaning. Do NOT clean with acids.

 3 year warranty to be free of defects and workmanship. Repair or replace at no cost.