



ELECTRIC VEHICLE STATEMENT OVERVIEW



Ford E-Transit Cargo Vans (2022)

WHEEL BASE LENGTHS		
REGULAR	LONG	EXTENDED
ROOF HEIGHTS		
LOW	MID	HIGH

*This does not include Chassis Cab or Cutaway Models

FORD RESOURCES

Prior to installation of any WEATHER GUARD® products in or on a Ford E-Transit, please ensure that you have consulted Ford for all necessary vehicle information and safety requirements. Click the links below for resources.

**FORD
BODY BUILDER
ADVISORY SERVICE**

[READ MORE](#)

**FORD PLAYBOOK
FOR SHIP THRU
UPFITTERS AND
DROP SHIPS**

[READ MORE](#)

**FORD UPFIT
REFERENCE GUIDE**

[READ MORE](#)

**FORD FLEET
VEHICLE GUIDES**

[READ MORE](#)

WEATHER GUARD® IMPACTS

WEATHER GUARD® Product Specific Notes for Ford E-Transit Commercial Vans:

Shelving Storage, Bulkheads (Steel and Composite), Roof Racks and Organization Accessories

- All standard adjustable shelving, bulkheads, roof racks and accessories can be used in the standard e-transit vehicles (please adhere to information and diagrams provided by FORD)

Floor Storage (Pack Rat/Itemizers)

- Be sure to adhere to the no drill zone as laid out on the diagram above
- It is recommended that mounting bracket flanges be faced inward to avoid interference with the no drill zones
- Units should be installed as far out towards the van threshold as possible to help avoid no drill zones

Cab Commanders (9010-3-01/9012-3-01)

- **DO NOT** Install in Ford E-Transit Vans

CAUTIONS



Prior to drilling, so as not to cut electric wires, fuel lines, brake lines, etc., check behind and underneath drilling and mounting locations. To keep debris out of your eyes when checking the underside of the vehicle, or when drilling, always wear protective eye wear. Failure to heed this warning will result in death or serious injury.

FOR ELECTRIC VEHICLES – Drilling into electrical wiring may damage vehicle systems and may cause bodily harm. This equipment should be installed by qualified personnel familiar with this type of vehicle and the hazards involved. To prevent damage to components underneath the floor, mainly the battery and high voltage system components, refer to your vehicle manufacturer's instructions or the manufacturer's website for more information.


SEE BACK FOR DRILLING INFORMATION



DRILLING INFORMATION

For Specific No Drill Zones and Van Floor Drilling Information, please click here to view the "FORD Transit and E-Transit 2022MY Body and Equipment and Mounting Manual North America"

[CLICK TO VIEW](#)

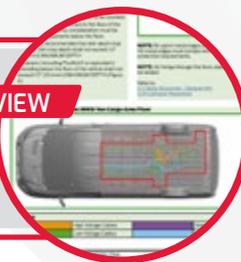

WEATHER GUARD® VAN SOLUTIONS INSTALLED ON LEGEND™ EVOLVE LIGHTWEIGHT FLOORING

To purchase flooring or for installation instructions, contact your local distributor



Back Door View



Side Door View



FLOOR IS DESIGNED TO FIT IN VANS AND ATTACH TO OEM MOUNTING POINTS WITHOUT DRILLING INTO THE VEHICLE



SHELF FEET ARE ATTACHED TO THE LEGEND™ EVOLVE FLOORING USING THE HARDWARE PROVIDED BY THE MANUFACTURER