



## Spacer installation for Throttle Block Assembly 43599

### HARDWARE INCLUDED:

Qty	Description
1	Aluminum Throttle Block Assembly
1	Spacer 3/8"

### TOOLS REQUIRED:

- 7/32 socket
- Small Hammer
- Tape Measure

For certain applications, you will need to install a spacer into the throttle block assembly to ensure the correct throttle cable tension. Please see instructions below to see if your application requires the spacer.

**STEP 1:** Measure the housing length at the end of your throttle cable. See photo 1 and 2



- If your measurement is approximately .165" you will NOT need the spacer. If your measurement is approximately .25" you will need the spacer. Proceed to step 2.

**STEP 2:** Place the spacer in the throttle block opening and press firmly. See Photo 3

**NOTE:** A tight fit is required to prevent any slop in the throttle cable.

**STEP 3:** Using a 7/32 socket and small hammer, tap the spacer into place. Be sure that the spacer bottoms out on the throttle block.

**STEP 4:** Once the spacer is installed, continue the installation normally.

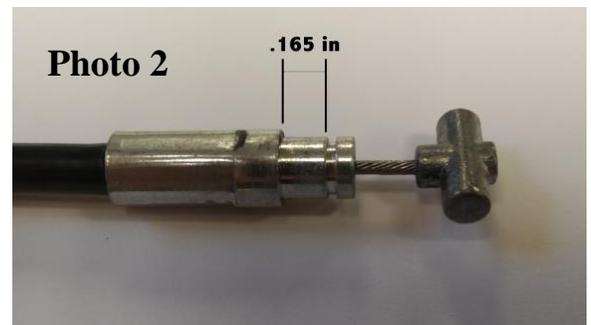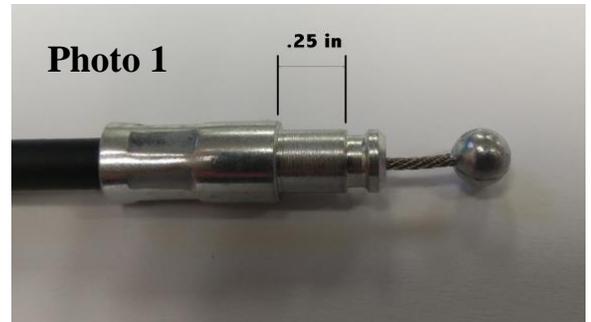

### LIMITED WARRANTY

**POWERMADD** warrants this product to be free from defects in material and workmanship under use for the purpose it was intended. **POWERMADD** shall not be liable for damage or injury caused by defective materials or workmanship. **POWERMADD** may elect to repair or replace this product, but is the sole judge of any defects in their product. This warranty does not cover any labor costs to remove or reinstall this product and is effect for one year from the original purchase date.