

VERUS

ENGINEERING

Dual Dive Plane Kit for Porsche 991.1 / 991.2 GT3RS

Install Manual



Author: Tom Lang

Release Date: 2022/11/21

Approvals: E. Hazen

Document Revisions

Rev	Date	Author	Description
01	2022/11/21	T.Lang	Initial release of install manual

Dive Plane Kit for Porsche 991 GT3 and GT3RS – Install Manual

CONTENTS

1. Introduction	<3>
1.1. Overview	<3>
1.2. Difficulty	<3>
1.3. Time Required	<3>
1.4. Tools Needed	<3>
1.5. Dive Plane Components	<3-4>
2. Dive Plane Install	<4-8>

Dive Plane Kit for Porsche 991 GT3 and GT3RS – Install Manual

1. Introduction

1.1. Overview: Detailed instructions on installing the Verus Engineering dive planes on the Porsche 991.1 / 991.2 GT3RS.

1.2. Difficulty: Easy

1.3. Time Required: 1 hour

1.4. Tools Needed:

- 1.4.1.** Tape
- 1.4.2.** Scissors
- 1.4.3.** Rubbing Alcohol
- 1.4.4.** Microfiber Towel



1.5. Dive Plane Components

- 1.5.1.** Left-hand Lower Dive Plane
- 1.5.2.** Left-hand Upper Dive Plane
- 1.5.3.** Right-hand Lower Dive Plane
- 1.5.4.** Right-hand Upper Dive Plane
- 1.5.5.** Hardware Bag
 - 1.5.5.1.** (4) Double Sided Tape

Confidential: Property of Verus Engineering. Not for Distribution outside intended recipient list.

Dive Plane Kit for Porsche 991 GT3 and GT3RS – Install Manual

1.5.5.2. (1) Paper Template




2. Porsche 991.1 / 991.2 GT3RS Dive Plane Install

- 2.1. Verus Engineering is not responsible for damage to you or your vehicle by following this manual and/or installing Verus Engineering products.
- 2.2. To start, it is ***highly*** recommended to follow 3M's VHB install instructions, which are the following: The ambient temperature should be over 50 degrees F. **50% of the ultimate bond strength will be achieved after 20 minutes, 90% after 24 hours, and 100% after 72 hours.**
- 2.3. It is wise to have the car fairly clean for this install, or at least the front bumper. Due to the template and possible drilling on the vehicle, starting with a clean car reduces the risk of scratches and improves install ease.
- 2.4. Begin by preparing the front bumper for the VHB tape. Use a 50 / 50 mix of Isopropyl alcohol, and water along with a clean microfiber towel to wipe the area down.
- 2.5. Locate the appropriate template for the side you want to install first. Cut the template out and tape it to the bumper following the guidelines on the template.

Confidential: Property of Verus Engineering. Not for Distribution outside intended recipient list.

Dive Plane Kit for Porsche 991 GT3 and GT3RS – Install Manual

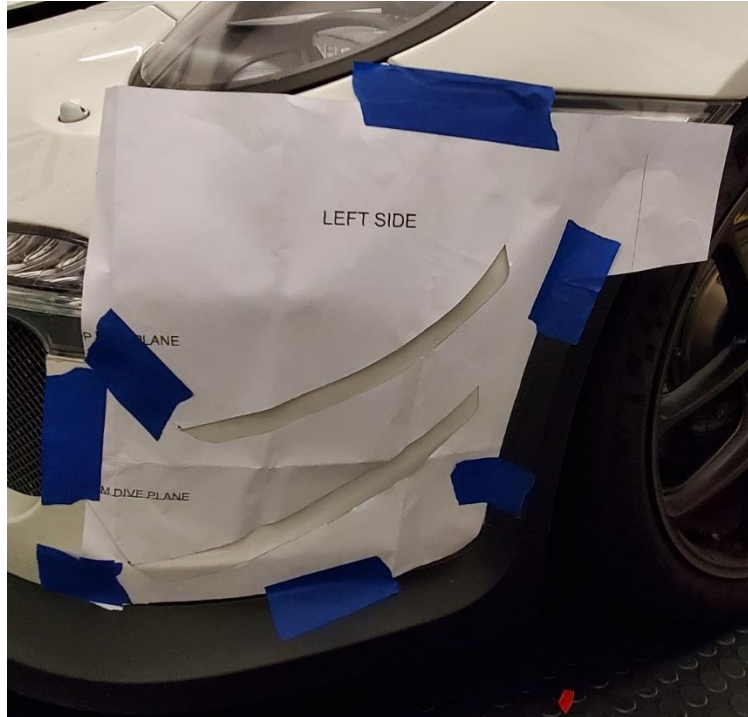


- 2.6.** Prepare the dive plane mounting surfaces for the VHB tape by using the same 50 / 50 Isopropyl alcohol / water solution, and a clean microfiber towel to clean them thoroughly.
- 2.7.** Peel the white backing off and, apply the correct pre-cut VHB tape pieces to the dive planes. Have the red backing facing you, as shown below.



Confidential: Property of Verus Engineering. Not for Distribution outside intended recipient list.


Dive Plane Kit for Porsche 991 GT3 and GT3RS – Install Manual

- 2.8. For the install, the slightly larger units are the bottom dive plane, while the slightly smaller units are the upper dive planes.

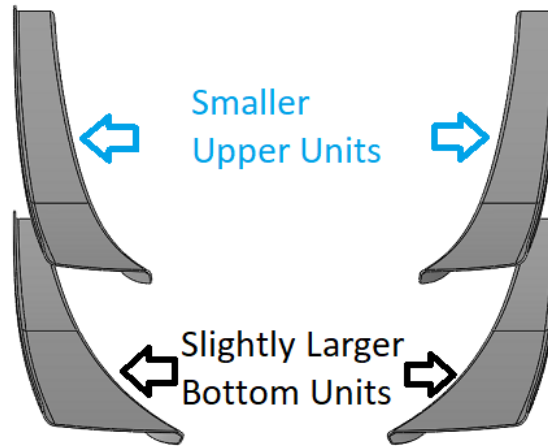

****Generic photo for reference****

- 2.9. Peel a small section of the red backing so that you can just slightly stick the dive plane to the bumper while still being able to readjust the dive plane if needed.

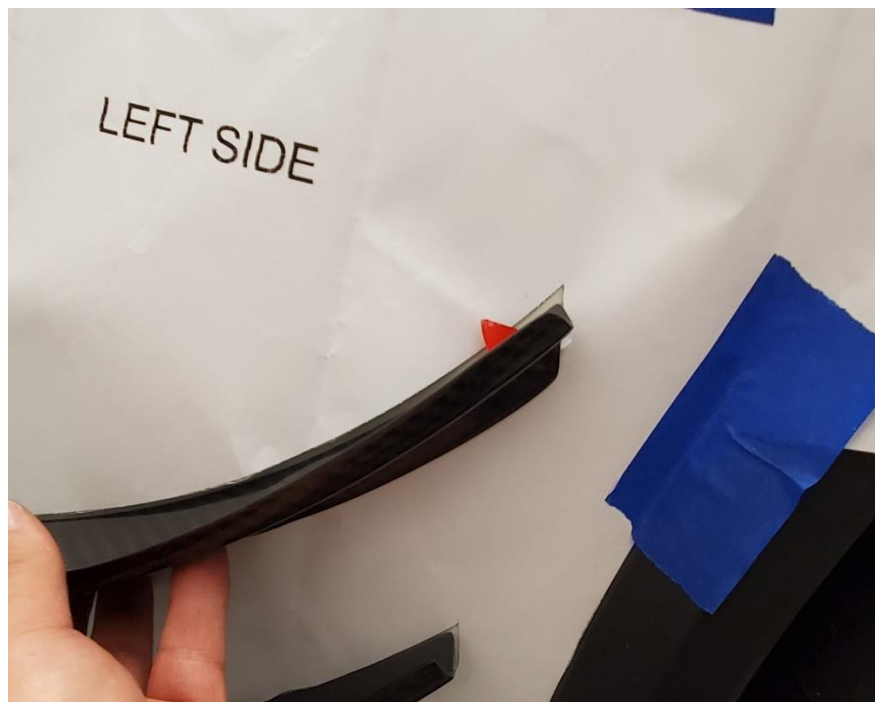

- 2.10. Once you are happy that the placement of the dive plane is correct, begin pulling the red backing off while holding the dive plane in place. Massage the dive plane into the bumper to improve adhesion.

Confidential: Property of Verus Engineering. Not for Distribution outside intended recipient list.

A photograph showing the front left corner of a vehicle. A white paper template is taped to the bumper area with blue tape. The template has the text "LEFT SIDE" at the top and "DIVE PLANE" in the middle. Two curved, carbon fiber-like pieces are being positioned within the template's outline. The car's headlight and a portion of the front wheel are visible on the left. The ground has a black, textured surface.

- 11/3/2022

Dive Plane Kit for Porsche 991 GT3 and GT3RS – Install Manual



Confidential: Property of Verus Engineering. Not for Distribution outside intended recipient list.