



# ***C7 CARBON*** ***INSTALLATION GUIDE***

**BRAND** *Chevrolet* **MODEL** *Corvette C5* **YEAR** *1999 - 2004*  
**PART NAME** *Vented Front Splitter for [99-04] C5 Corvette*  
**PART NUMBERS** *C7-CCC5-V-FS-CF* *C7-CCC5-V-FS-FRP*  
*C7-CCC5-V-FS-GB*

[www.C7carbon.com](http://www.C7carbon.com)

# C7 CARBON - INSTALLATION GUIDE

**BRAND** Chevrolet **MODEL** Corvette C5


**YEAR** 1999 - 2004

**PART NAME** Vented Front Splitter for [99-04] C5 Corvette

**PART NUMBERS** C7-CCC5-V-FS-CF

C7-CCC5-V-FS-FRP

C7-CCC5-V-FS-GB

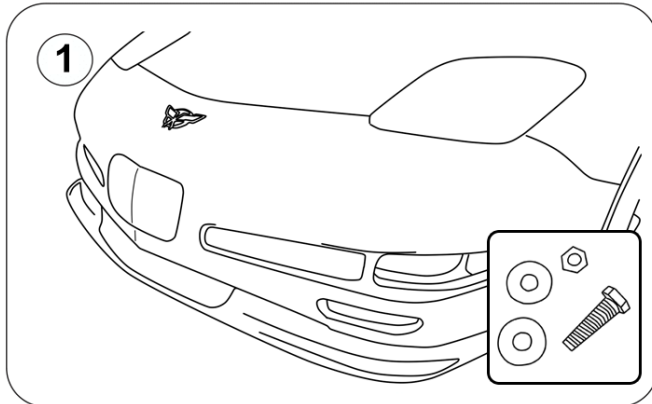


1.- Parts received in this package:

1x ZR1 Style Vented Front Splitter for C5

8x Hex bolts


8x 1/4" x 20 nuts

16x Washers

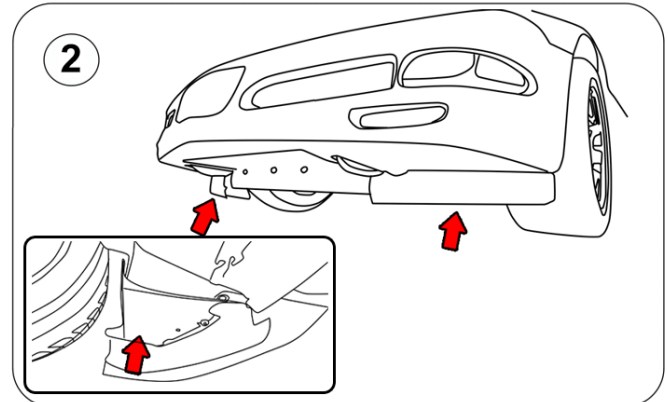


2.- Remove the pair of air dams located below at the front bumper fascia, Then remove the Plastic liners behind the pair of air dams.

*Note: Plastic liners will be reinstalled after installing the spoiler.*

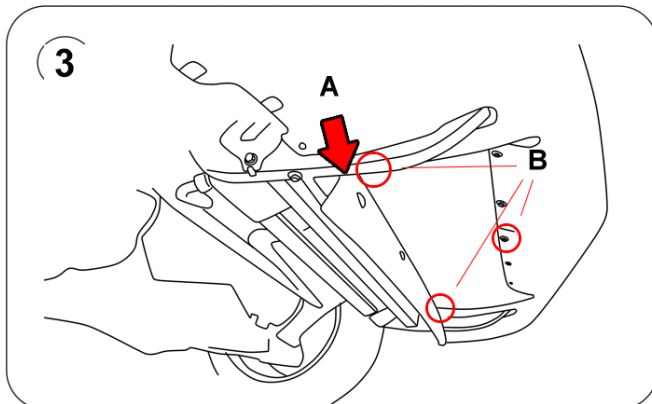

3.- Locate the middle air dam and remove it from the car by unscrewing the two bolts located at each side of the air dam (A), this part is removed to facilitate the removal of the two screws that are located in front of the air dam screws.

B- Remove the middle front screw and the two screws located in front of the middle air dam, these are used to mount the splitter later on.

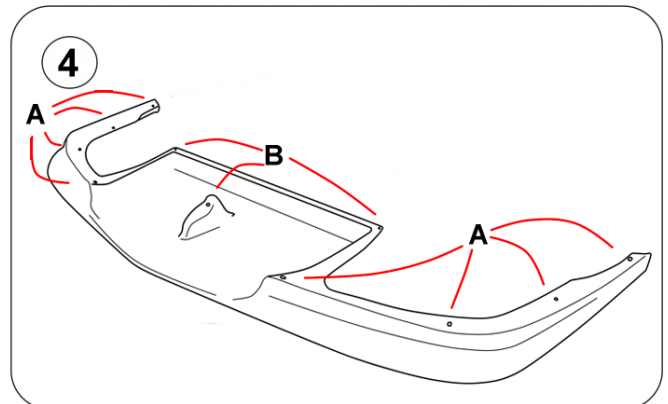

4.- Locate the 8 pre-drilled holes that are situated on the splitter's inner flange (A) these holes will serve as a template to mark the drilling points on the front bumper fascia later on.

B- The center and rear pre-drilled holes are the ones that will be used to attach the splitter to the front bumper fascia using the screws illustrated on "Step 3-B"

# C7 CARBON - INSTALLATION GUIDE

BRAND Chevrolet MODEL Corvette C5


YEAR 1999 - 2004

PART NAME Vented Front Splitter for [99-04] C5 Corvette

PART NUMBERS C7-CCC5-V-FS-CF


C7-CCC5-V-FS-FRP

C7-CCC5-V-FS-GB

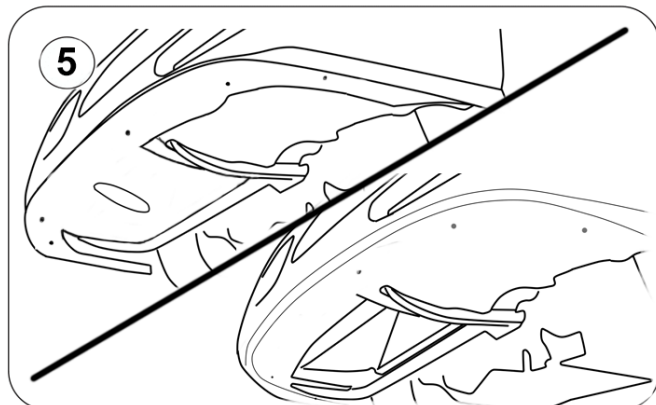


5.- Using the Splitter's pre-drilled holes as guide-lines, mark the front bumper fascia with any marking material. (double-sided tape can be used to temporary mount the splitter to the front bumper fascia)


Remove the front splitter and drill the holes on the corresponding marked dots.

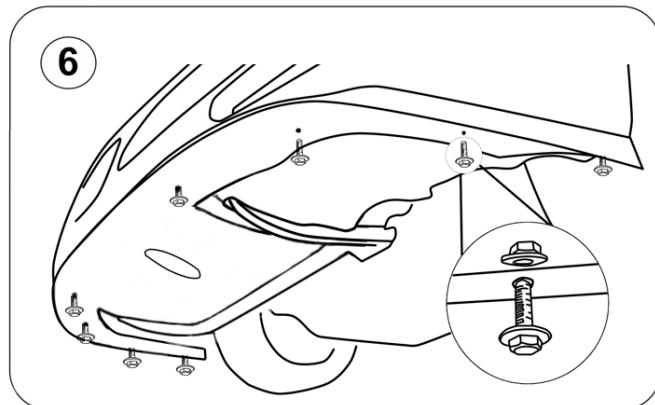

6- Mount the splitter using the provided bolts

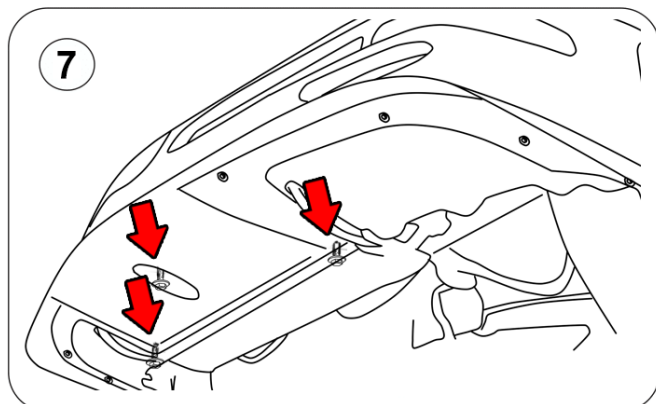

7.- Place the 3 OEM screws that are located on the center and the rear of the splitter's under tray

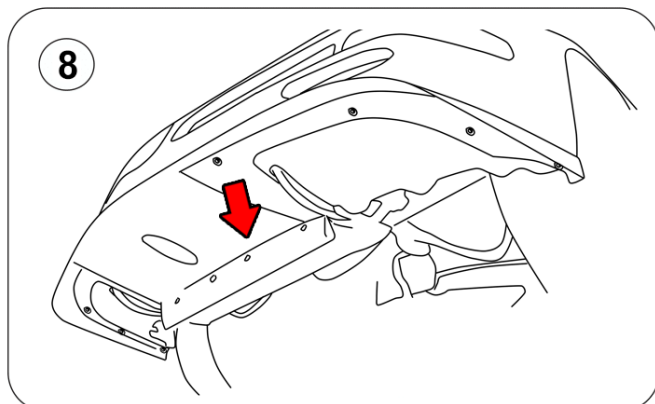

8- Finish the installation by mounting the previously removed middle and side air dams.