



C7 CARBON INSTALLATION GUIDE

BRAND *Chevrolet* **MODEL** *Corvette C6/GS/Z06/ZR1* **YEAR** *2005-2013*
PART NAME *REAR SPOILER - EXTENDED*
PART NUMBERS *C7-CCC6Z-RSE-FRP*
C7-CCC6Z-RSE-CF



www.C7carbon.com

C7 CARBON - INSTALLATION GUIDE

BRAND Chevrolet **MODEL** Corvette C6/GS/Z06/ZR1 **YEAR** 2005-2013


PART NAME REAR SPOILER - EXTENDED

PART NUMBERS C7-CCC6Z-RSE-FRP
C7-CCC6Z-RSE-CF

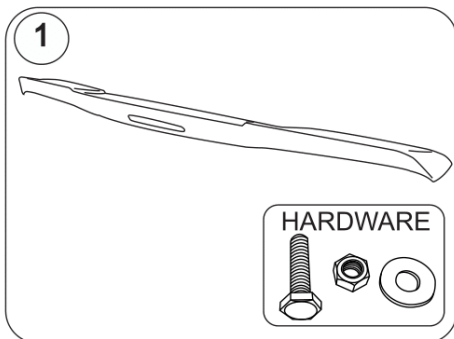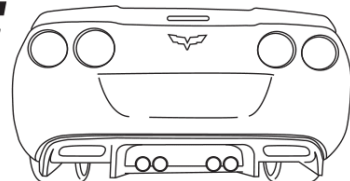


1.- Parts received in this package:

- 1x Rear Spoiler - Extended version
- 2x Hex Bolts
- 4x Hex Nuts
- 6x Washers

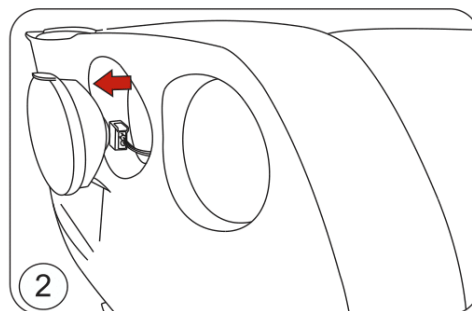


2.- Remove the four brake lights from the car.

NOTE.- OEM hardware will be re-used to reinstall the lights once the spoiler is installed.

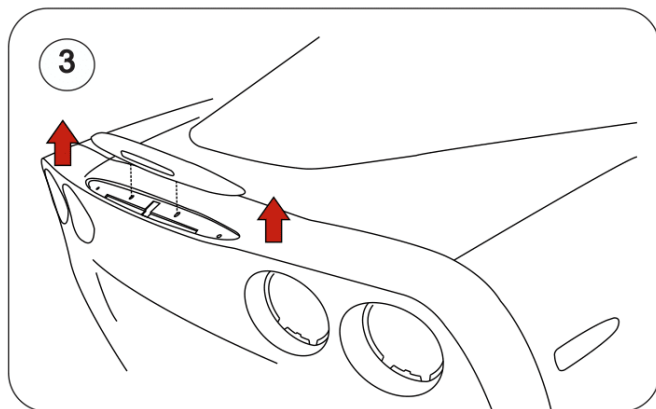

3.- Reach through the bumper's break light holes and under the spoiler section, loosen up the spoiler hardware that secures it on the car until you detach the OEM spoiler.
- Make sure to disconnect the 3rd (aka "5th") break light located inside the OEM spoiler.

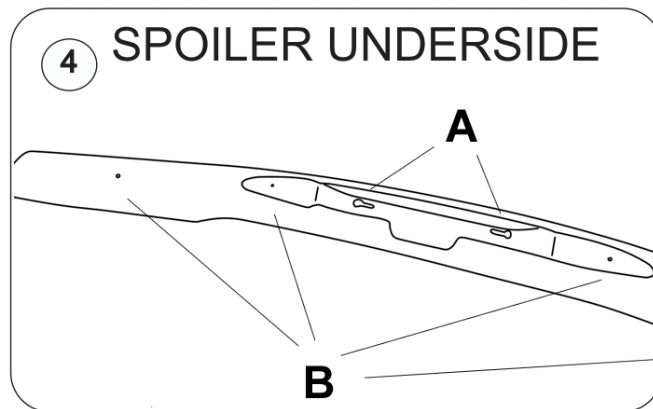



7.- Locate the 4 predrilled holes (B) underneath the spoiler, also locate the two holes (A) that will secure the nuts that are used to mount the brake light.

C7 CARBON - INSTALLATION GUIDE


BRAND Chevrolet **MODEL** Corvette C6/GS/Z06/ZR1 **YEAR** 2005-2013

PART NAME REAR SPOILER - EXTENDED


PART NUMBERS C7-CCC6Z-RSE-FRP
C7-CCC6Z-RSE-CF

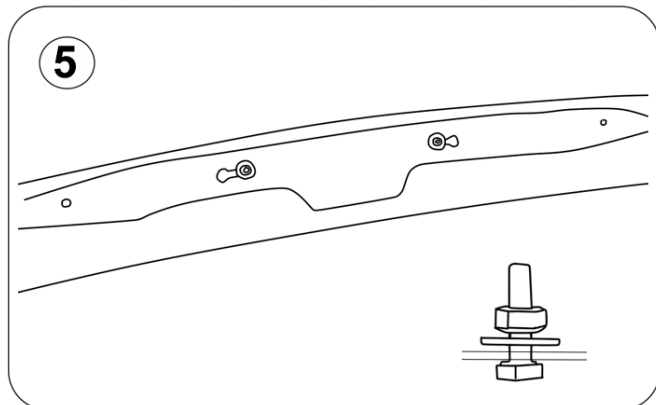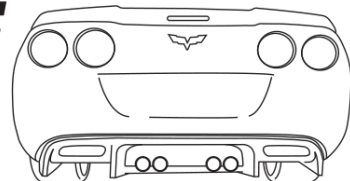

5.- Insert the screws at the holes in the underside of the splitter with the head of the screw facing inside, secure the screw with a nut and washer.

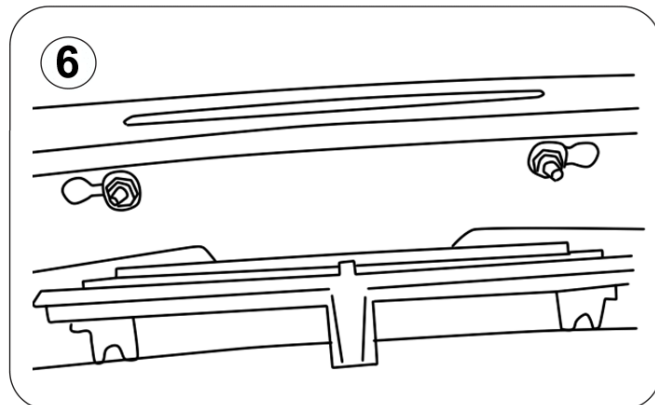

6.- Carefully mount the brake lights into the spoiler making sure you align the screws into the brake light mounting points.

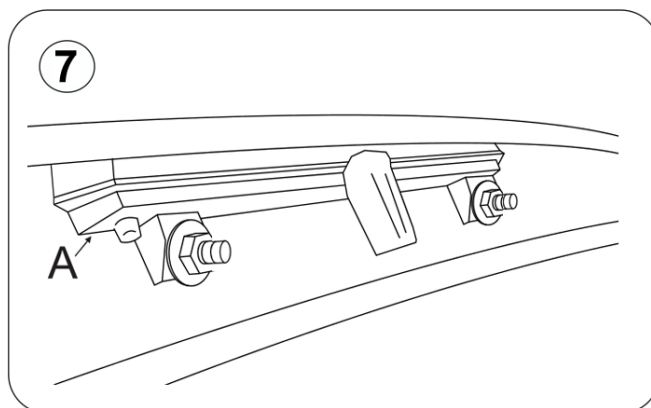



7.- Secure the brake lights with a nut and washer.

C7 CARBON - INSTALLATION GUIDE

BRAND Chevrolet **MODEL** Corvette C6/GS/Z06/ZR1 **YEAR** 2005-2013

PART NAME REAR SPOILER - EXTENDED

PART NUMBERS C7-CCC6Z-RSE-FRP
C7-CCC6Z-RSE-CF

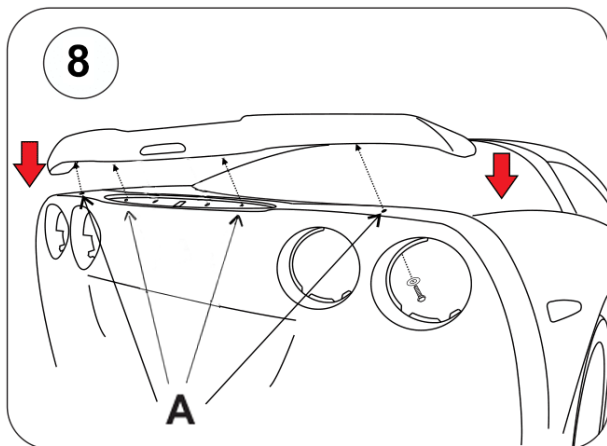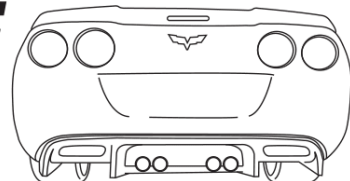


8.- You will need to drill a hole on each side of the bumper (Section **A**) to match the pre-drilled holes on the Rear Spoiler outboard. Test fitment/placement is recommended before drilling, using a piece of chalk or crayon inside the spoiler pre-drilled holes can help mark the correct drilling spots on the bumper during the test placement.

Once spoiler is in place:

A.- Place the bolts through the bumper holes previously drilled, make sure to use a washer for each bolt

NOTES.- Holes on the bumper can be slotted for easier fitment during spoiler installation. Double sided tape can also be used as an additional securing method.

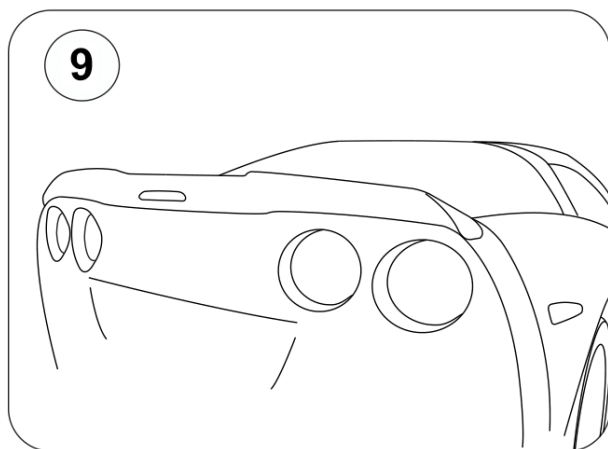

9.- Once the Rear Spoiler is properly attached to the vehicle. Reinstall the brake lights re-using the OEM hardware.

