



C7 CARBON INSTALLATION GUIDE

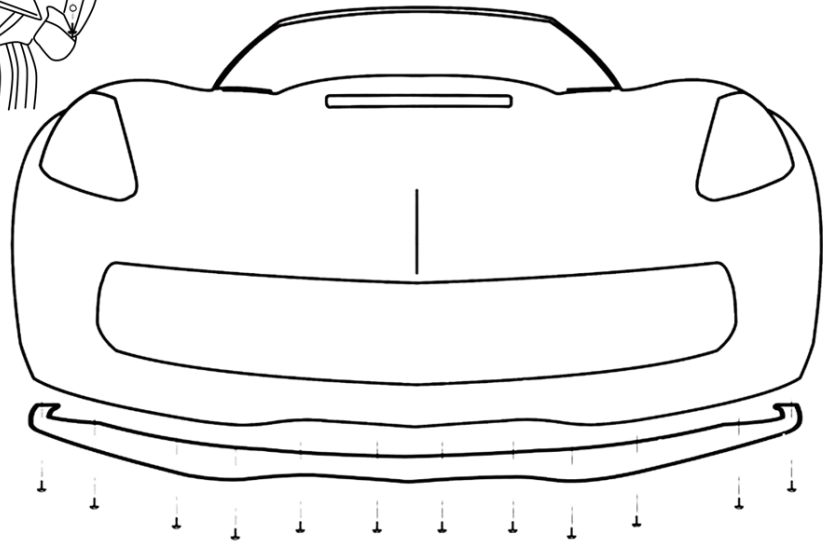

BRAND Chevrolet **MODEL** Corvette C7
PART NAME GTX Front Splitter Z06 Front Splitter
PART NUMBERS C7-CCC7-GTX-FS C7-CCC7-Z06-FS

YEAR 2014 and up

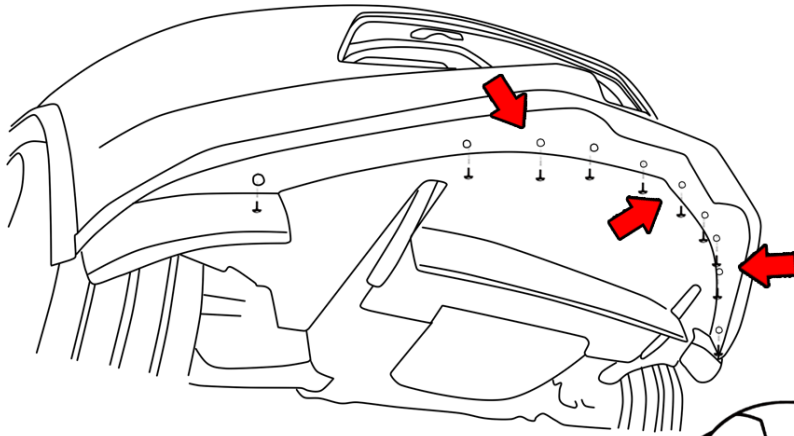

- Lift the vehicle at a safe and comfortable height.
- If vehicle is equipped with a factory Front splitter, the splitter will need to be removed, some mounting points on the factory splitter may be attached with pop rivets which will need to be drilled out.
- Remove the size 7 bolts from the vehicle's factory mounting points located at the bottom of the front bumper fascia, the Front splitter's pre-drilled holes can be used as reference to determine the mounting point location on the bumper.
- After removing the bolts, the plastic air dams located on the sides can be removed to make way for the Front splitter.
- Place the Front splitter, matching up it's pre-drilled holes with the vehicle's mounting points.
- Attach the Front splitter re-using the factory bolts that were previously removed.

PLEASE NOTE: All parts must be prepped and installed by a professional body shop that has experience working with carbon fiber and fiberglass car parts including but not limited to cutting, filling, sanding and shaving. Extra fees can be incurred for proper fitment. All parts are sold for off-road and show use only. We do not accept liability for injuries resulting from customization of buyer/owners car, this is done at their own risk. You, as the buyer, are responsible for complying with any/all local, state, and federal laws.