

2015+ Dodge Charger / Challenger V8 MRT Street Race Exhaust – Resonator Delete

Part No. 90G160, 90G160C



Materials Included:

STOP – Verify that all of the following components are included in kit before beginning installation:

Qty (2) – 3" mid muffler delete tubes

Qty (4) – 2 3/4" Clamps

Required Tools:

Safety Glasses

Measuring Tool

Marker

Cutting Tool

15mm Deep Socket

13mm Deep Socket

Ratchet

Warranty Information

IMPORTANT – The warranty on this product is VOID if the product is not properly installed, or has been modified or altered in any way. If you believe that modification will be required to fit an MRT Exhaust System on your vehicle, **please contact** MRT for assistance **BEFORE** making any modifications to the system.

Begin with removing the factory mid muffler:

1. **Measure 1 ¾ to 2 inches forward from the front face of the muffler, mark a line to be cut. Do this for both the passenger and drivers side, see figure #1**



Figure 1

2. **Cut the rear of the muffler off just past the point where the tube is welded to the front of the muffler. See fig 2 and fig 3**



Figure 2

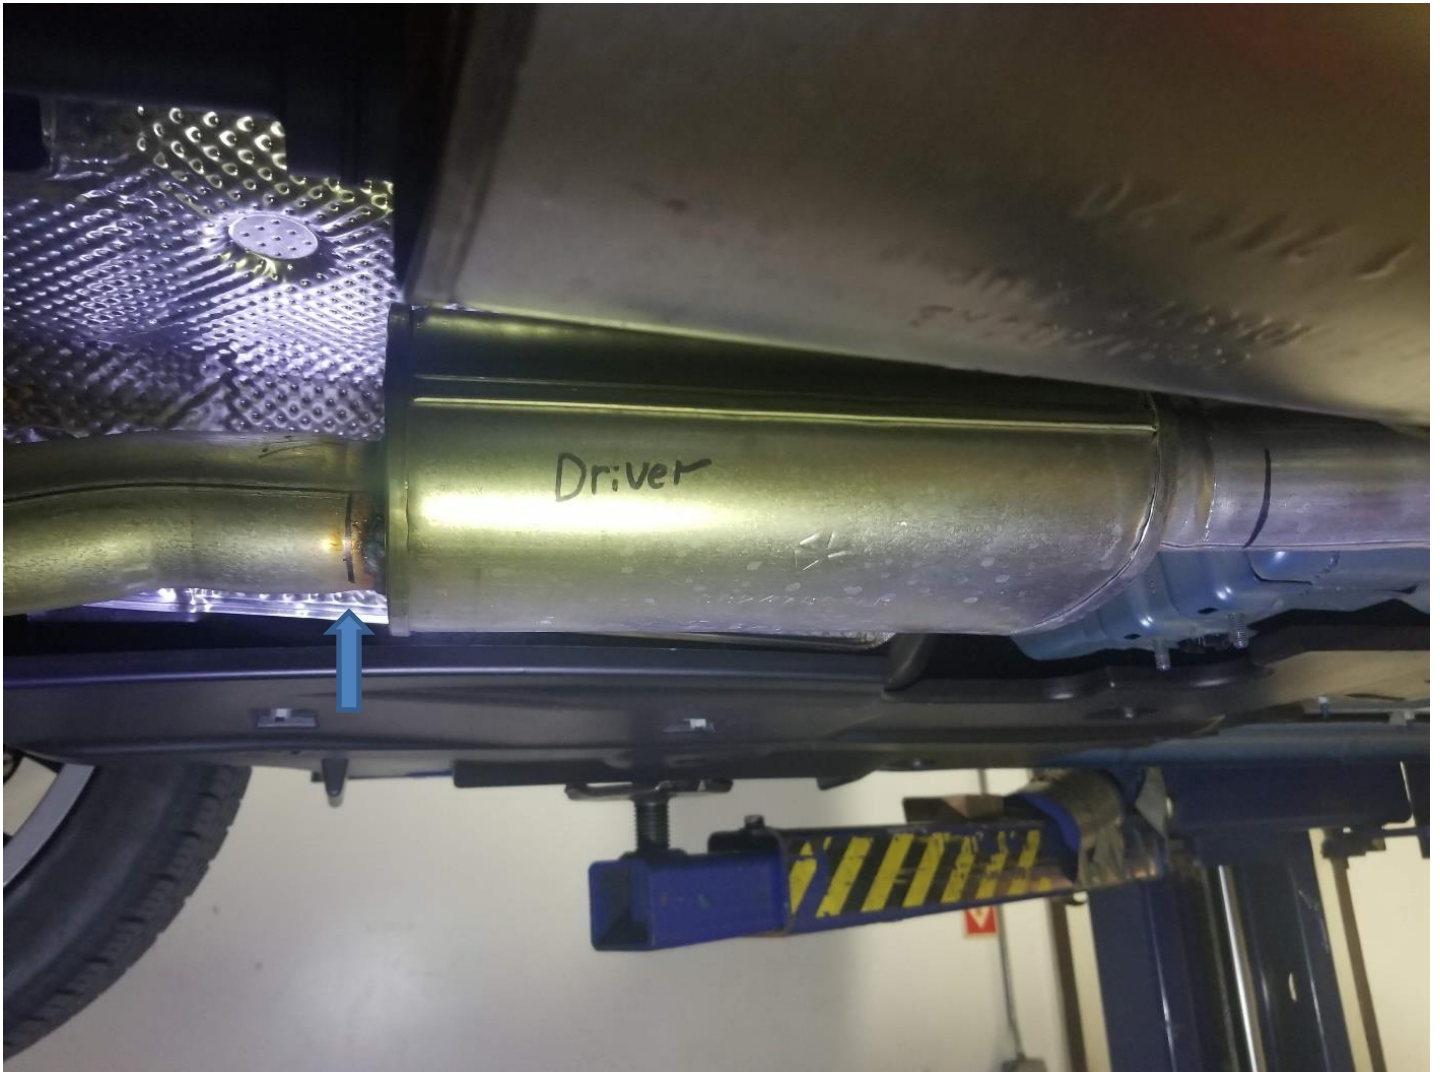


Figure 3

3. With a file clean burr off of tube edges. See Figure 4

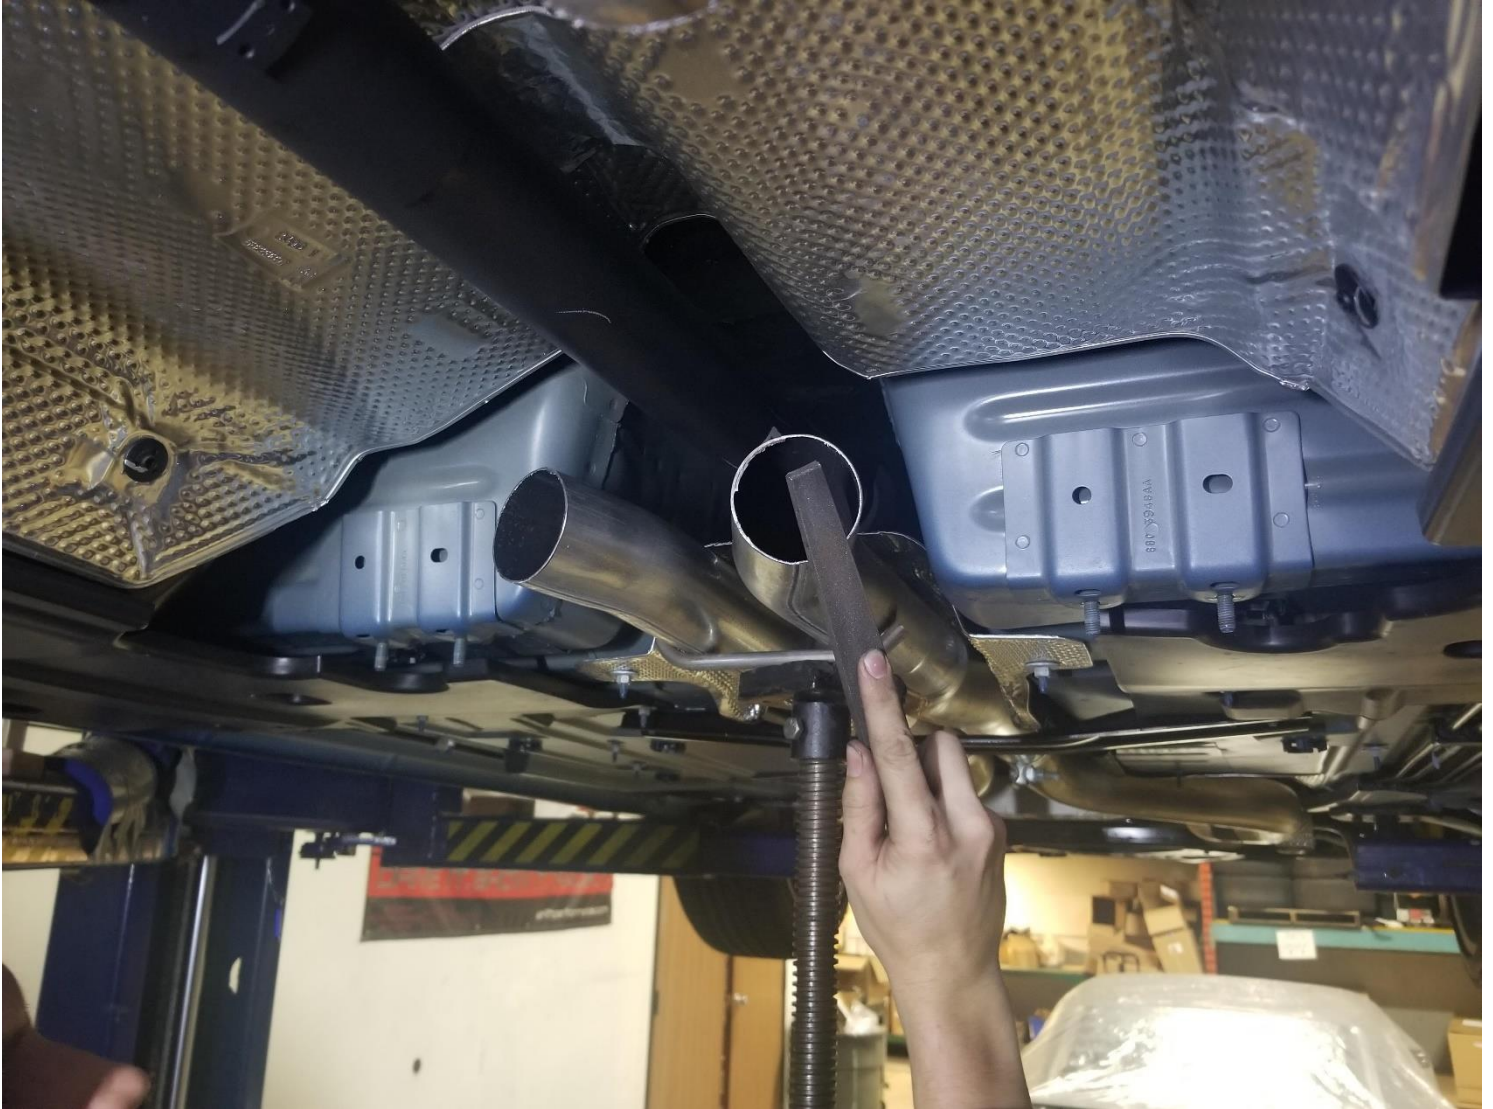


Figure 4

4. Install drivers side tube and passenger side tube as shown in figure 5

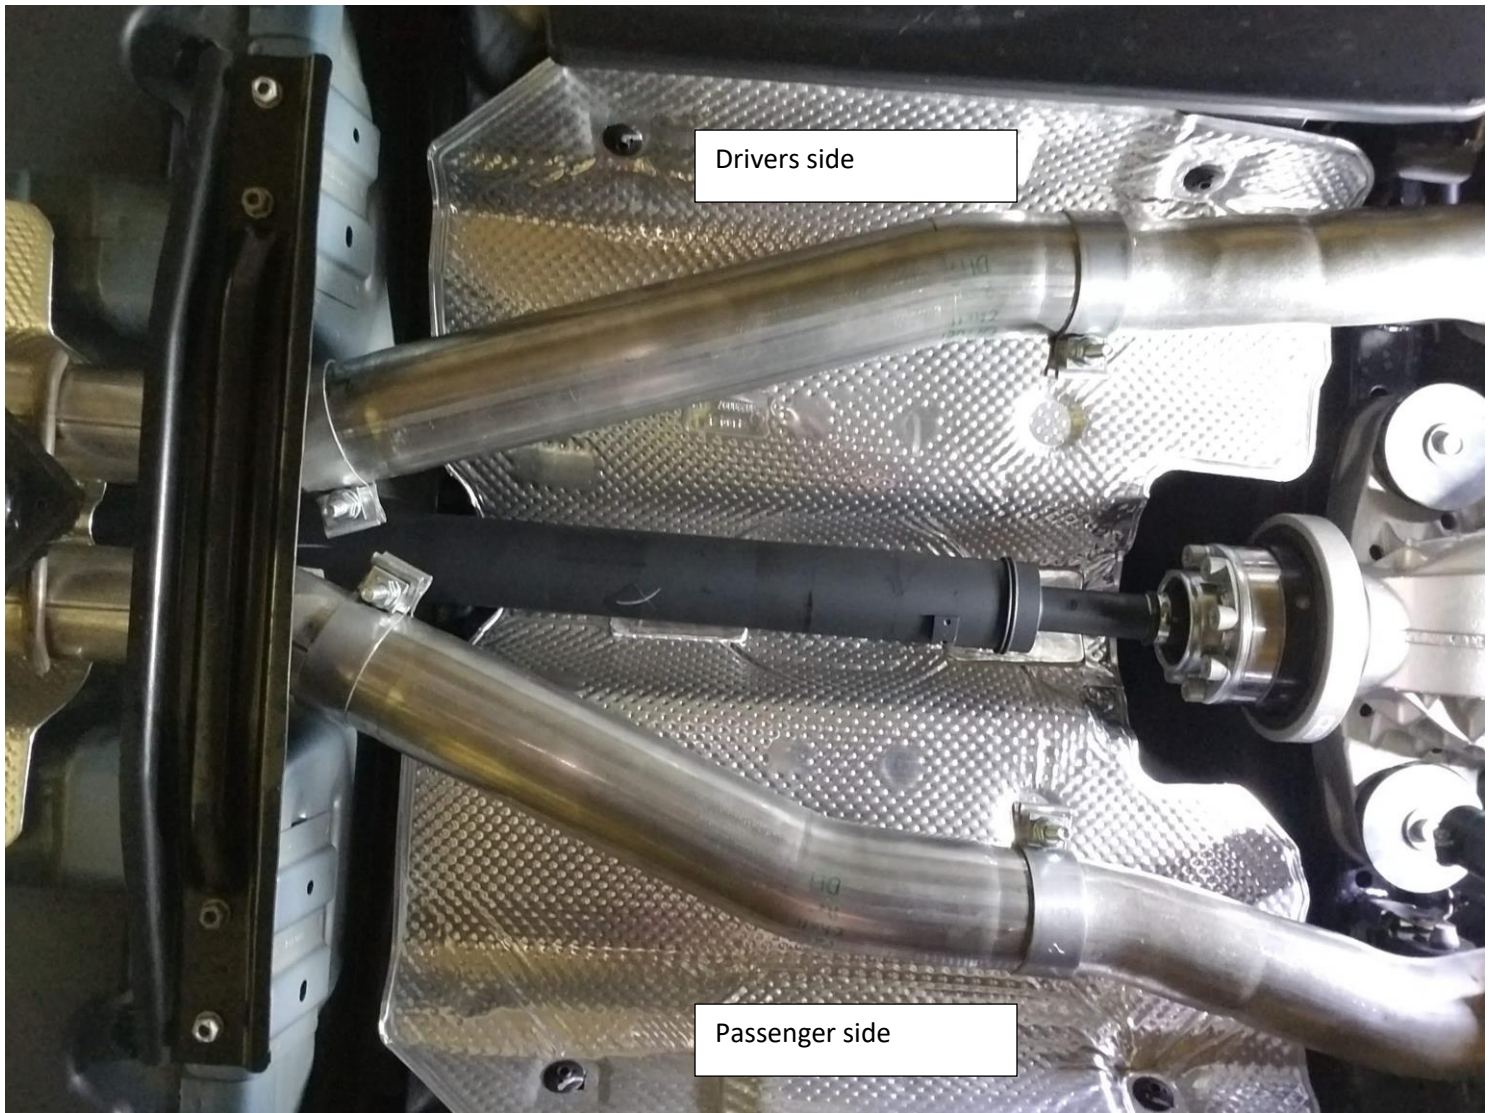


Figure 5

During vehicle operation heat cycles tubing will expand and contract, because of this we suggest checking all clamps re-tighten if necessary after 30 miles of driving vehicle.

MRT appreciates your business; please feel free to contact us at any point with questions or concerns at 734-455-5807 or via email at Sales@MRT-Direct.com