

2022 Civic Type R Axle Back

Part No. 97Z100



Hardware:

1x Exhaust Hanger Bracket

1x 2.5" Band Clamp

1x -5/16x3/4" Bolt

2x - 5/16 Washer

1x 5/16 Lock Washer


Required Tools

Safety Glasses
Penetrating Lubricant
Lubrication Solvent
Ratchet /Socket Set

Warranty Information

IMPORTANT – The warranty on this product is VOID if the product is not properly installed, or has been modified or altered in any way. If you believe that modification or alternate installation method will be required to fit an MRT Exhaust System on your vehicle, **please contact** MRT for assistance **BEFORE** making any modifications to the system.

Removing the factory exhaust system:

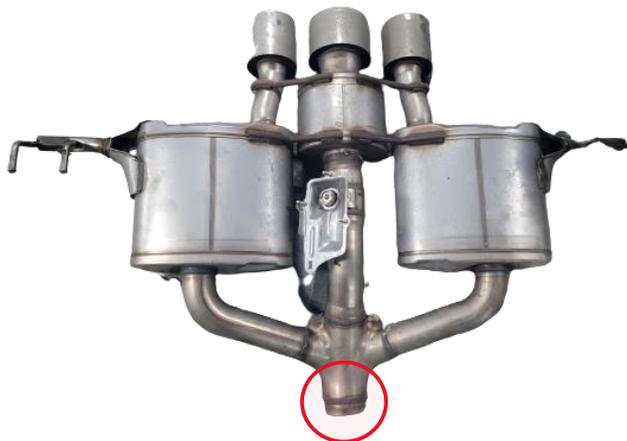

STEP #1: Locate the cut point on the under-axle tube. Mark the cut point 5/8" of an inch before the weld on the stock exhaust. (Circled in red above, and shown below)



Step #2: Use a Sawzall to cut the factory exhaust.

Step #3: Disconnect the active valve electronic connector from the exhaust. Locate and remove the exhaust hangers from the rubber hang points on the vehicle.



Step #4 – Secure the electronic valve connector in a safe spot away from any moving components.

Installation

Step #1 – A new hanger location will need to be installed. Locate the hanger/bracket, bolt, washer and nut provided with the kit.

Step #2 – Above the exhaust exit under the rear of the car is a bracket with two holes. Using the bottom hole bolt on the next exhaust hanger/bracket onto the vehicle using the bolt ,washer and nut. Once installed reuse a rubber isolator from the original hanging points closest to the bumper. Make sure to push the isolator all the way on.



Step #3 – Slide the exhaust hanger located over the tips into the newly installed rubber isolator. (Circled in green below)

Step #4 – Place the inlet of the axle back exhaust onto the factory exhaust as well as placing the last two hangers into the factory rubber isolator points. (Circled in red)



Step #5 – Tighten the exhaust clamp connection between the factory exhaust and your new Street Race Axle Back.

Your system has now been installed. Test drive the vehicle for 20-30 minutes and double check your clamp is still snug.

MRT appreciates your business; please feel free to contact us at any point with questions or concerns at 734-455-5807 or via email at Sales@MRT-Direct.com

