



# UM RENEGADE 125 '19

UORN19IF



 <b>1</b> 262547 x1 → 262548 x1 ←	 <b>2</b> 262549 x1 → 262550 x1 ←	 <b>3</b> 202878 x1 → 202879 x1 ←	 <b>4</b> 304127 x2 3,5 x 13	 <b>5</b> 304169 x4 M8 x 50 Din 7380	 <b>6</b> 303045 x4 Ø8	
 <b>7</b> 260523 x2 Ø16 Ø9 x 25	 <b>8</b> 260817 x2 Ø14 Ø9 x 27	 <b>9</b> 260648 x6 Ø16 Ø9 x 5	 <b>10</b> 304071 x2 M6 x 50 Din 912	 <b>11</b> 303017 x4 Ø6	 <b>12</b> 302021 x2 Ø6	 <b>13</b> 260695 x2


**ATTENTION: NOT INCLUDED IS THIS KIT**

## ! WARNING!

GB

Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

**ATTENTION:** For a full equip assembly, mount the 3P System after the Top Master.

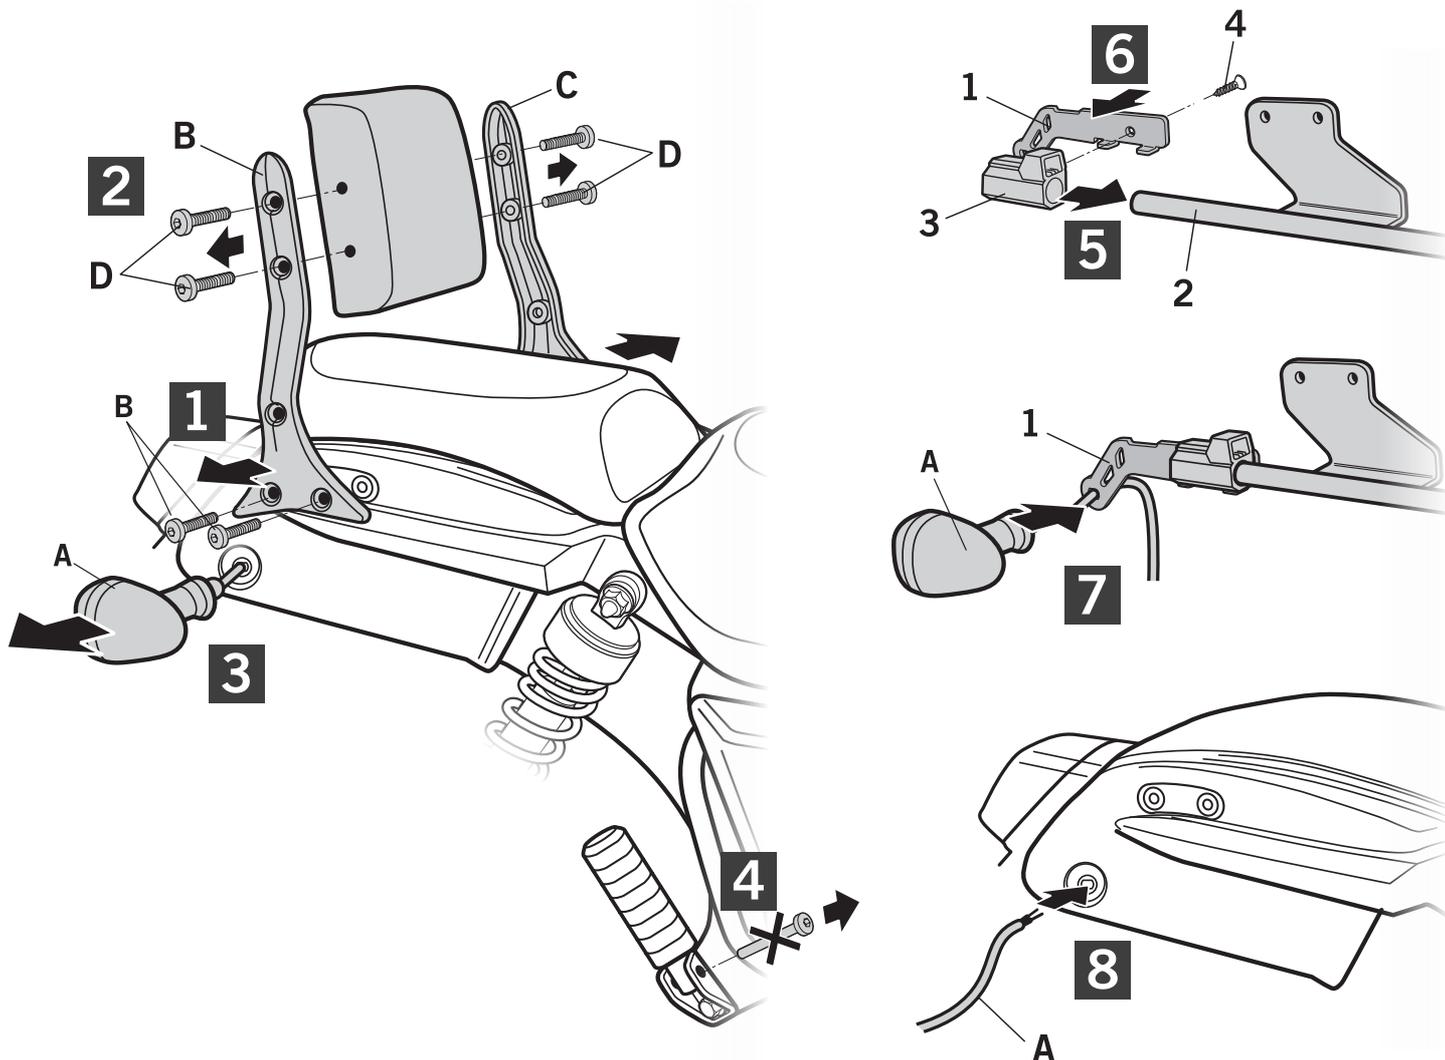

**IMPORTANT:** Based on European models.

