

## Ford Focus ST 280 FMBGFK21 FITTING INSTRUCTIONS




Please thoroughly read through and familiarise yourself with these instructions in their entirety prior to beginning any part of the installation process of any component. Please also ensure the vehicle and engine has cooled down sufficiently to avoid risking possible skin burns or other injury.


## **TOOLS NEEDED:**

Side cutters & pliers/ sharp blade

1. Open the bonnet of the vehicle and undo the M6 fastener attaching the engine cover to the engine using a 10mm socket and rachet. Pull the engine cover upwards to remove it completely.

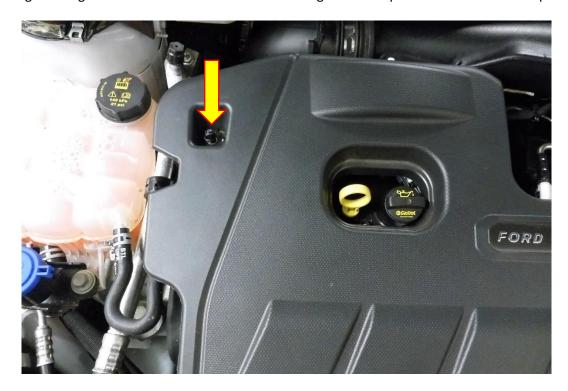

2. Remove the vacuum pipe located at the front of the inlet manifold. Push the green button inward and pull the pipe away at the same time, this will allow the vacuum pipe to come away.

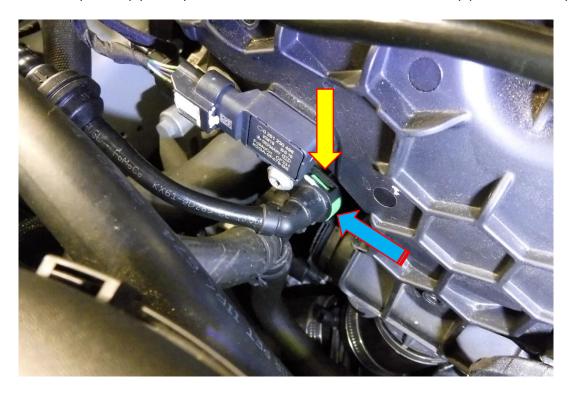

3. Take the supplied vacuum T piece adaptor and insert the smaller end into the vacuum pipe removed in the previous step. Now re fit the vacuum hose and adaptor back into place, once pushed as far as it will go, lock into position with the supplied retaining clip.



 Route the vacuum hose to your preferred location then follow steps 1-2 in reverse order to complete your installation and take your vehicle for a test drive and enjoy your new Forge Motorsport product.

Forge Motorsport accept no liability for invalidation of your manufacturer's warranty or failure of any component or part due to incorrect installation of Forge Motorsport products.

## Check and <u>WWW.FORGEMOTORSPORT.COM</u>

For a full range of performance products for your vehicle.

As always, with any questions or concerns about this product or anything else, please feel free to contact your local or preferred Forge Motorsport Dealer/Installer, or you may contact us directly.

Forge Motorsport UK – (+44)1 452 380 999/info@forgemotorsport.co.uk

Forge Motorsport US – (407)-447-5363/sales@forgemotorsport.com







www.facebook.com/forgemotorsport