



AXIAL

Installation Instructions for LED Reverse Light 15-17 Mustang

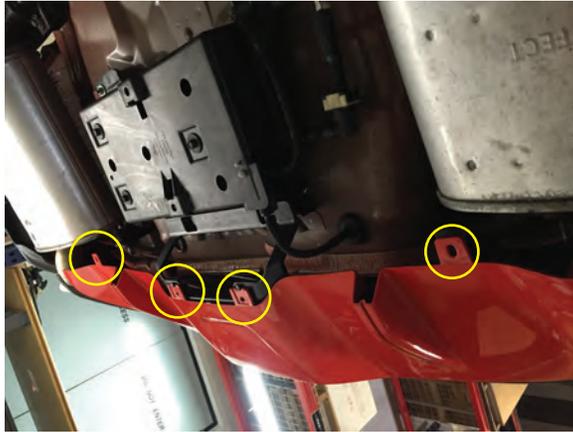


Step 1

Begin by removing the (2) screws and (2) clips securing the lower bumper valence.

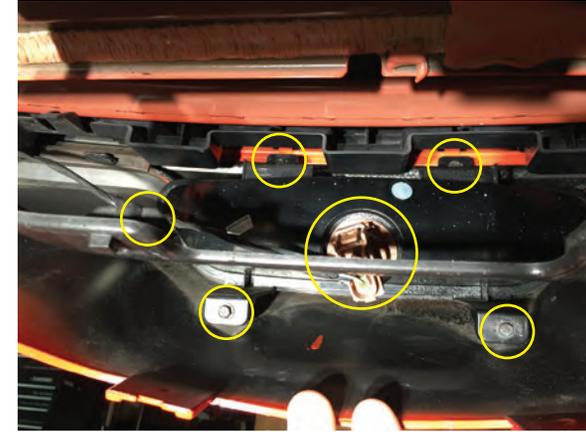

Step 2

Pull the valence down to gain access to the (4) factory reverse light screws (7mm). Un-clip the plug on the factory light and remove the harness from the housing. Install the Axial light the same way the stock light came out.

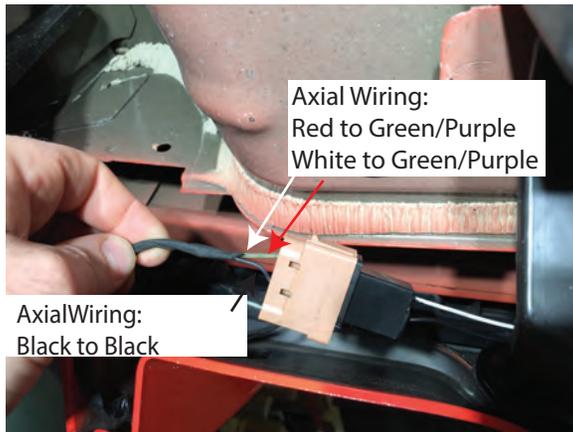

Step 3

Connect the Raxiom wiring to factory wiring harness as follows:

Factory Wiring Harness:
Black
Green w/Purple Stripe


Axial Wiring:
Black
White Wire



Step 4


Locate the body grommet on the bottom of the trunk. Carefully pierce only the body grommet so that you can feed the yellow and red wires from the reverse light into the trunk.

Installation Instructions for LED Reverse Light 15-17 Mustang

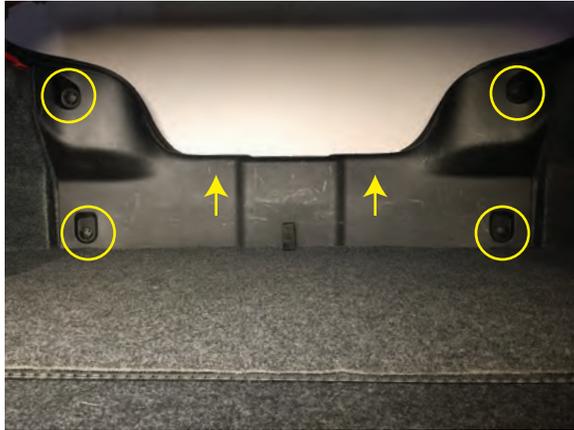


Step 5

Remove the (4) twist on fasteners holding the trunk panel in place. Then apply slight upward pressure to remove the panel from trunk.

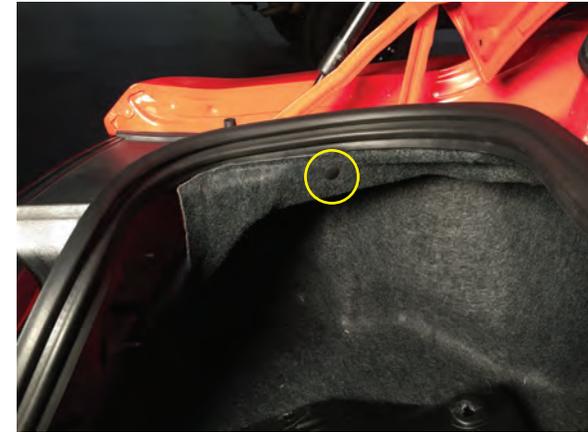


Step 6

Using a panel removal tool or pliers, remove the plastic clip holding the trunk liner in place.

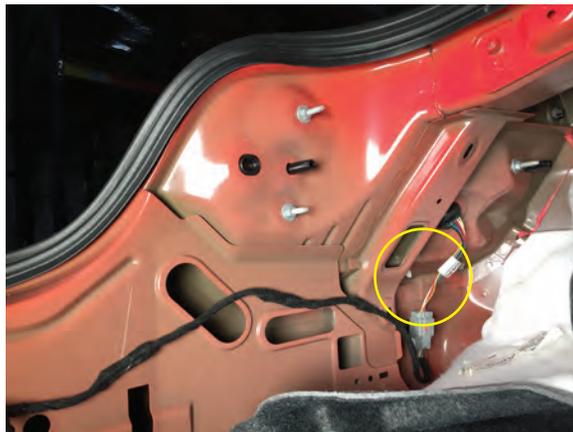

Step 7

Fold back the trunk liner and locate the driver side tail light harness. Unclip the harness for easier access to the wiring harness.

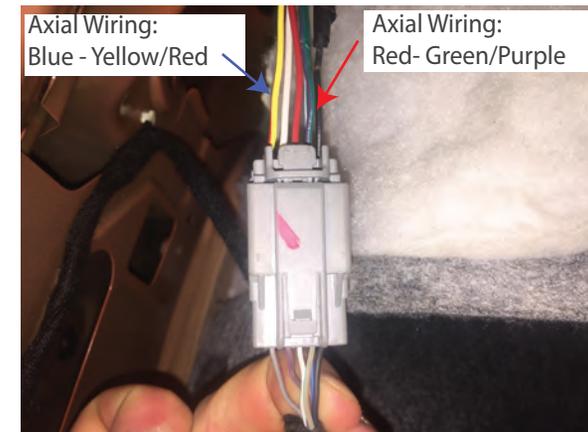

Step 8

Using the t-tap wire splices, tap the following wires:

Factory Wiring Harness	-	Axial
Green/Purple	-	Red
Yellow/Red	-	Blue