

# AXIAL

## Installation Instructions for 2015 - 2017 Mustang Rear Diffuser Lights

### Contents:

(2) LED Diffuser Lights  
(4) Zip Ties

### Tools Required:

Jack & Jack Stands or Lift  
10mm Socket

Ratchet  
Cleaning Solution & Towel  
Wire Crimpers

Electrical Tape




### Step 1\\

Carefully support the vehicle using a jack & jack stands, or a lift. Once the vehicle is properly supported, locate and remove the 10mm nut securing the rear diffuser reflector in place. Then apply firm pressure on the tabs to release the deflector from the diffuser.



### Step 2\\

Using a cleaning solution and a clean towel, clean the surface where the deflector was in place from any road debris.

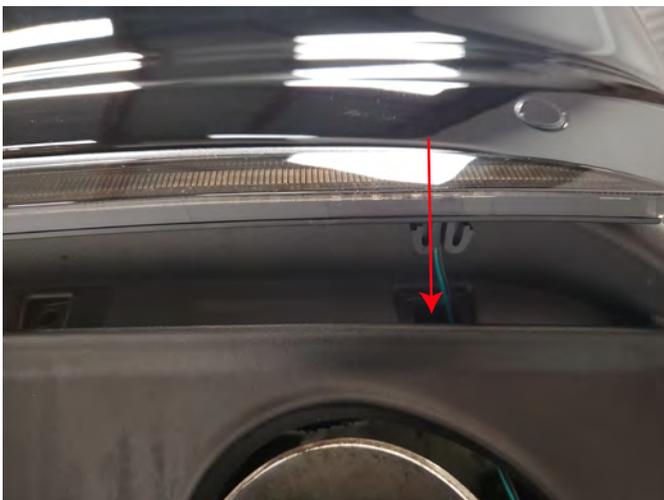

### Step 3\\

Insert the new Axial light and wiring through the factory diffuser hole making sure the light clips into place. Then using the factory nut from Step 1, secure the new Axial light into place.



### Step 4\\

Locate the rear side marker light harness, and splice the new Axial diffuser lights into the factory side marker light harnesses. Splice the 12+ volt Green wire from the Axial light to the White w/Purple stripe wire from the factory side marker light. Then splice the 12- volt Black wire from the Axial light to the Black wire from the factory side marker light. Zip tie any extra loose wiring away from damage that could occur.

PRODUCT SKU: T542656



**Step 5\**

Test the lights for proper function. Installation is now complete.