



Smoked / Clear LED Turn Signals (07-18 JK)



Step 1\\

Access the connectors on the rear of the turn signals from the wheel well. The turn signal clips have a red locking tab, first slide the locking tab out. Then depress the clip to remove the signal plug.



Step 2\\

Using a panel removal tool, remove the (6) push clips holding the grille cover to the vehicle. Unplug the turn signals and pull the grille cover from the vehicle.



Step 3\\

Remove the factory turn signals by unclipping them from the factory grille.




Step 4\\

Mount the resistor to the frame using the supplied adhesive. ****Note: The ballast will get hot. Keep away from anything that may cause damage.**



Step 5

Locate the front side marker light wiring harness. Run the red 12v+ wire from the turn signal light, and splice into the white/green marker light wire.

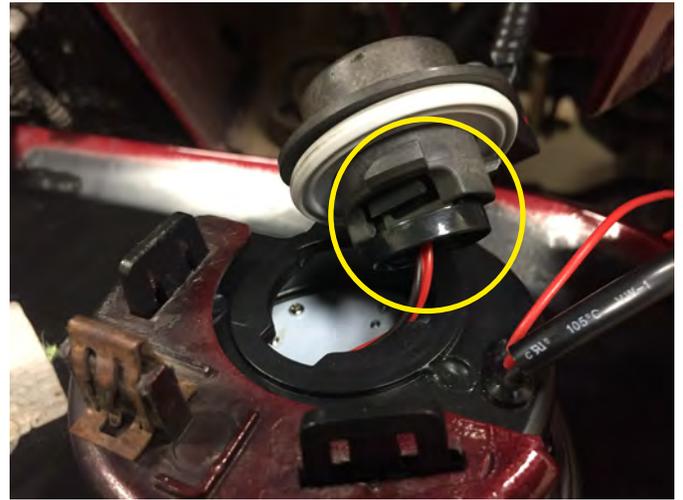

Step 6

Connect the LED turn signal harness into the factory turn signal socket. Twist the socket clockwise to tighten.



Step 7

Test the lights before completion. Reinstall the grille.