

## **Contents:**

(2) LED Mirror Lights

## **Tools Required:**

-Flat Head Screw Driver -T20 Torx Bit Screw Driver



## Step 1\\

Begin by tilting the mirror full downward. Using a flat head screw driver, gently depress on the clips holding the glass to the mirror. Then carefully pry the glass away from the mirror. The mirror will dangle, be sure to carefully place it so no damage will occur.



Step 3\\

Unplug the wiring harness from the mirror light, and push in the tab to release the mirror light from the mirror base.

## 2004-2014 Ford F150 LED Mirror Lights - Back of Mirror



Step 2\\


Remove the (3) T20 torx bit screws. Once the screws have been removed, carefully separate the mirror cover from the mirror base.



Step 4\\

Install the new Axial mirror light until it clicks in place.



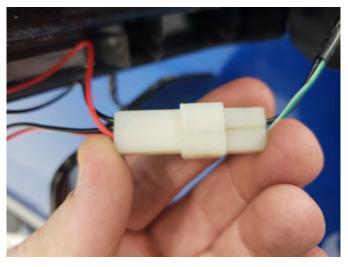

**Step 5\\**Connect the new Axial mirror light harness to the factory mirror light harness.



**Step 6\\**Reinstall the mirror cover, and glass in reverse order.
Installation is now complete.