



THE AUTOMOTIVE LIGHTING BENCHMARK

INSTALL GUIDE

4BANGER REPLACEMENT LENSES



PACKAGE CONTENTS



1X REPLACEMENT LENS

REQUIRED TOOLS


- T10 TORX BIT
- RATCHET
- BLUE THREAD LOCKER (OPTIONAL)

WARNING: IT IS THE INSTALLERS RESPONSIBILITY TO CONFIRM COMPLIANCE WITH STATE AND LOCAL LAWS. BY READING THIS DOCUMENT, YOU AGREE IT IS ONLY TO BE USED AS AN EDUCATIONAL GUIDE. MORIMOTO LIGHTING NOR ITS DEALERS MAKE GUARANTEES ON ANY FINISHED RESULTS, NOR ARE THEY TO BE HELD RESPONSIBLE FOR ANY DAMAGE, MISUSE, OR PERSONAL INJURIES. IF YOU ARE UNABLE TO CLEARLY UNDERSTAND AND ADAPT THE INFORMATION BELOW, PROFESSIONAL INSTALLATION IS RECOMMENDED.



4BANGER REPLACEMENT LENSES

1. START WITH YOUR 4BANGER FACE DOWN. WE RECOMMEND USING A WORK MAT TO PREVENT SCRATCHING YOUR LENSES
2. USING A T10, REMOVE THE 4 SCREWS SECURING THE LENS HOLDER TO THE HOUSING

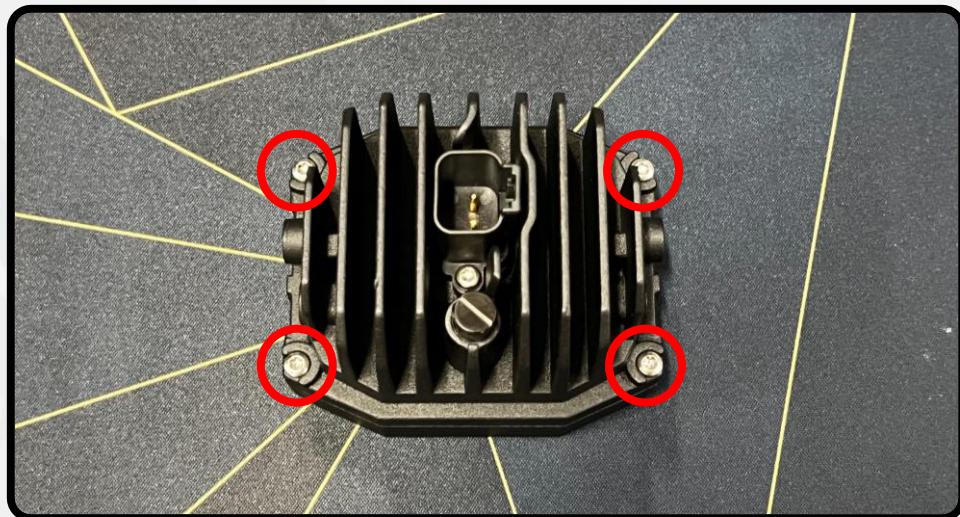


3. FLIP THE POD OVER AND REMOVE THE LENS HOLDER AND LENS. MAKE SURE THAT THE RUBBER LENS GASKET REMAINS IN THE LENS CHANNEL (GREEN), AND IS LAYING FLAT



4BANGER REPLACEMENT LENSES

4. PLACE THE NEW LENS ON THE POD. MAKE SURE THAT THE LENS IS ORIENTED SO THAT THE OPTICS(RED) MATCH UP TO THE LED CHIPS(GREEN)

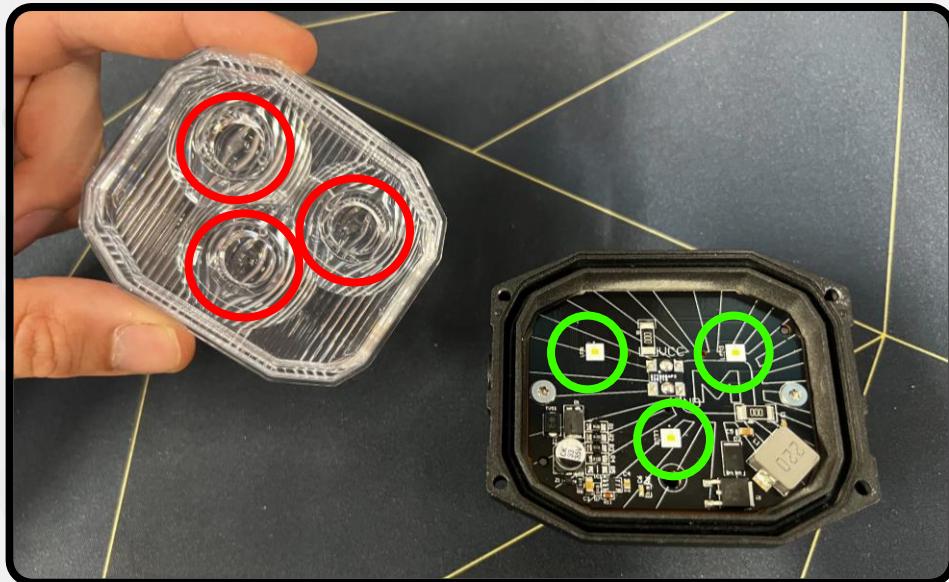


5. PLACE THE LENS HOLDER OVERTOP OF THE NEW LENS. MATCH THE ALIGNMENT LOCATORS ON THE HOLDER TO THE HOLES ON THE HOUSING. THE DESIGN ON THE SIDE OF THE HOLDER AND HOUSING SHOULD MATCH UP AS WELL



4BANGER REPLACEMENT LENSES

6. FLIP THE POD BACK OVER ONTO ITS FACE AND TAKE THIS TIME TO ADD A DROP OF THREAD LOCKER TO THE THREADS OF THE SCREWS IF DESIRED. REINSTALL THE 4 SCREWS INTO THE POD AND TIGHTEN THEM DOWN IN A STAR PATTERN UNTIL HAND TIGHT

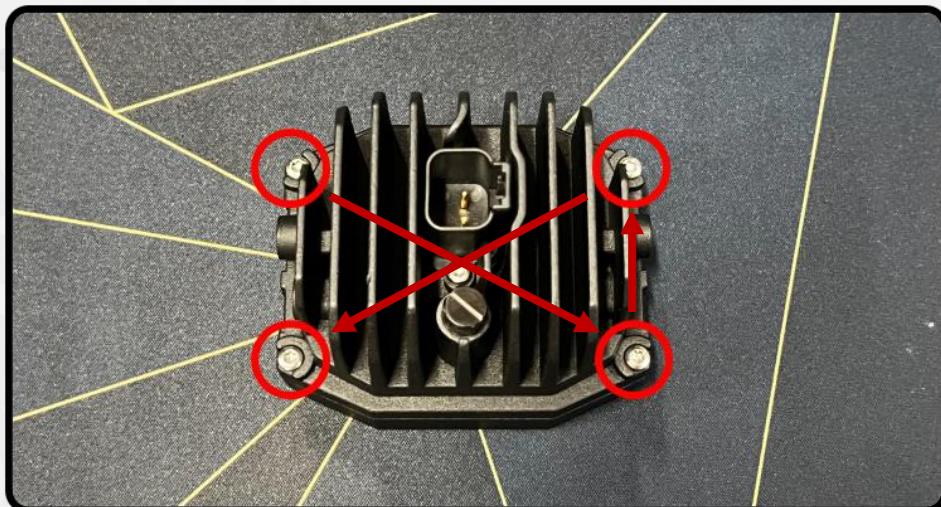

- ENJOY YOUR NEW 4BANGER LENSES! -

