



MAP BRZ86-2G-CBE Install Instructions



What's in the box?

- 1x MAP BRZ/GR86 Front Pipe
- 1x MAP BRZ/GR86 Mid Pipe
- 1x MAP BRZ/GR86 Axleback
- 2x 4.5" Exhaust Tips (options available)
 - 1x 3" V-Band Clamp
 - 1x 3" Exhaust Coupler
 - 1x Anti-seize Packet

Tools needed



You will need:

- 14mm socket
- 10mm socket
- 10mm wrench
- 3/8ths ratchet

Step 1




Remove 2 14mm spring bolts
attaching factory catback to front pipe

Step 2



Remove 2 14mm through bolts
attaching factory muffler to factory
mid pipe

Step 3

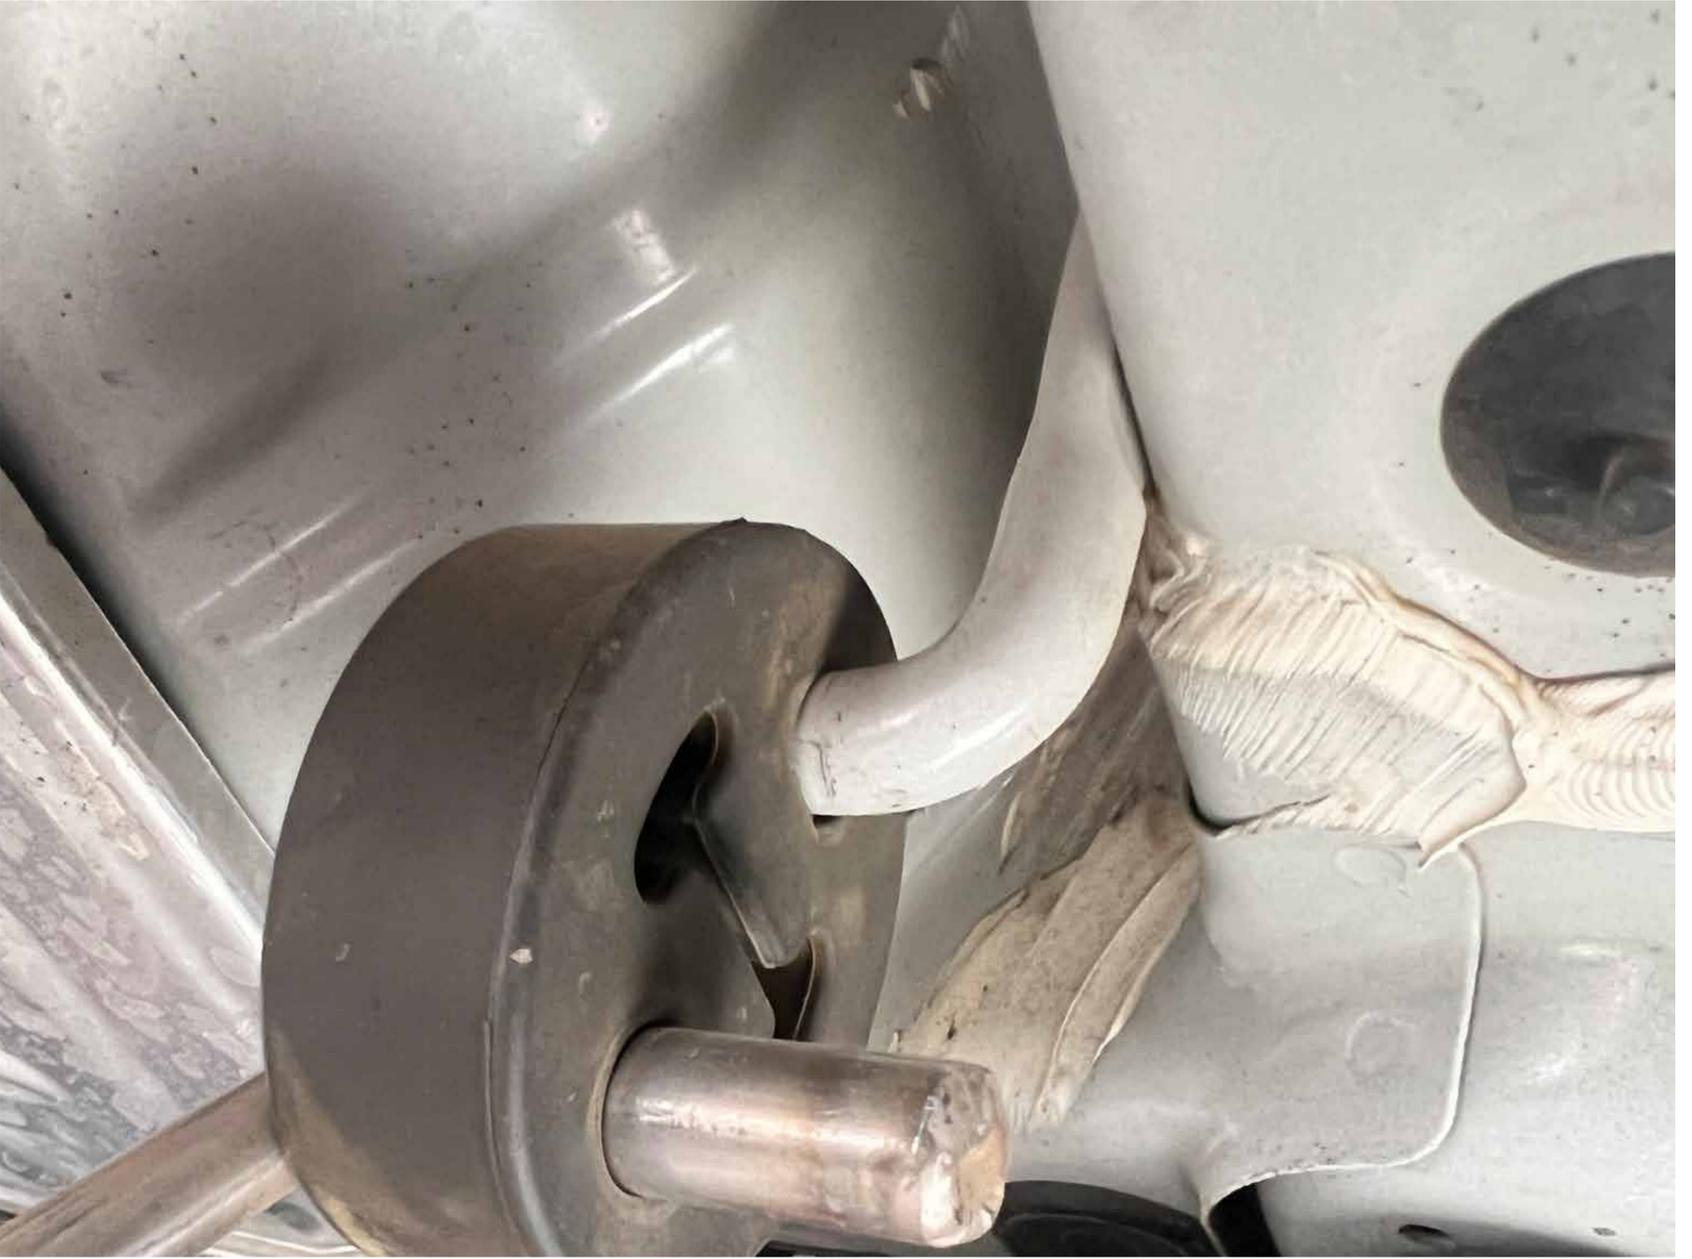

Remove 4 muffler hangers from muffler and remove muffler from car

Step 4



Remove hanger attaching mid pipe to the car and remove mid pipe

Step 5



Install MAP Catback front pipe to downpipe. Do not tighten completely. Install Grimmspeed adapter flange if using factory downpipe

Step 6



Install MAP catback muffler to 4 oem muffler hangers

Step 7



Install MAP catback mid pipe section,
securing it via the oem hanger

Step 8



Install MAP catback mid pipe section, securing it via the oem hanger

Step 9



Attach All pieces of MAP catback with included vband and slip clamp *if you are installing this catback on a gen 1 86, the pipes should be butt-ed up to eachother in the slip clamp, if you are installing on a gen 2 86 there should be a slight gap. The mid pipe hanger should be perfectly straight and give reference for if you have done this right.*

Step 10



Tighten all clamps, working from front to back making sure muffler is centered in the bumper and tip cut outs

Step 11




Once fitment is verified correct, install included slip on tips be sure to use anti seize on threads of tip clamps. Use hand tools to tighten

We hope you enjoy your purchase! Reach out to us with any issues or concerns.



1-888-627-3736

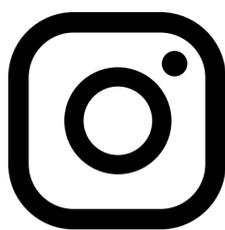

@maperformance



support@maperformance.com



www.facebook.com/modernautomotiveperformance/

