

# INSTALLATION GUIDE

## SUBARU WRX CATBACK

**MAP**Performance.com


### TOOLS REQUIRED:

13mm Deep socket  
14mm Deep socket  
15mm Deep socket  
3/8" Ratchet


### WHAT'S IN THE BOX:

1x MAP WRX Catback Mid Pipe  
1x MAP WRX Catback Y Pipe  
1x MAP WRX Catback Left Muffler  
1x MAP WRX Catback Right Muffler  
2x Slip Clamps  
1x V-Band Clamp  
1x 3" 2-Bolt Gasket  
2x M10x1.25x40mm Bolts  
2x M10x1.25 Nuts

### 1. RAISE VEHICLE

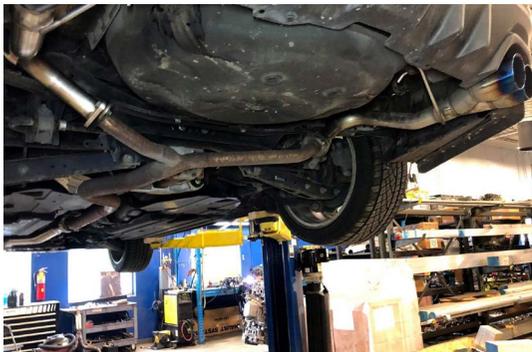

### 2. REMOVE 4 BOLTS HOLDING MUFFLERS IN PLACE

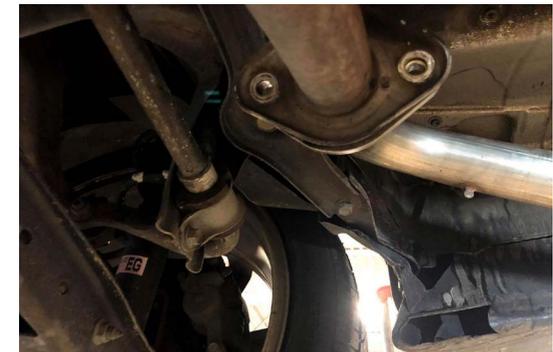

**3. REMOVE RUBBER HANGERS HOLDING THE MUFFLERS TO THE VEHICLE (2 PER SIDE) SET THE MUFFLERS ASIDE**



**4. REMOVE 2 BOLTS SECURING YOUR STOCK Y PIPE TO YOUR DOWNPIPE**




**5. REMOVE RUBBER HANGER SECURING STOCK Y PIPE. SET YOUR FACTORY Y PIPE TO THE SIDE**



**5. CONTINUED**




**6. INSTALL NEW MAP MIDPIPE, SECURING IT WILL INCLUDED HARDWARE AND GASKETS, REINSTALL RUBBER HANGERS**

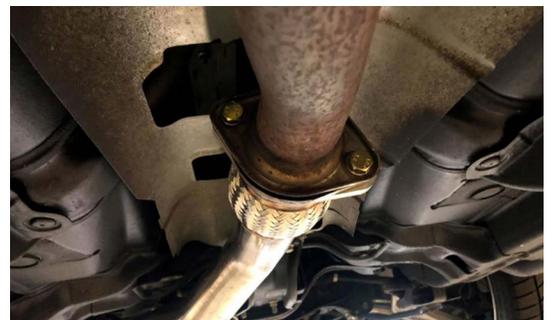

**7. INSTALL NEW MAP Y PIPE, KEEPING THE V BAND LOOSE**




**7. CONTINUED**

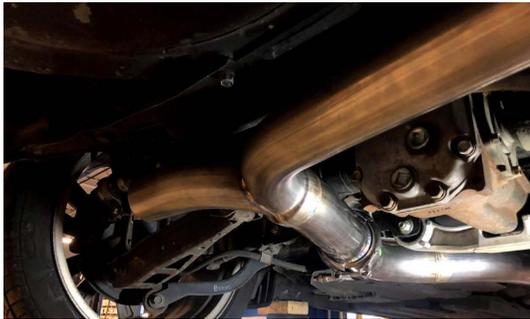

**8. INSTALL MAP MUFFLERS IN PLACE WITH RUBBER HANGERS**



**8. CONTINUED**

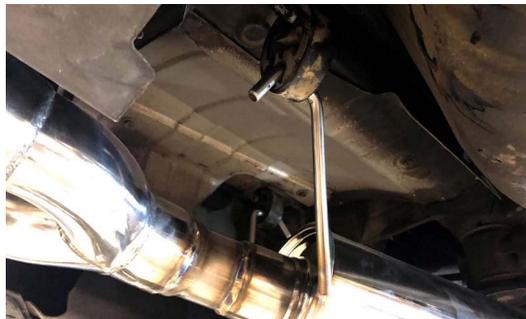

**9. INSTALL SLIP CLAMPS OVER MUFFLERS AND Y PIPE, KEEPING THEM LOOSE**



**9. CONTINUED**



**10. GO THROUGH AND VERIFY FITMENT IS CORRECT AND NOTHING IS CLOKED INCORRECTLY**



**11. TIGHTEN V BAND CLAMP AND BOTH SLIP CLAMPS**



**12. START AND CHECK FOR LEAKS**



**THANK YOU FOR CHOOSING MAPERFORMANCE!**

If you have any problems or concerns during installation of this product, feel free to call or email us:

1-888-MAPERFORMANCE

[sales@maperformance.com](mailto:sales@maperformance.com)

Show us some photos! [@maperformance](https://www.instagram.com/maperformance) / [#maperformance](https://www.facebook.com/maperformance)