



MAP Z-CBE MAP INF-Q60-CBE Install Instructions



What's in the box?

- 1x MAP 2023 Z Y-Pipe
- 2x MAP 2023 Z Axlebacks
- 2x 4.5" Exhaust Tips (Options Available)
- 3x Exhaust Clamps
- 2x 2.5" Exhaust Gaskets
- 4x M10 x 1.25mm Bolts
- 4x M10 x 1.25mm Flanged Nuts
- 1x Anti-Seize Packet

Tools needed



You will need:
16mm socket
14mm socket
3/8ths ratchet

These instructions are applicable to the 2023+ Nissan Z as well as 2016+ Infiniti Q60, these exhausts are slightly different in length but install identically

Step 1




Remove OEM Y-Pipe to downpipe nuts
(x4)

Step 2



Remove lower support brace
(x4 14mm)

Step 3

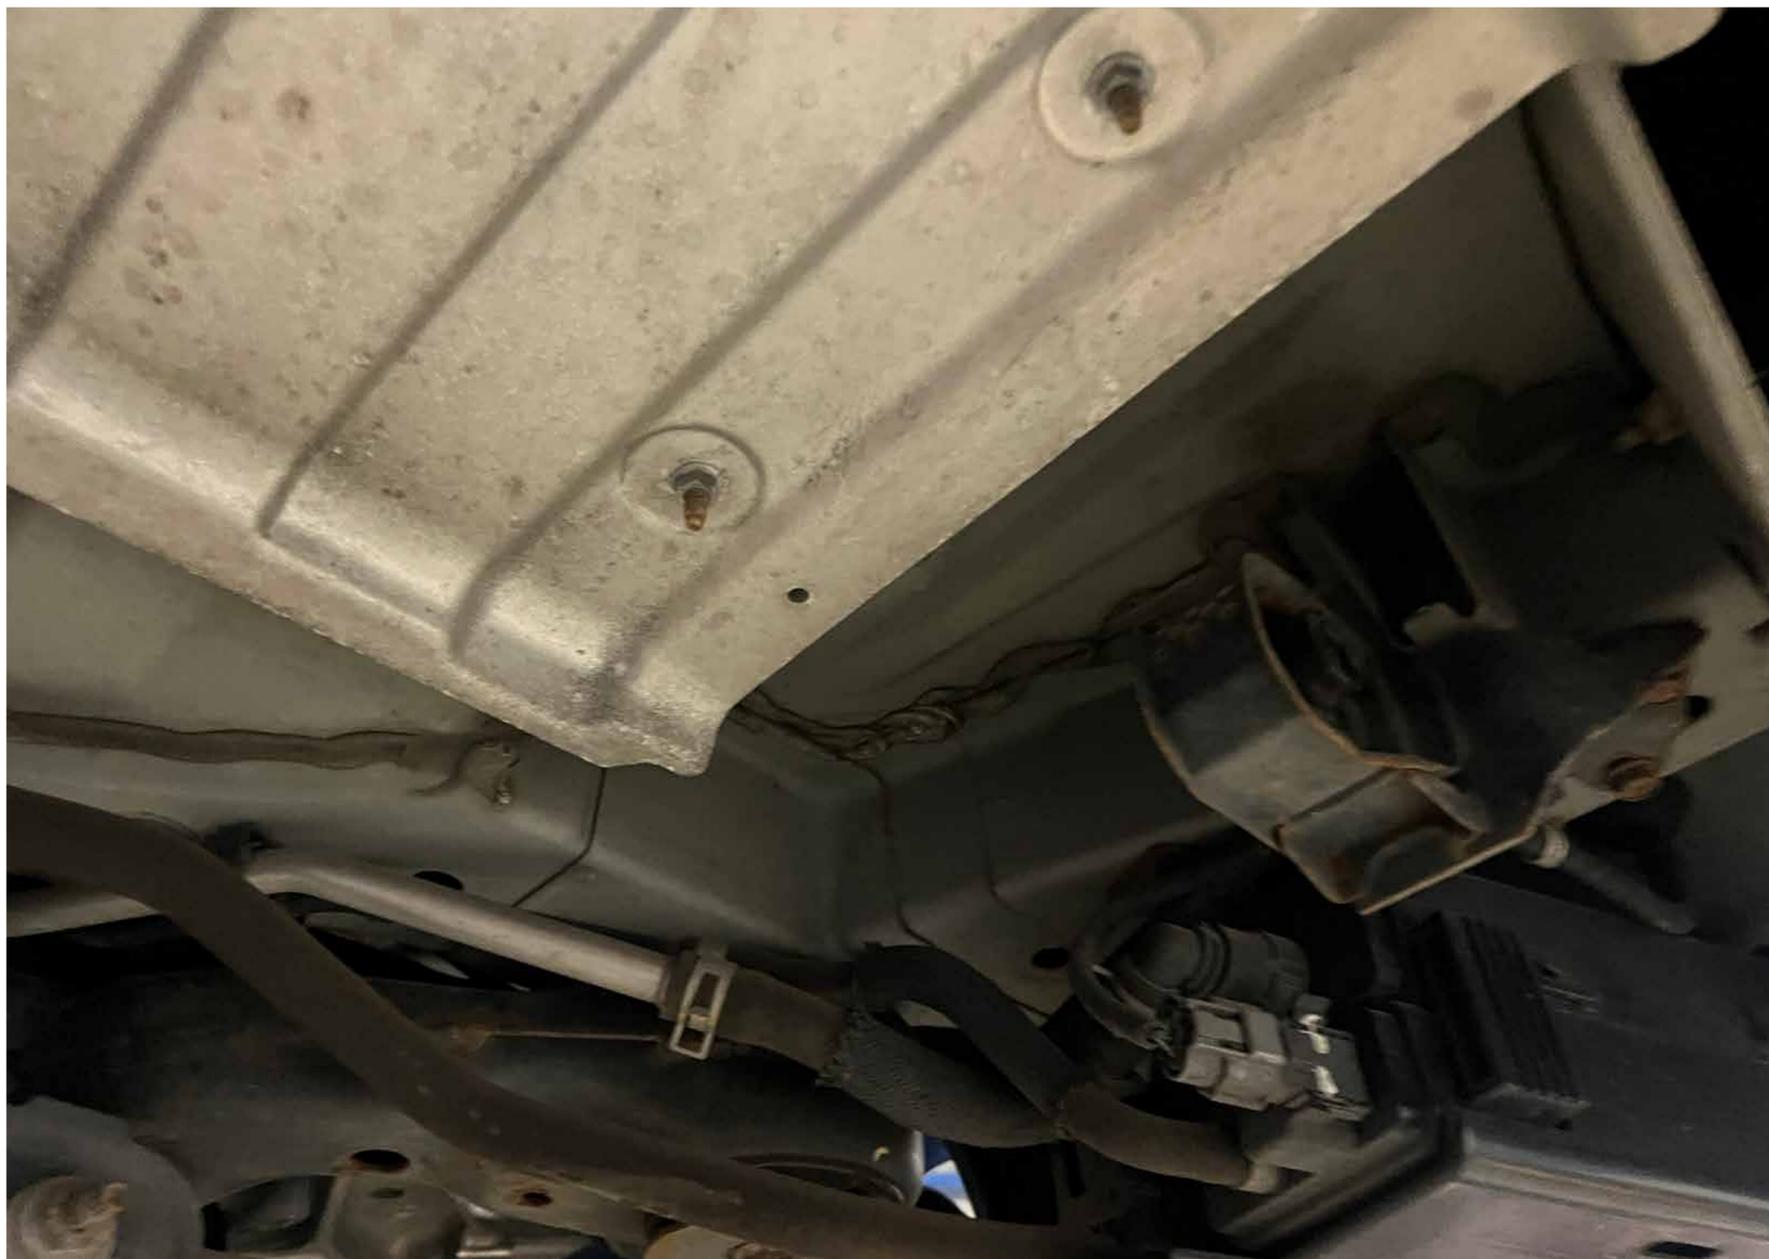


Remove all 4 exhaust hangers and
remove entire exhaust as one
assembly

Step 3.1



Remove midpipe bracket

Step 4

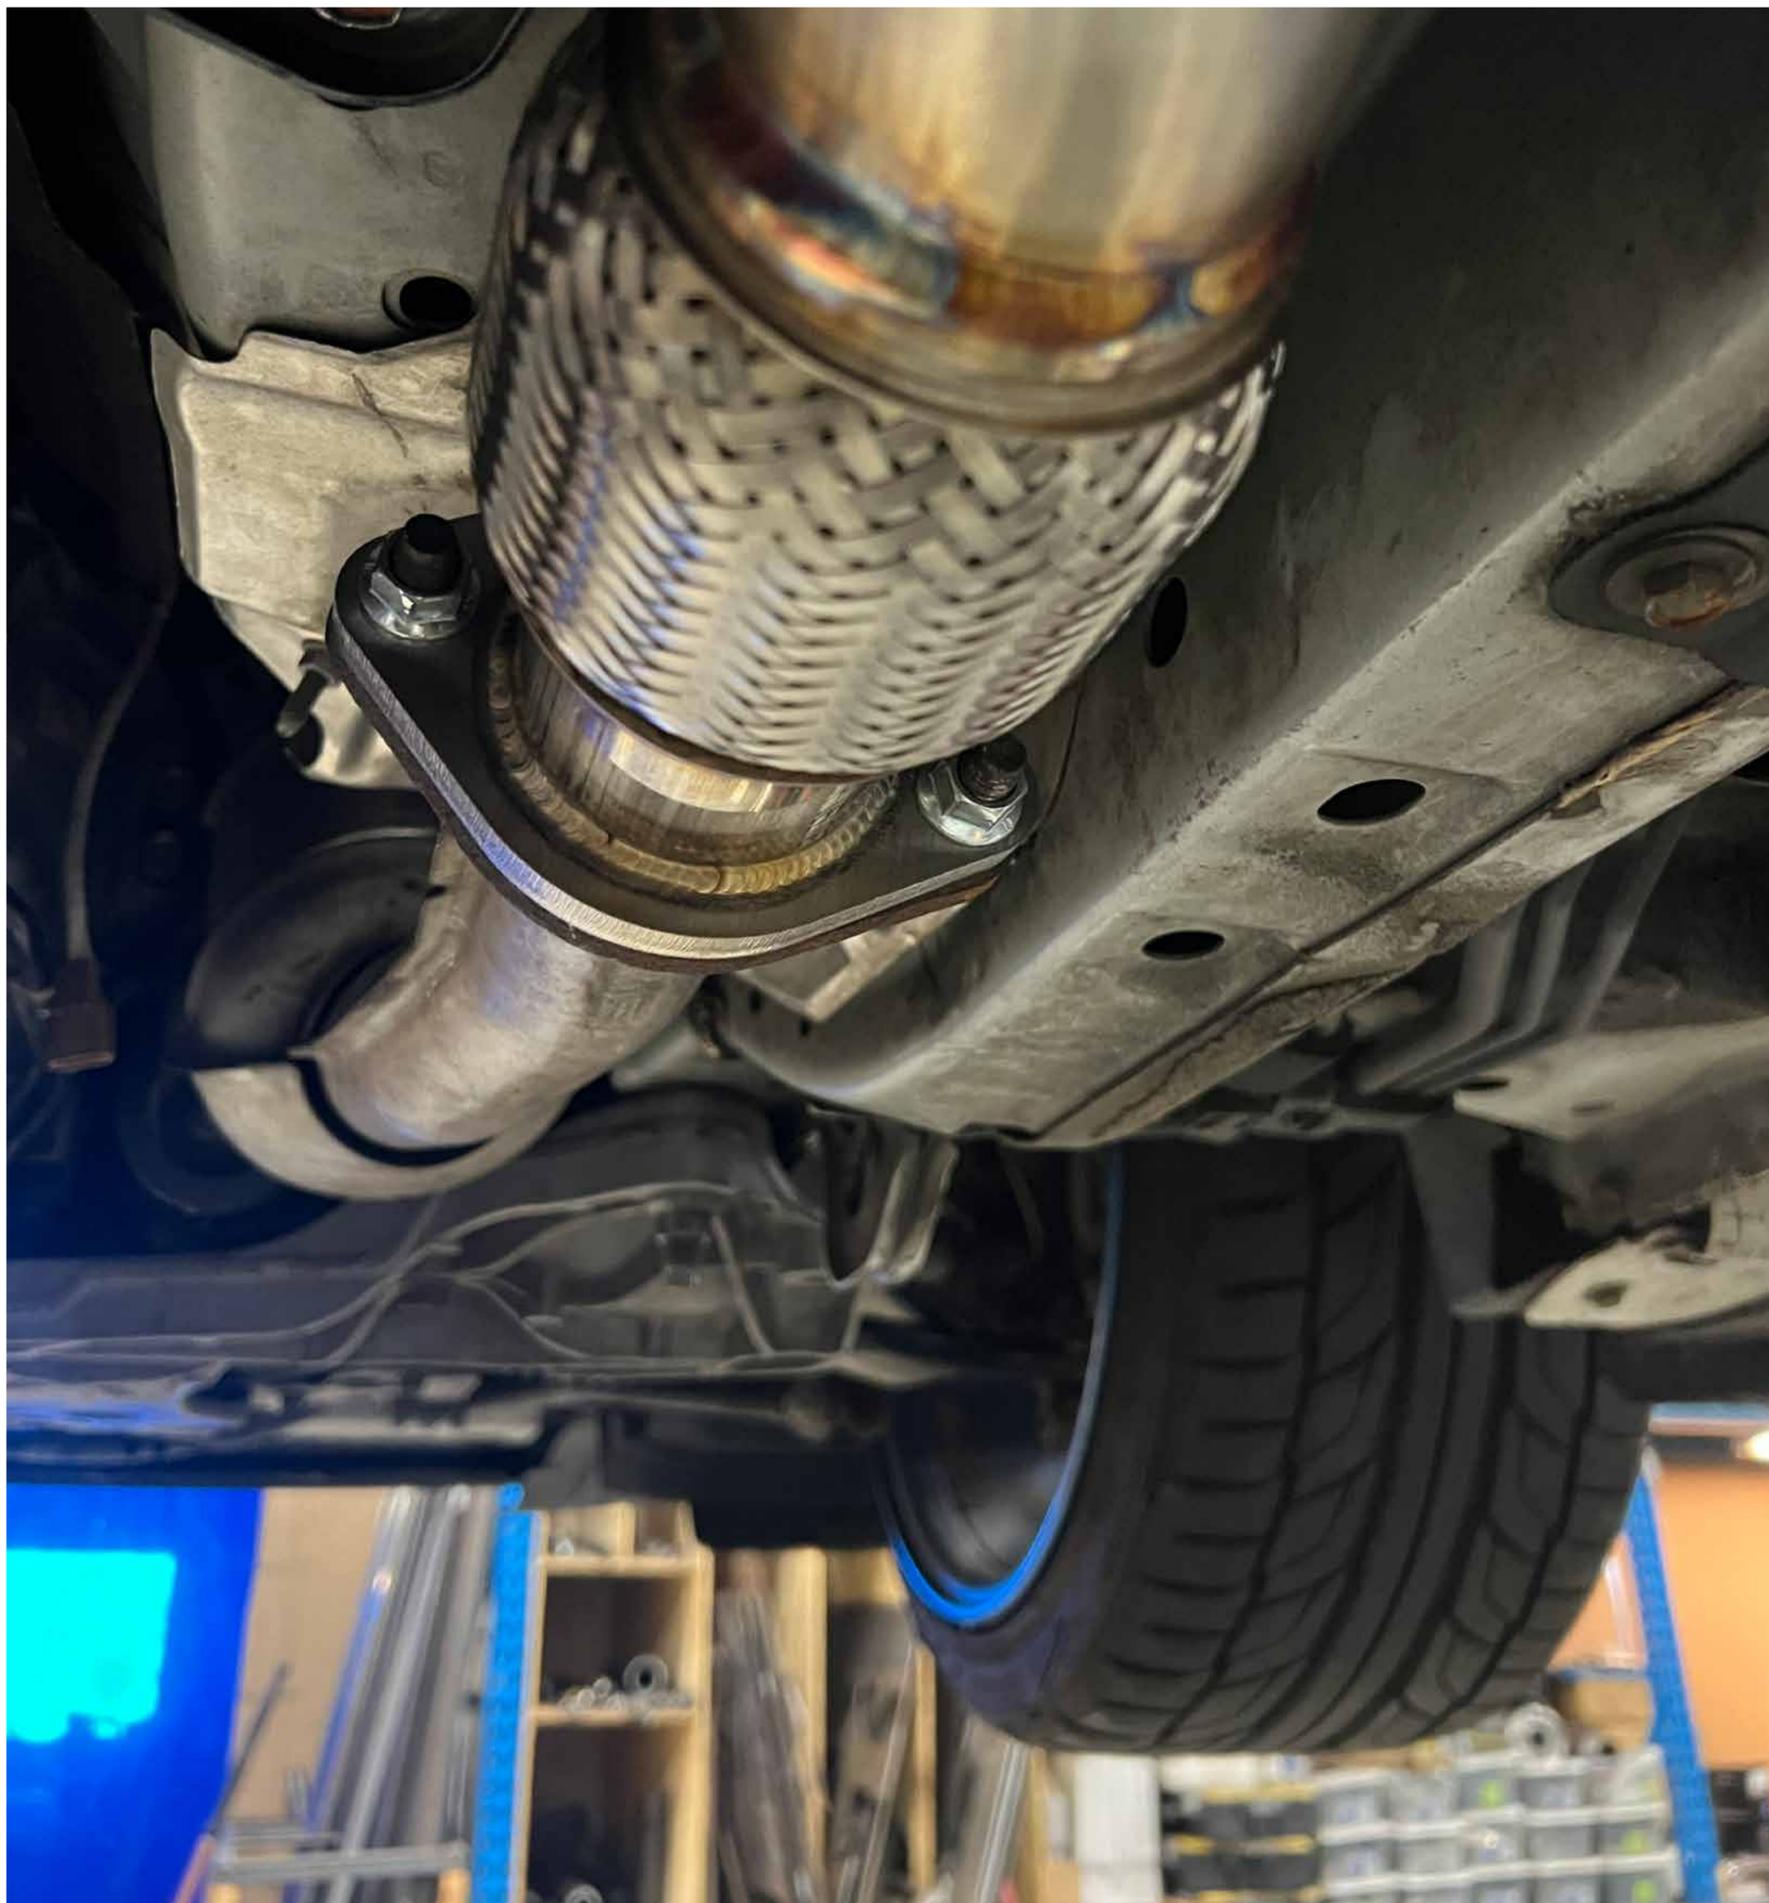

Install MAP Y-Pipe onto the passenger side downpipe and secure it with included hardware. Be sure to use the included downpipe gasket. Reinstall lower support brace.

Step 5



Install driver side Y-Pipe leg onto the drivers side downpipe, install with included gasket and hardware.

Step 6




Secure the driver side Y-Pipe leg with included slip clamp

Step 7



Install rear exhaust section utilizing the oem hangers to hold the exhaust in place

Step 8

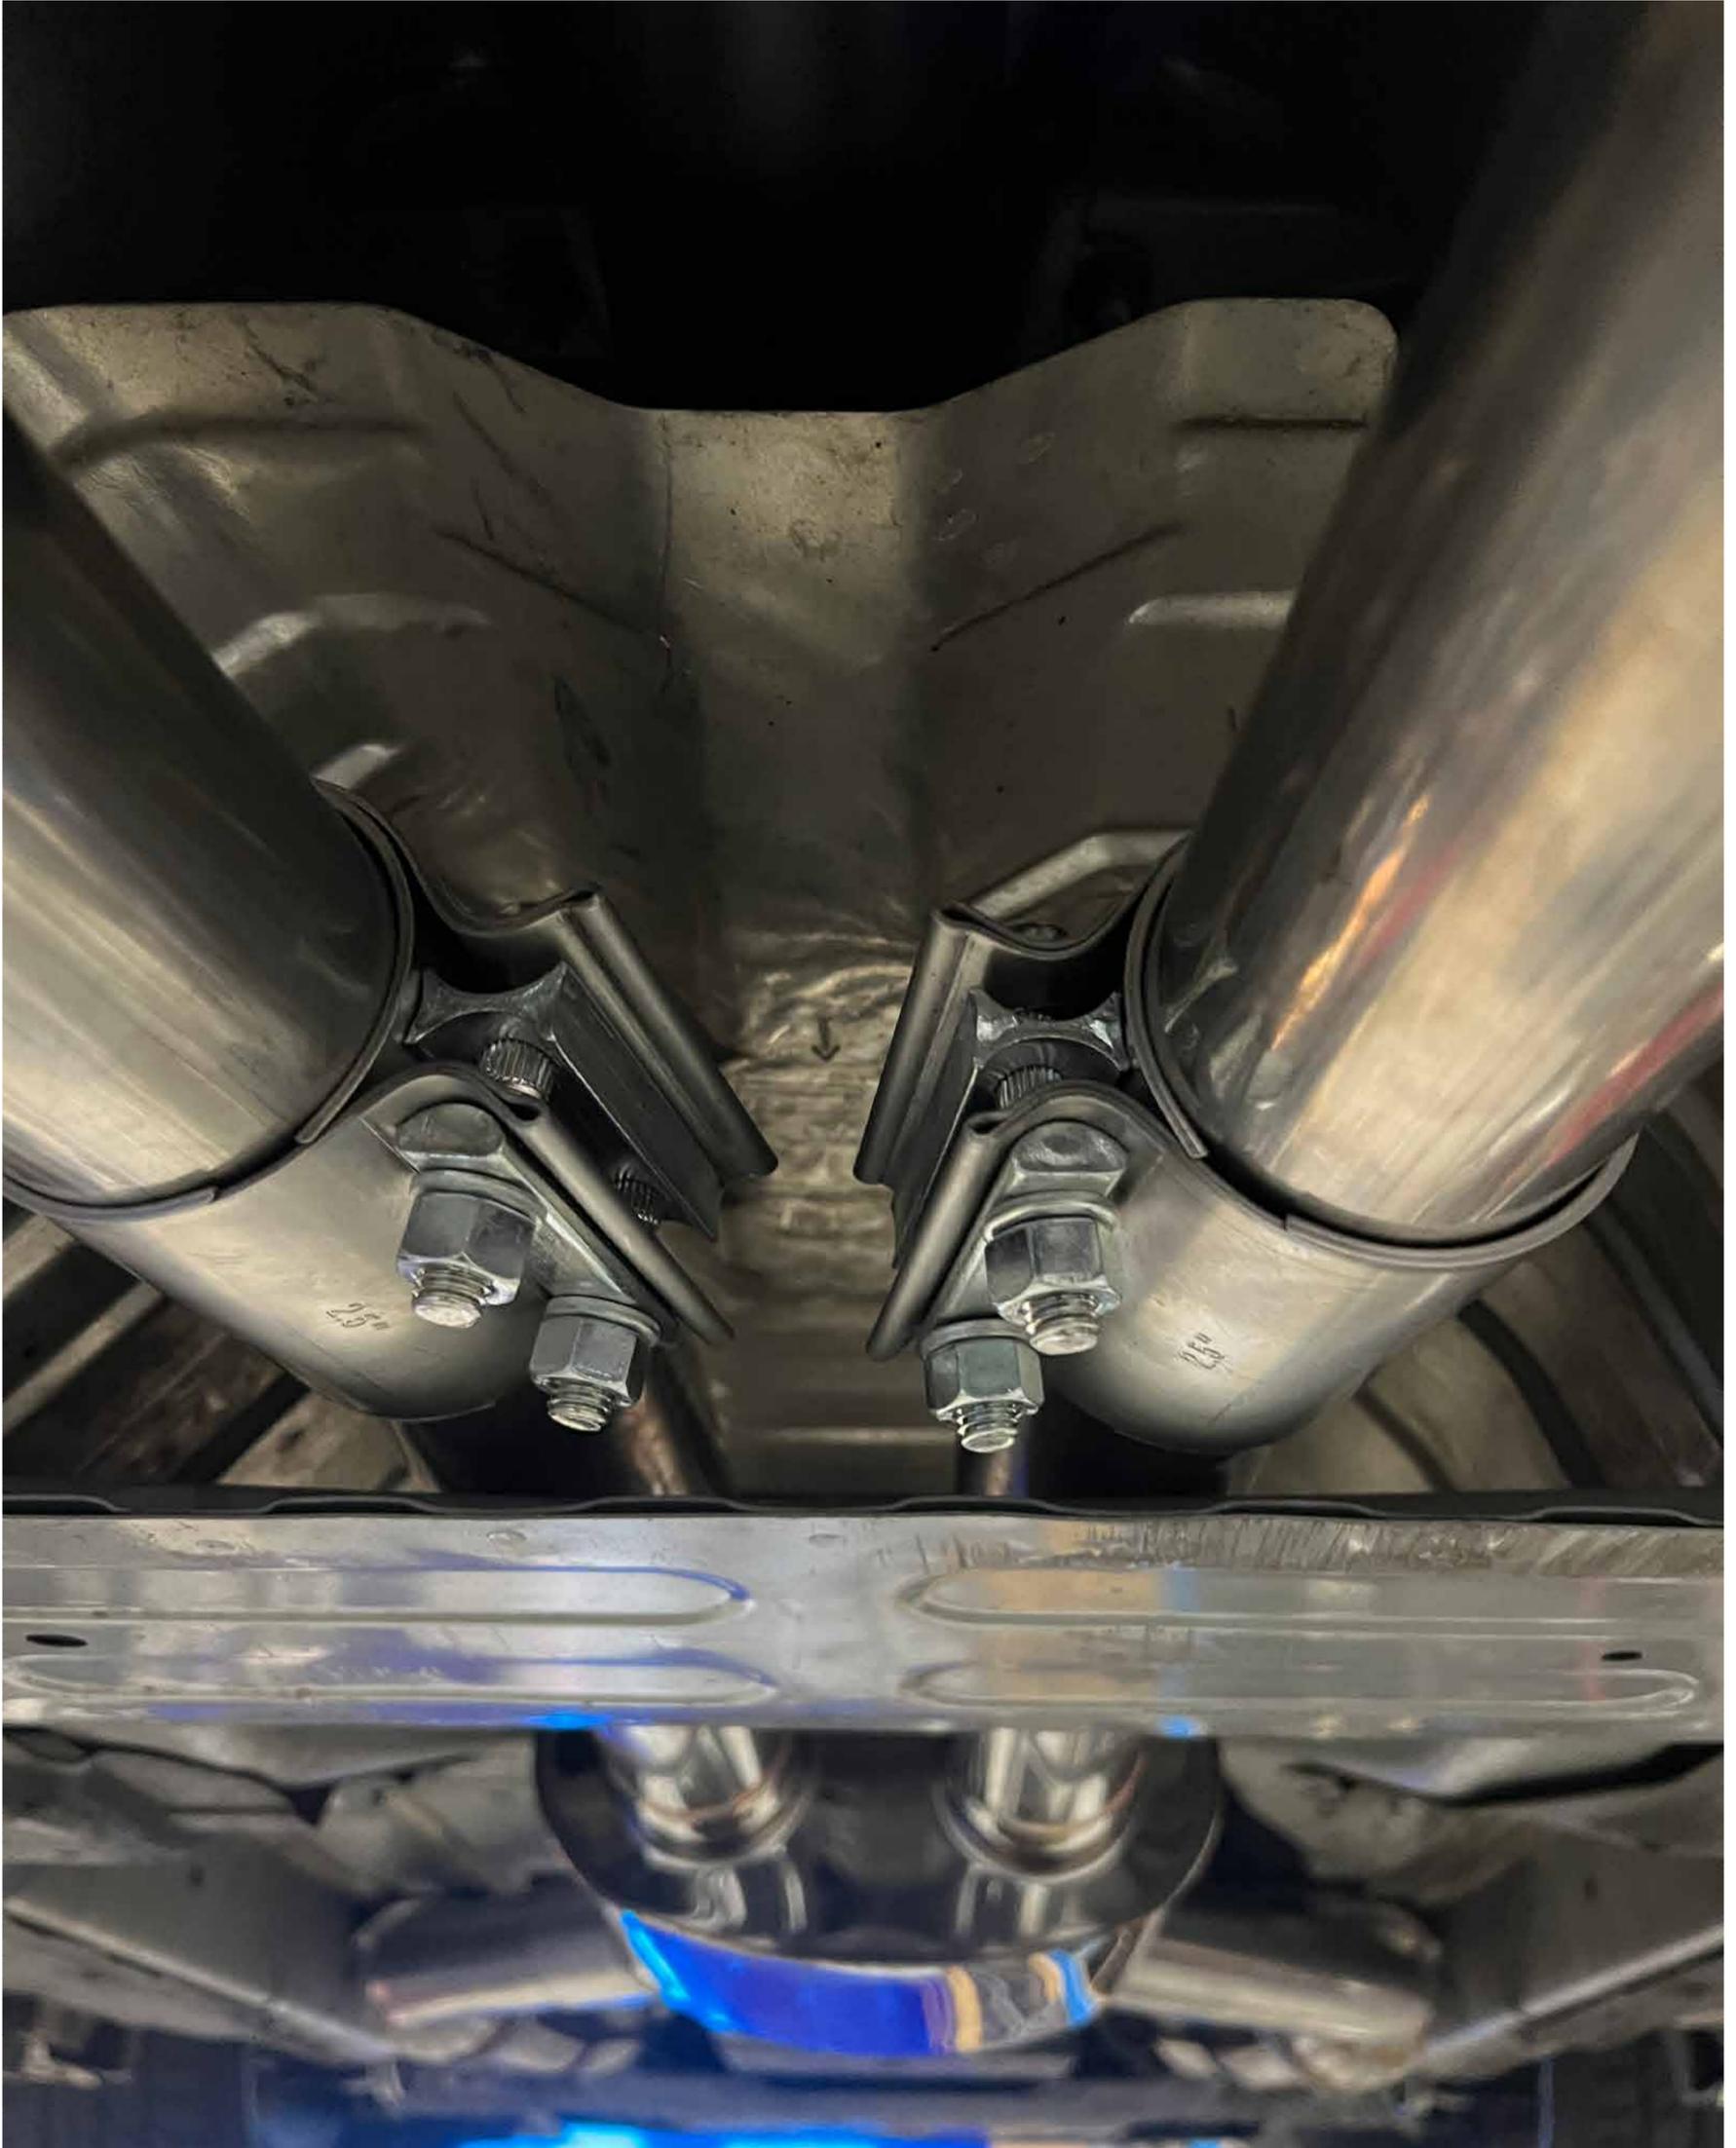

Install slip clamps on both sides of exhaust and tighten

Step 9




Install tips on both sides, be sure to use included anti-seize on clamp threads

We hope you enjoy your purchase!
Reach out to us with any issues or
concerns.



1-888-627-3736

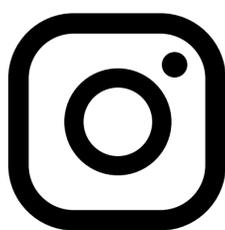

@maperformance



support@maperformance.com



www.facebook.com/modernautomotiveperformance/

MAP Performance