

INSTALLATION GUIDE

11TH GEN HONDA CIVIC INTAKE




TOOLS REQUIRED:

Flat Head Screw Driver
Phillips Head Screw Driver
Plastic Clip Removal Tool
5.5mm Socket
10mm Socket
3/8ths Ratchet
3/8ths Extensions
3mm Allen Wrench

WHAT'S IN THE BOX:

1 x Stainless Intake
1 x Black Silicone Coupler
1x K&N Air Filter
All Required Hardware


1. DISCONNECT MAF SENSOR.

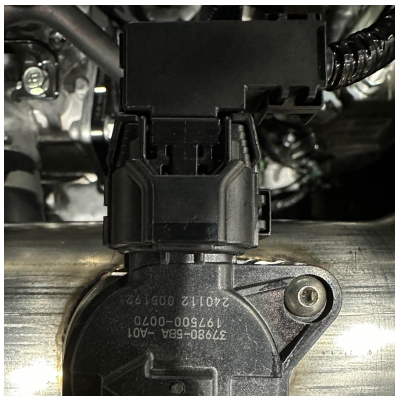


2. LOOSEN INTAKE CLAMP (5.5MM)




3. REMOVE 2 10MM BOLTS AND 1 CLIP SECURING INTAKE DUCT. REMOVE 1 10MM BOLT FROM MOUNTING BRACKET NEAR RADIATOR HOSE.

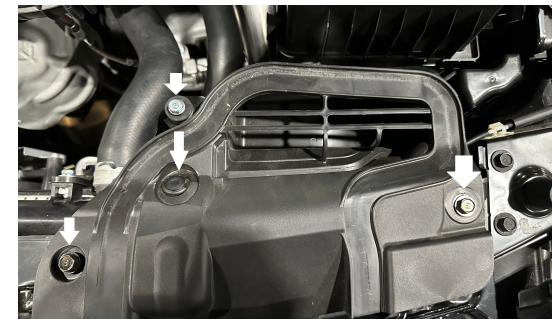

3. REMOVE 1 BOLT (10MM) ON DRIVER'S SIDE OF AIRBOX. YOU WILL NEED A FEW EXTENSIONS TO REACH THIS BOLT.

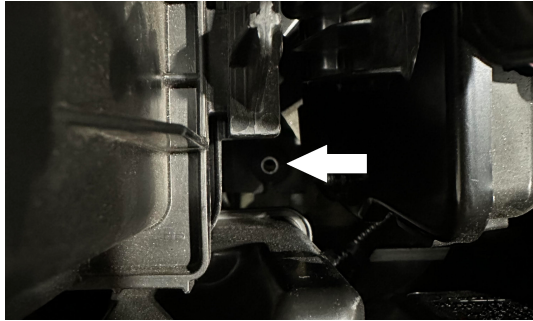


4. FIRMLY TUG ON AIRBOX TO RELEASE RUBBER GROMMET MOUNTING POINT, LOCATED ON BACKSIDE OF AIRBOX.

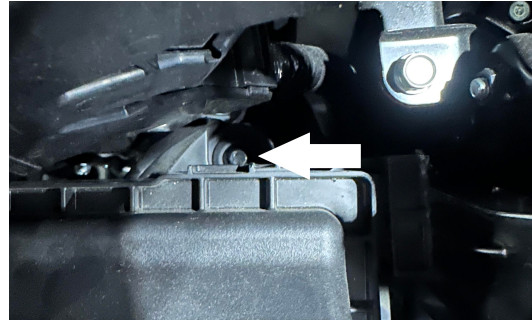

5. REMOVE ENTIRE INTAKE AND AIRBOX. THEN SEPARATE THE AIR DUCT FROM THE REST OF THE AIRBOX SYSTEM AS THIS WILL BE REUSED LATER.



6. LOCATE MAF WIRING HARNESS AND TRACE BACK TO THE MAIN HARNESS. USING A SMALL FLAT HEAD SCREW DRIVER OR CLIP TOOL, OPEN THE PLASTIC ELBOW SURROUNDING THE HARNESS. THERE IS EXCESS WIRING HARNESS LENGTH INSIDE WHICH IS NEEDED TO ALLOW THE MAF HARNESS TO REACH THE SENSOR. WITH BLACK ELECTRICAL TAPE, WRAP UP THE REMAINING EXPOSED WIRING AFTER THE EXCESS HAS BEEN REMOVED FROM THE PLASTIC HARNESS ELBOW.

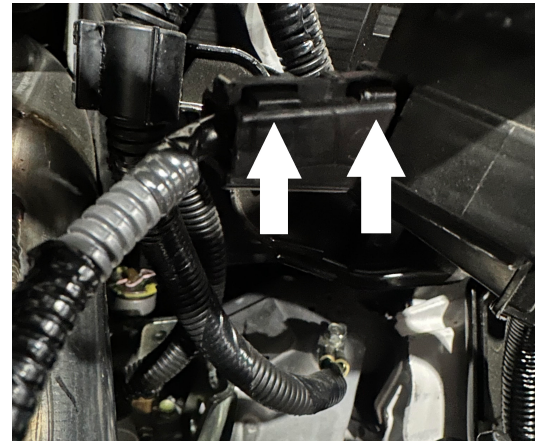


7. REMOVE MAF SENSOR FROM STOCK INTAKE



8. INSTALL MAF SENSOR ONTO MAP INTAKE USING SUPPLIED 3MM ALLEN BOLTS.




9. INSTALL SILICONE COUPLER ONTO TURBO INLET PIPE WITH BOTH HOSE CLAMPS IN PLACE.

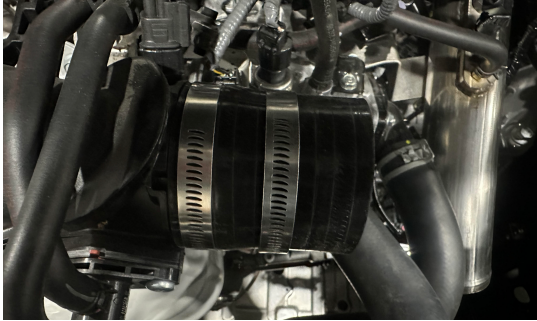


10. INSTALL AIR FILTER ONTO INTAKE PIPE, MAKING SURE TO SEAT IT ON ALL THE WAY.



11. INSTALL INTAKE PIPE INTO THE VEHICLE.

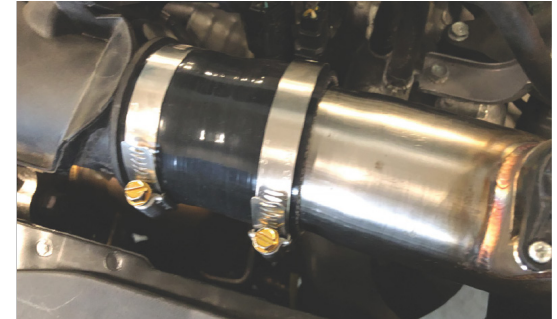


12. INSTALL 10MM BOLT TO CONNECT BRACKET ON INTAKE TO BRACKET ON THE CAR. ADJUST AS NEEDED TO ENSURE AIR FILTER HAS CLEARANCE WITH SURROUNDING COMPONENTS. TIGHTEN HOSE CLAMPS.

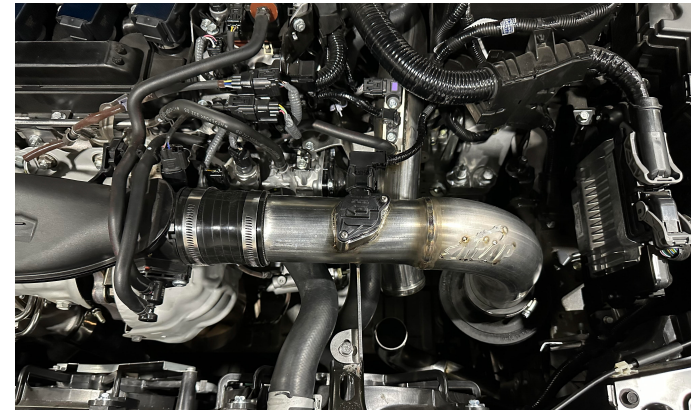


13. CONNECT MAP SENSOR



14. REINSTALL THE FACTORY INTAKE DUCT WITH THE ORIGINAL HARDWARE.

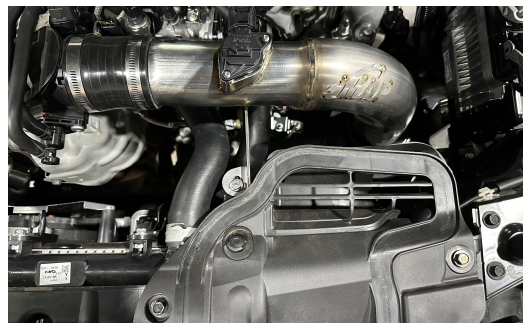

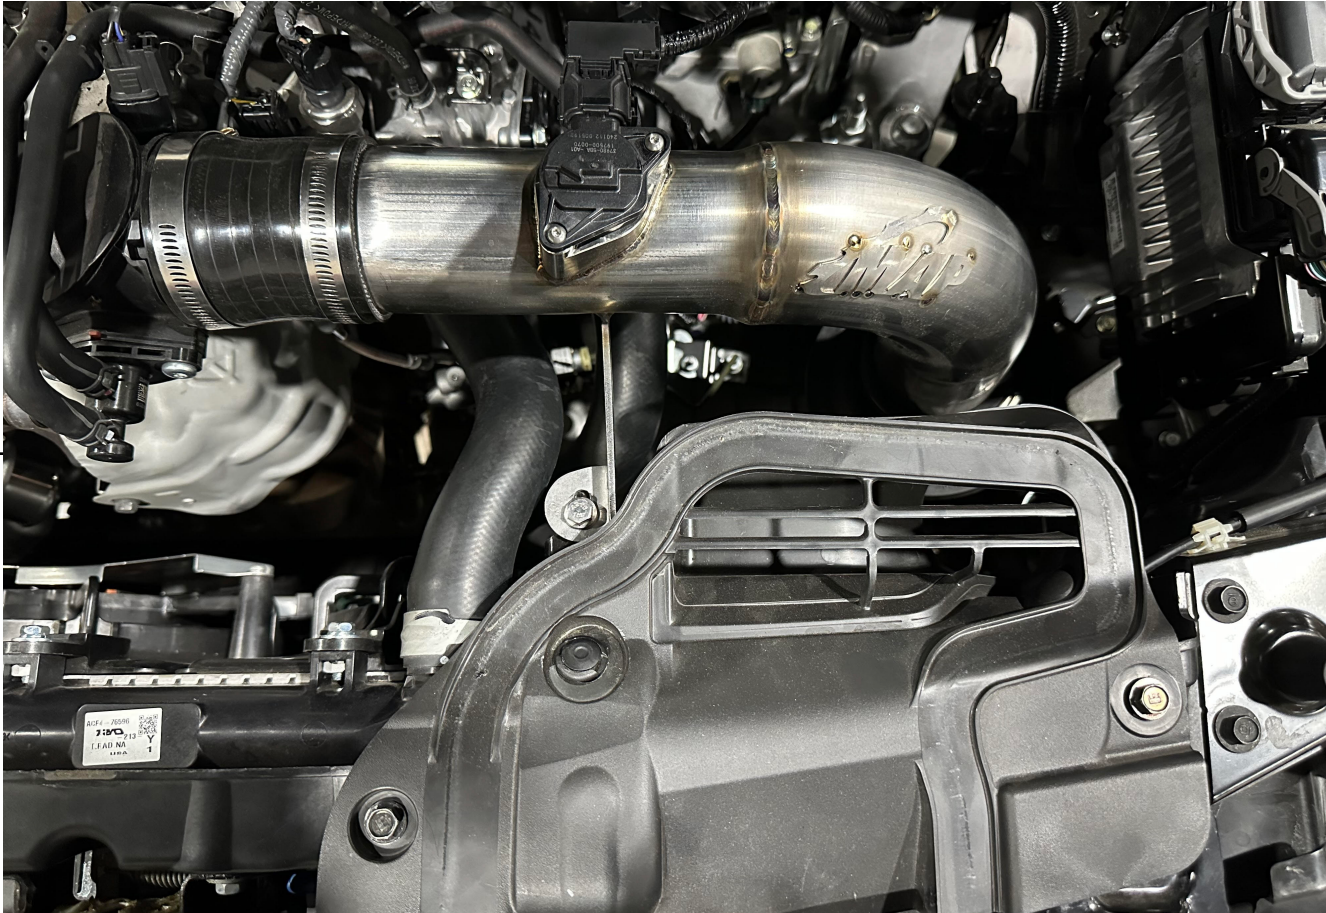

THANK YOU FOR CHOOSING MAPERFORMANCE!

If you have any problems or concerns during installation of this product, please feel free to call or email us:

1-888-MAPERFORMANCE
support@maperformance.com