## INSTALLATION GUIDE




APPLICATION MODEL YR AMP PART #

 Dodge Ram Quad Cab
 1500
 2002 - 2008
 75101-01A

 Dodge Ram Quad Cab
 2500/3500
 2003 - 2009
 75101-01A

 Dodge Ram Mega Cab
 2006 - 2009
 75118-01A

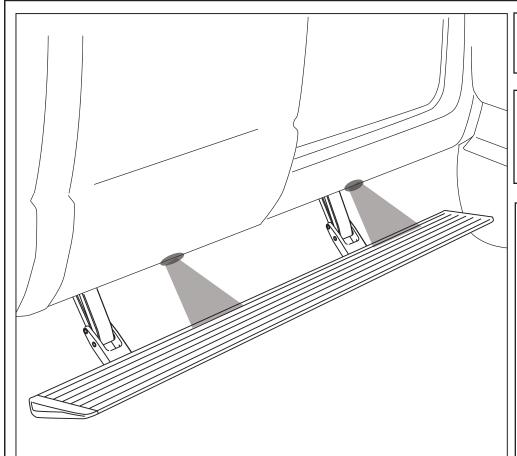

#### **INSTALLATION TIME**

3-5 Hours

Professional installation recommended

#### SKILL LEVEL









4= Experienced

## **TOOLS REQUIRED**

- Safety goggles
- Measuring tape
- ☐ Flat blade screwdriver
- ☐ Phillips head screwdriver
- ☐ Right angle drill
- □ 1/8" drill bit
- ☐ 13 mm socket
- ☐ Ratchet wrench and extension
- Soldering iron
- Wire crimpers
- ☐ Wire stripper / cutter
- ☐ Corrosion inhibiter
- □ 3/16" hex key wrench (allen wrench)
- ☐ 1/8" hex key wrench (allen wrench)
- ☐ 4 mm hex key wrench (allen wrench)
- Pop rivet tool
- ☐ Electrical tape

WARRANTY

5-Year Limited Warranty


AMP RESEARCH TECH SUPPORT 1-888-983-2204 (Press 2) Monday - Friday, 7:00 AM - 5:00 PM PST

Invented, engineered and manufactured exclusively by AMP Research in the USA. May be covered by one OR MORE of the following patents: 6,641,158; 6,830,257; 6,834,875; 6,938,909; 7,055,839; 7,380,807; 7,413,204; 7,398,985; 7,584,975; 7,566,064; 7,487,986; 8,157,277; 8,408,571; 9,302,626; 9,561,751; 10,053,017; CA2463717 ©2012 AMP Research. All rights reserved. Printed in USA.

## **INSTALLATION GUIDE**

Attaching motor to linkage assembly

The motors need to be installed before continuing with the rest of the Power Step install.

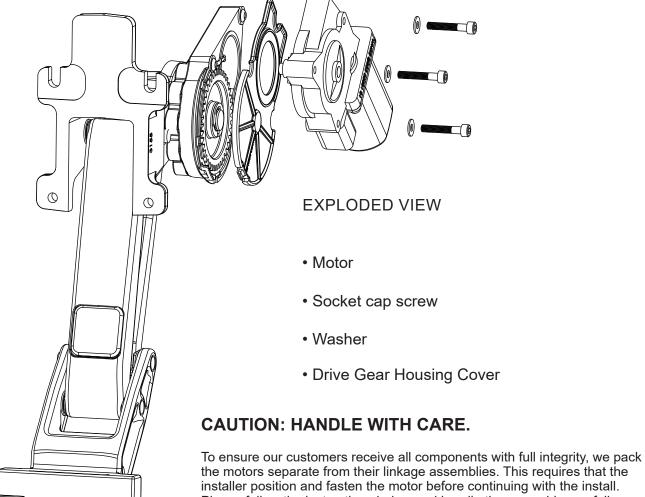



the motors separate from their linkage assemblies. This requires that the installer position and fasten the motor before continuing with the install. Please follow the instructions below and handle the assembly carefully.


CAUTION: Dropping the assembly or any excessive impact MAY cause damage to the motor.


#### Instructions:

- 1. Position the gear cover in place as shown if not already in place.
- 2. Seat motor into position on the three mounting bosses. This may require an adjustment of the gear by moving the swing arms.
- 3. After seating into place, fasten the motor with the three motor mount screws with 4mm Hex Head. Tighten screws to 36 in-lbs (4N-m). Do not over torque.

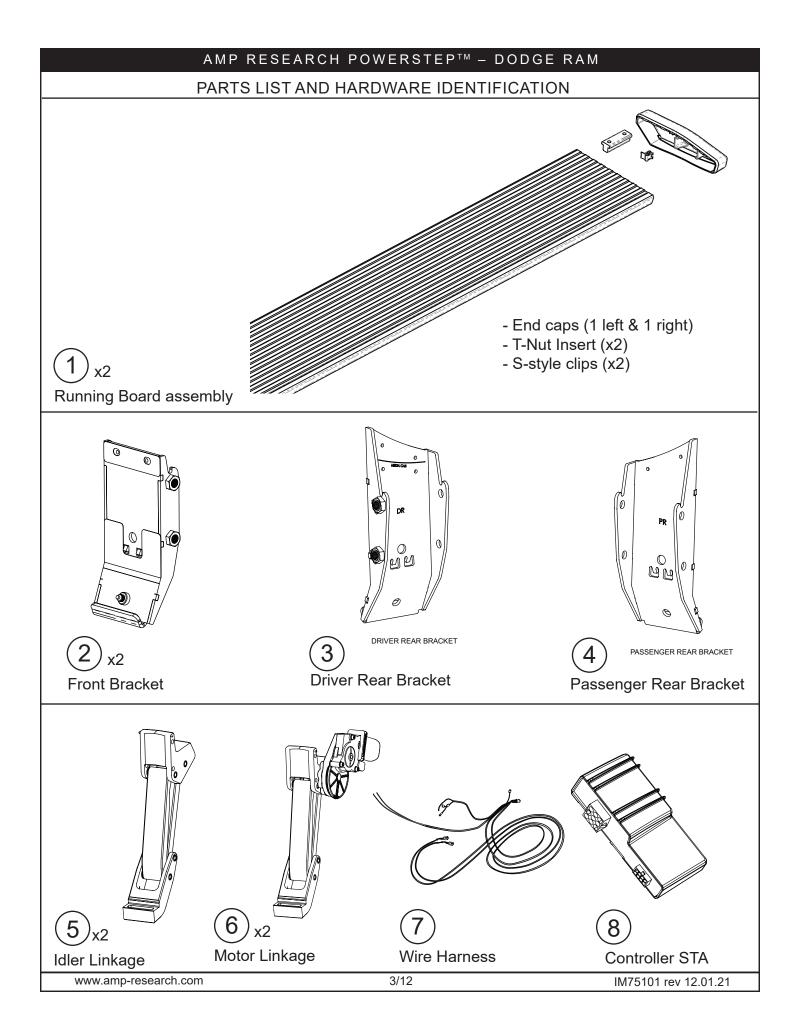


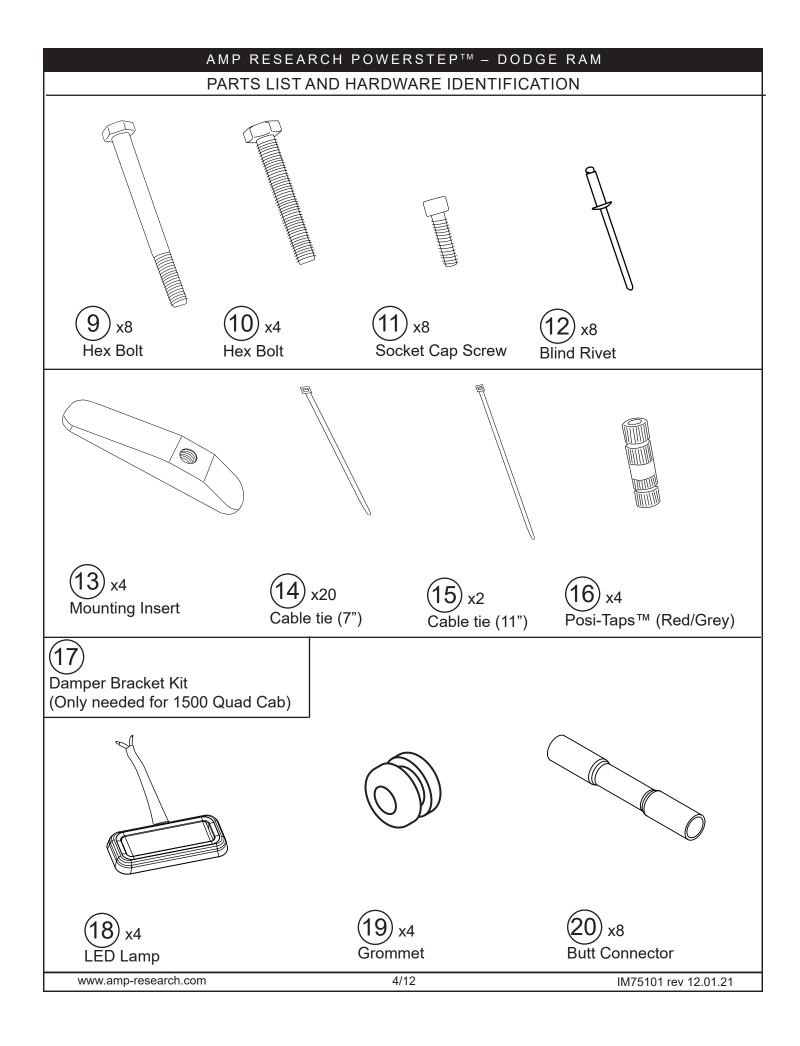

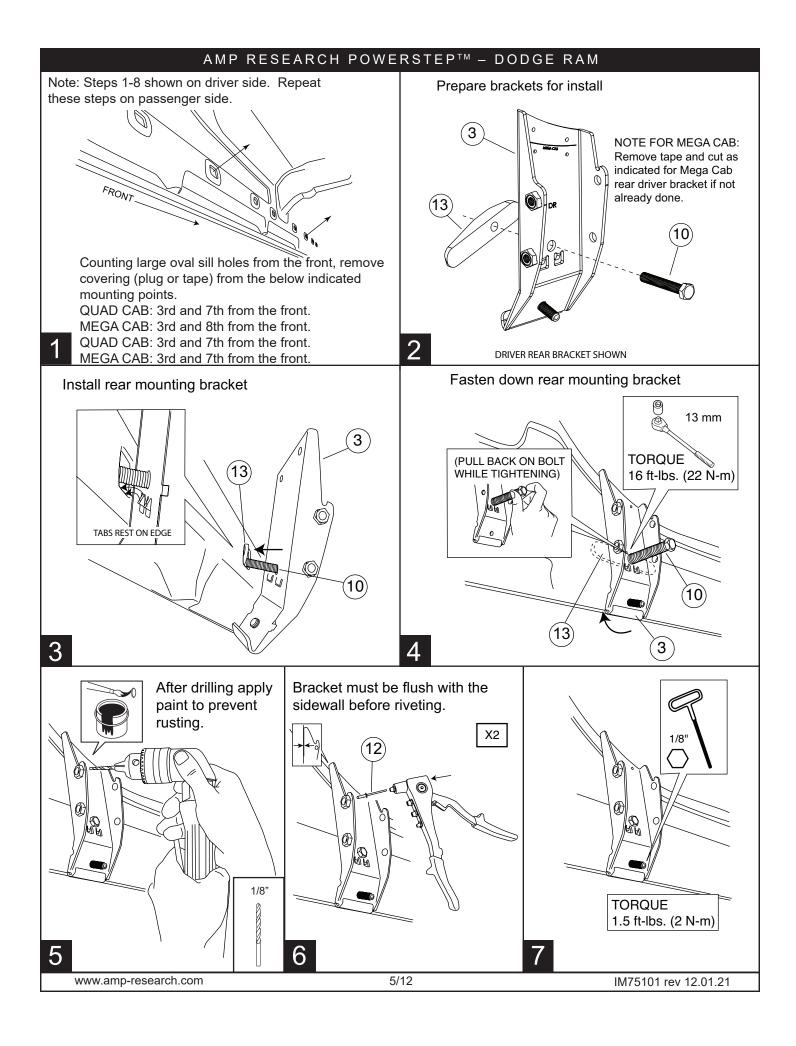

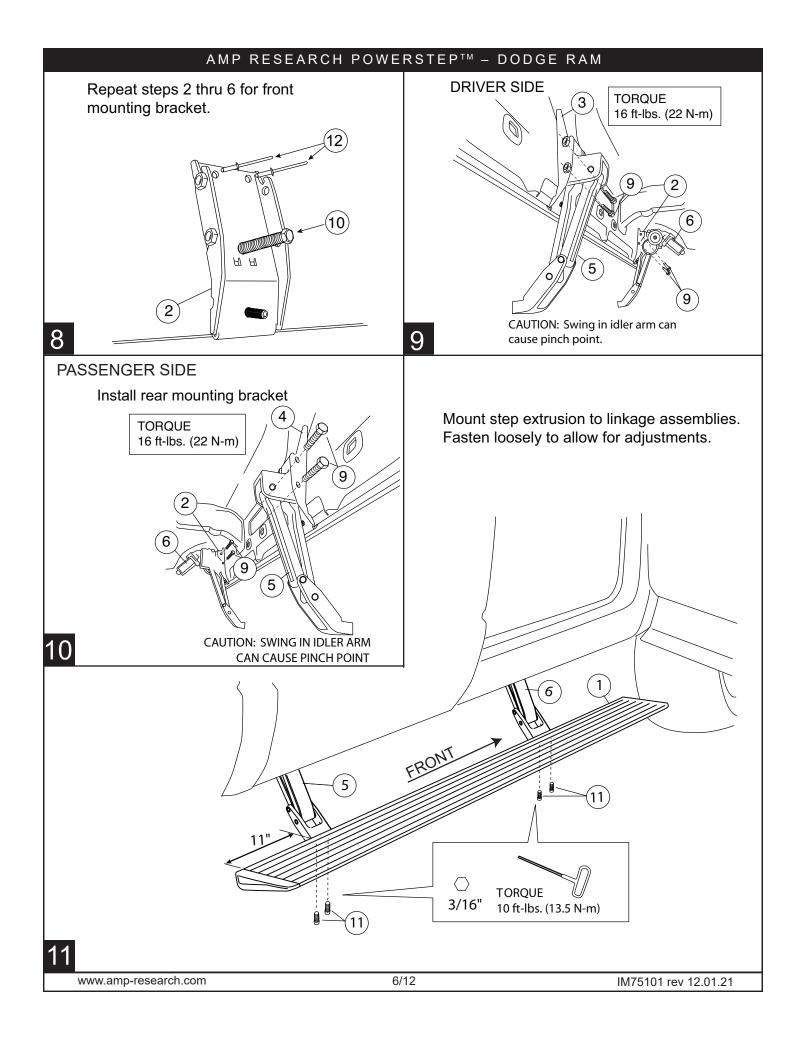


Attach 11" cable ties loosely around harness.

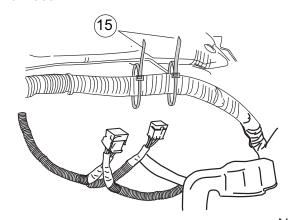

Attach wire harness to the control box.


Slide controller through cable ties. Line up cable ties with grooves in controller and tighten.

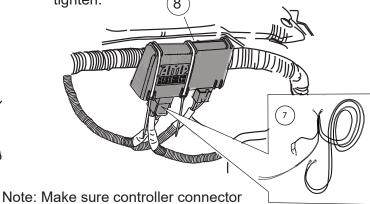


12

locking tabs fully engage.

Remove fuse from Power Step wire harness.

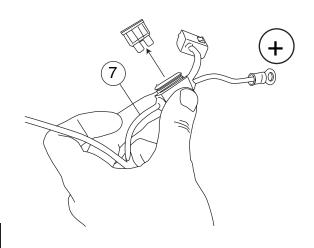


Attach power leads, red lead to positive battery terminal and the black lead to body ground as shown.

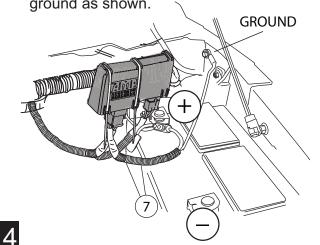


13


Route long leg of wire harness to passenger side across fire wall. Secure with tie wraps.

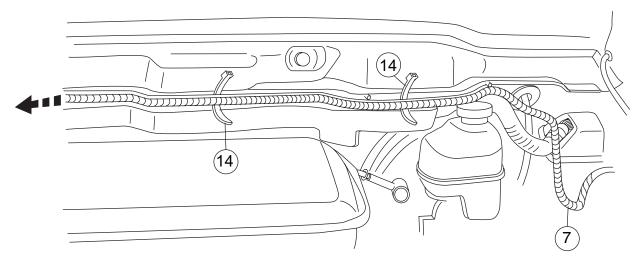


15

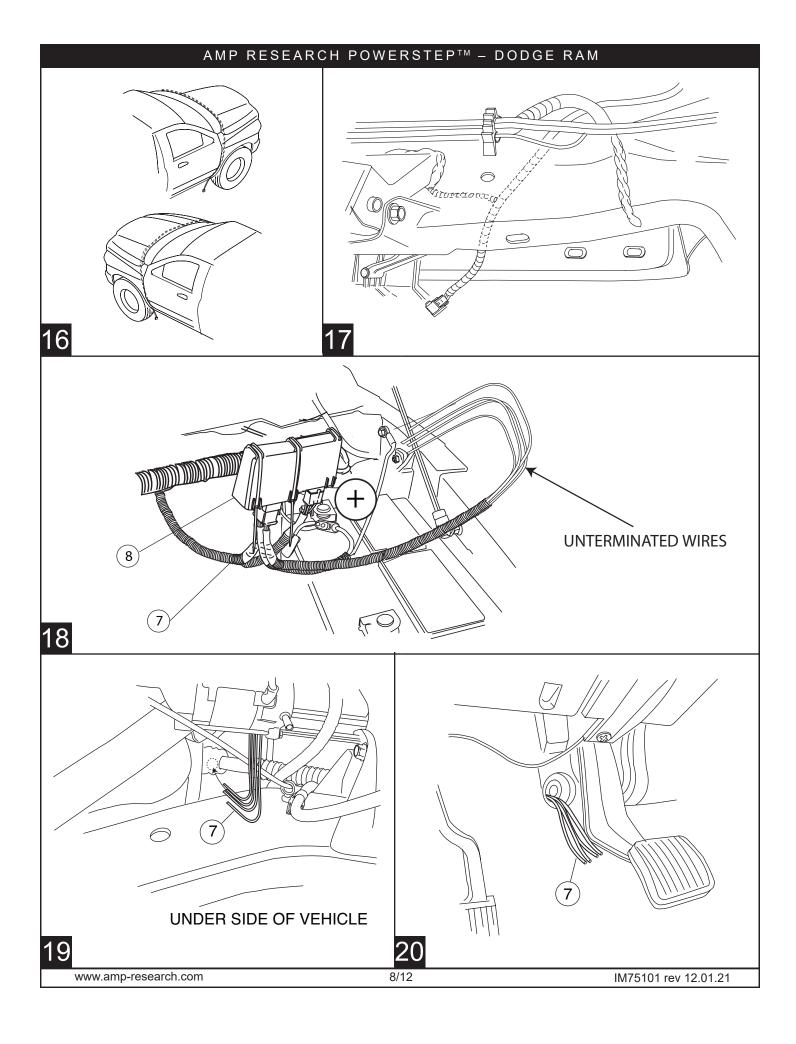

Remove plastic panel beneath steering column.

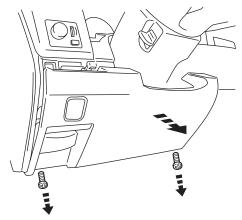


Remove metal panel revealed by step 21. Model years 2002-2005 will not have this panel to remove.

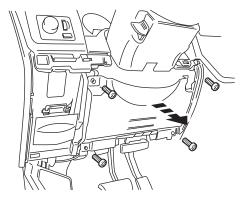


Locate bundle of wires high and to the left of diecast steering column mount.

For 2006-2009 Models:


Note: Bundle of wires leads toward back of fuel guage and is located directly above bundle of wires grounded to left panel.

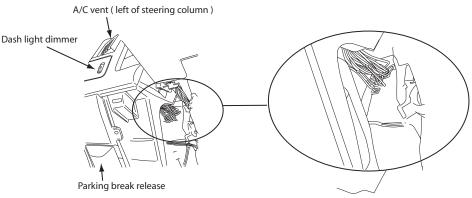

Pull wires through and run them up to the wires found in the previous step.

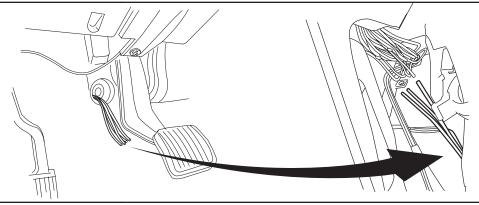


For 2002-2005 Models: Remove the cluster and instrument panel to access the grey plug.

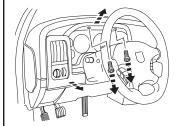









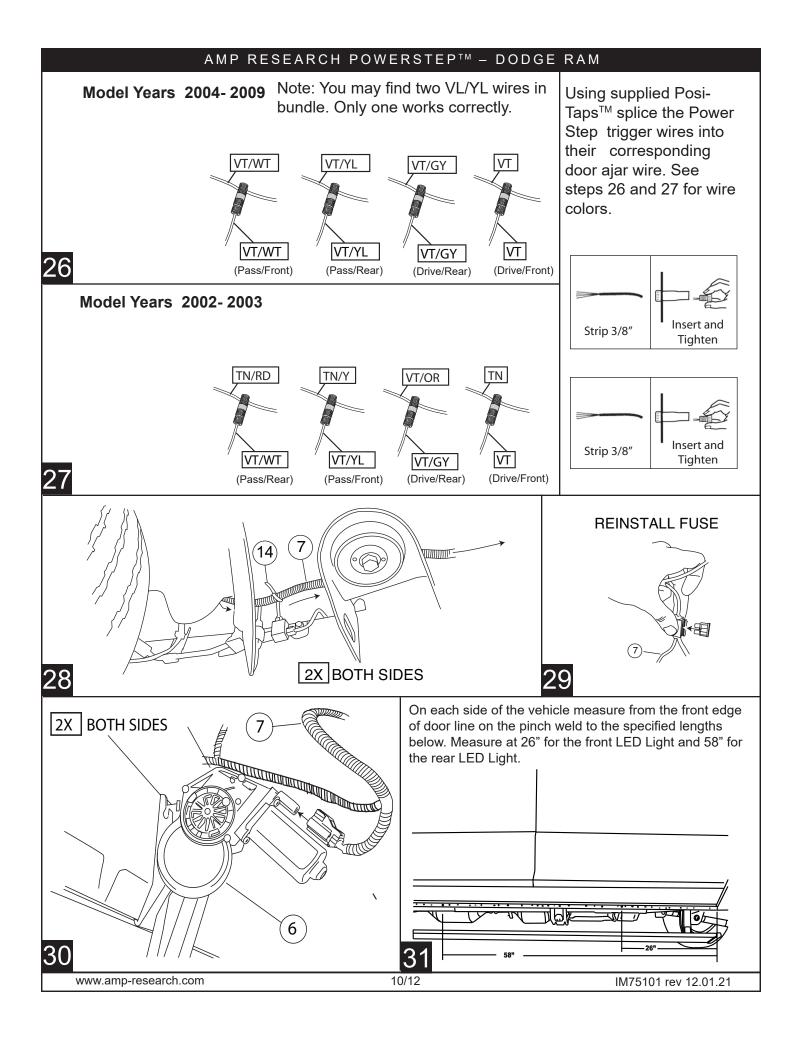


Drill a 9/32" hole through the pinch weld at marked locations. Debur all holes.

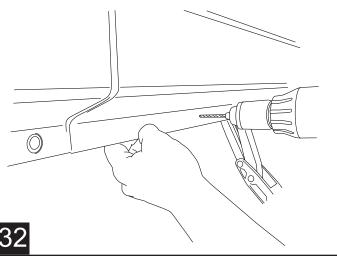


Insert grommet into drilled holes. Insert lamp wires through the grommets.

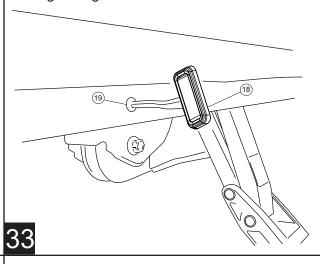


Affix lamp to rocker panel surface. Make sure lamp is affixed to a flat, clean surface.

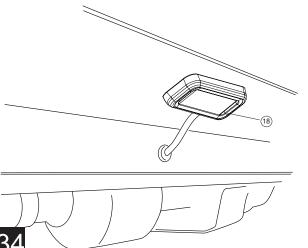

Using supplied butt connectors, connect the lamp wires. Red to Red, Black to Black. Once Crimped use heat gun to shrink tube.

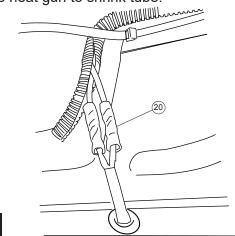

Close and wrap with conduit and electrical tape. Secure all loose wires with cable ties, with lamp wires pulled upward to avoid any wire snagging.

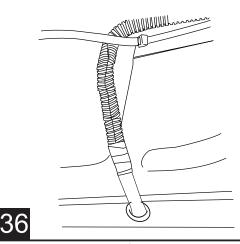

Reinstall fuse.


35



37

www.amp-research.com 11/12 IM75101 rev 12.01.21

Check that all doors activate the Power Step and the LED Lights work when doors open and close. Reinstall any remaining trim panels.

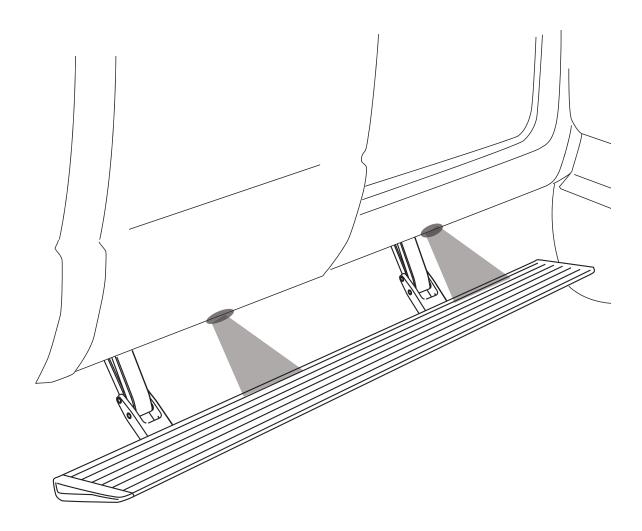

#### **FINAL SYSTEM CHECK**

Check that all doors activate the PowerStep and the LED lights work when doors open and close. **NORMAL OPERATION:** When the doors open, PowerStep automatically deploys from under the vehicle. When the doors are closed, PowerStep will automatically return to the stowed/retracted position. **Note that there is a 2-second delay before the PowerStep returns to the stowed/retracted position.** 

**CORRECT OPERATION OF LIGHTS:** All four lamps will illuminate upon opening any door of vehicle. Lamps will stay on until restowing of both Power Steps or until 5 minutes has expired with the doors open. When the lights timeout after 5 minutes, they can be reillumintated by closing and opening any door of vehicle.



AMERICAN DESIGNED, ENGINEERED AND MANUFACTURED.

Thank you for your recent AMP Research Purchase.

# REGISTER YOUR PRODUCT TODAY FOR FASTER SERVICE & PRODUCT UPDATES

# Please visit:

www.amp-research.com/productregistration or scan the QR Code



# **Product Registration Benefits:**

- Ensure we have your purchase receipt and product info in our system which is required for warranty
- Faster and easier access to customer service and tech support in the unlikely event you need warranty or product support
- Registration helps us keep you up to date on product information and offers

To view other Amp Research products that may be offered for your vehicle.

Please visit: www.amp-research.com

Rev 01.05.21



Congratulations on your purchase of the genuine AMP Research PowerStep! Here's what you should know...

**POWER-DEPLOYABLE RUNNING BOARDS OPERATION:** AMP Research PowerStep running boards automatically move when the doors are opened to assist entering and exiting the vehicle.



Automatic power deploy:

The running boards will extend down and out when the doors are opened.

Automatic power stow:

The running boards will return to the stowed position when the doors are closed. There will be a 2-second delay before the running boards move to the stowed position.

Automatic stop:

If an object is in the way of the moving running board, the running board will automatically stop. To reset, clear any obstruction, then simply open and close the door to resume normal operation.



Manually set in the deployed (OUT) position for access to the roof:

The running boards can be manually set in the deployed position by firmly holding the step down with your foot while at the same time closing the door. To resume normal operation, open and close the door.



Maintenance: In adverse conditions, debris such as mud, dirt, and salt may become trapped in the running board mechanism, possibly leading to unwanted noise. If this occurs, manually set the running boards to the deployed position and flush the front and rear hinge arms with a high-pressure car wash wand. Avoid spraying the motors directly. After washing, apply silicone spray lubricant to the hinge pivot pins. Do not apply silicone, wax or protectants like Armor All® to the running board stepping surface.

Caution! Keep hands away when the running board is in motion.

#### **5-YEAR LIMITED WARRANTY**

AMP RESEARCH warrants this product to be free from defects in material and workmanship for FIVE (5) YEARS FROM DATE OF PURCHASE, provided there has been normal use and proper maintenance. This warranty applies to the original purchaser only. All remedies under this warranty are limited to the repair replacement of the product itself, or the repair or replacement of any component part thereof, found by the factory to be defective within the time period specified. The decision to repair or replace is wholly within the discretion of the manufacturer.

This warranty specifically excludes labor. If you have a warranty claim, first you must call our factory at the number below for instructions. You must retain proof of purchase and submit a copy with any items returned for warranty work. Upon completion of warranty work, if any, we will return the repaired or replaced item or items to you freight prepaid. Damage to our products caused by accidents, fire, vandalism, negligence, misinstallation, misuse, Acts of God, or by defective parts not manufactured by us, is not covered under this warranty.

ANY IMPLIED WARRANTIES OF MERCHANTABILITY AND/OR FITNESS FOR A PARTICULAR PURPOSE CREATED HEREBY ARE LIMITED IN DURATION TO THE SAME DURATION AND SCOPE AS THE EXPRESS WRITTEN WARRANTY. OUR COMPANY SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGE.

Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state.

FOR WARRANTY ISSUES WITH THIS PRODUCT PLEASE CALL AMP RESEARCH TECH SUPPORT 1-888-983-2204

#### **WARNING**

Be sure to read and precisely follow the provided instructions when installing this product. Failure to do so could place the vehicle occupants in a potentially dangerous situation. After installing or reinstalling, re-check to insure that the product is properly installed.



The material that your product is made from can be recycled. Please also consider recycling the packaging that your product came in.

